

ALEKO®

Outdoor Sturdy Child Swing Set with Glider and Saucer Mat




SKU: BSW08

ALEKO®

www.ALEKO.com

SKU# BSW08

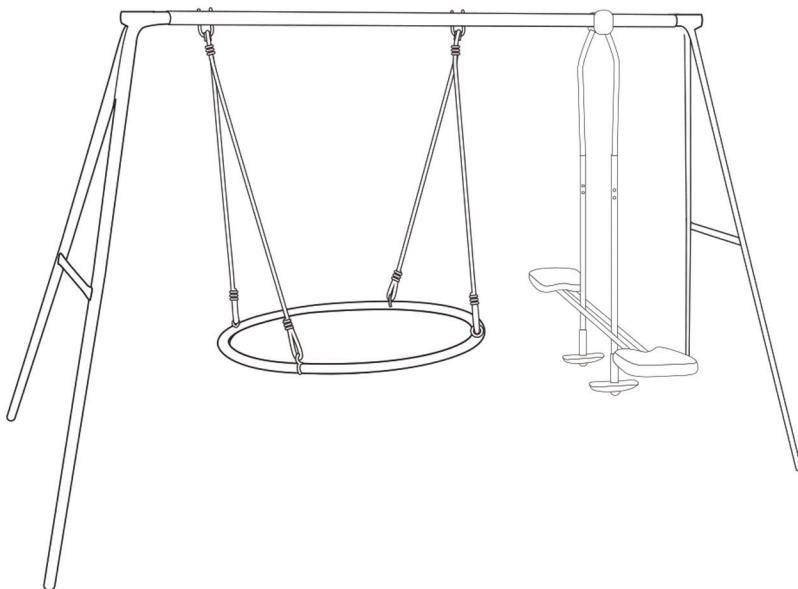

Nest Swing & Glider

FOR CHILDREN AGED 3 TO 10 YEARS

SAFETY GUIDELINES

Warnings

Only for domestic use. This product has not been designed for commercial use in play centres, nurseries etc.

Only suitable for outdoor use.

Not for children with a body weight over 45kg. Only one child per glider seat at any one time.

Total weight of nest swing MUST not exceed 100kg

The total weight on the product at any one time must not exceed 145kg.

Not for children under 3 years due to small component which may cause choking hazard.

This equipment must be assembled and checked by an adult. Two adults may be required to assemble this product.

Adult supervision is required at all times.

Check all nuts, bolts and fittings for tightness and tighten if required.

Check all coverings for bolts and sharp edges and replace when required.

Check swing seats, chain, ropes and other means of attachments if relevant to your product for evidence of deterioration. Replace when required in accordance with the manufacturers instructions if necessary.

Place the product on level surface at least 2 metres from any structure or obstruction such as a fence, garage, house, wall, overhanging branches, laundry line or electrical wires.

The items MUST be anchored firmly into the ground.

DO NOT install the product over concrete, asphalt or any hard surface.

DO NOT orientate the product directly towards the sun.

Leave all fittings finger tight until assembly is complete, for ease of construction. Then tighten firmly.

Children should not wear cycle helmets whilst on this equipment.

Do not allow children to stand on any swing seats, glider seats or slide chutes relevant to your product.

Do not allow the children to jump or climb off any moving equipment.

Do not twist swing ropes or wrap them over the top bar.

Do not allow loose, hooded or baggy clothes to be worn as children can get trapped and may be unable to free themselves.

Do not allow children to climb on parts of this equipment intended for this purpose.

Do not allow children to wander into the play area whilst the equipment is in use.

Glider seats must not exceed an angle of 60 degrees from the ground.

Regularly check the item for wear and damage, removing the item from use when necessary until replacement parts are fitted.

Failure to assemble and maintain this item as per instruction may cause injury to the user.

Please keep the instructions in a safe place for future reference.

The minimum clearance between the swing seat and ground level should be 350mm.

Please contact our customer services department if you have any problems.

 
Inspect all parts of this product every 6 months following purchase. If any parts look worn or you find any problems, please contact us for replacements and do not use product until problem has been corrected.

Do not modify this item

Made in China to European Standards.

Conforms to EN71

SWING PARTS LIST



TOP BAR 1 (X1)




TOP LEG (X4)




BOTTOM LEG (X4)



SIDE STAY BAR (X2)

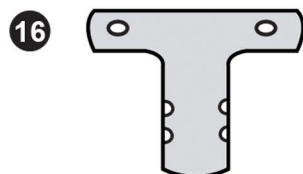

CONNECTOR (X2)

 

GLIDER BRACKET (X1)




GLIDER LEGS (X2)



GLIDER SEAT (X2)



GLIDER FOOTREST (X2)

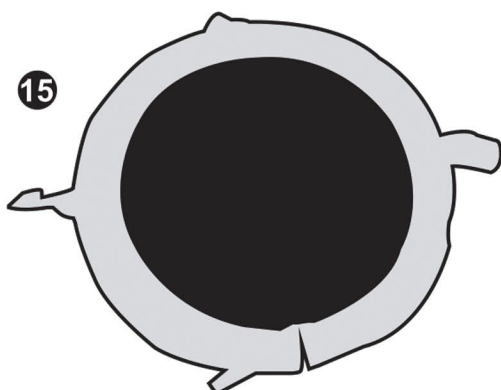

FABRIC NEST SWING (X1)



TOP BAR 2 (X1)




ground peg (x4)



GLIDER HANDLE TUBES (X2)



GLIDER SEAT TUBES (X2)

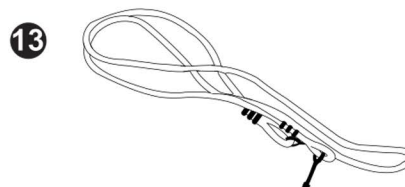

ROPE (X2)



**NEST SWING METAL FRAME
WITH FOAM PADDING (X4)**




SPANNER (X1)




ALLEN KEY (X1)

IMPORTANT: Make sure you read the safety notice on the front page and always supervise children while they are playing on the equipment. Once assembly is completed carefully check equipment. In the unlikely event that you do find any problems, please contact us. Do not allow children to use this product until the problem has been corrected.

Nest Swing Assembly

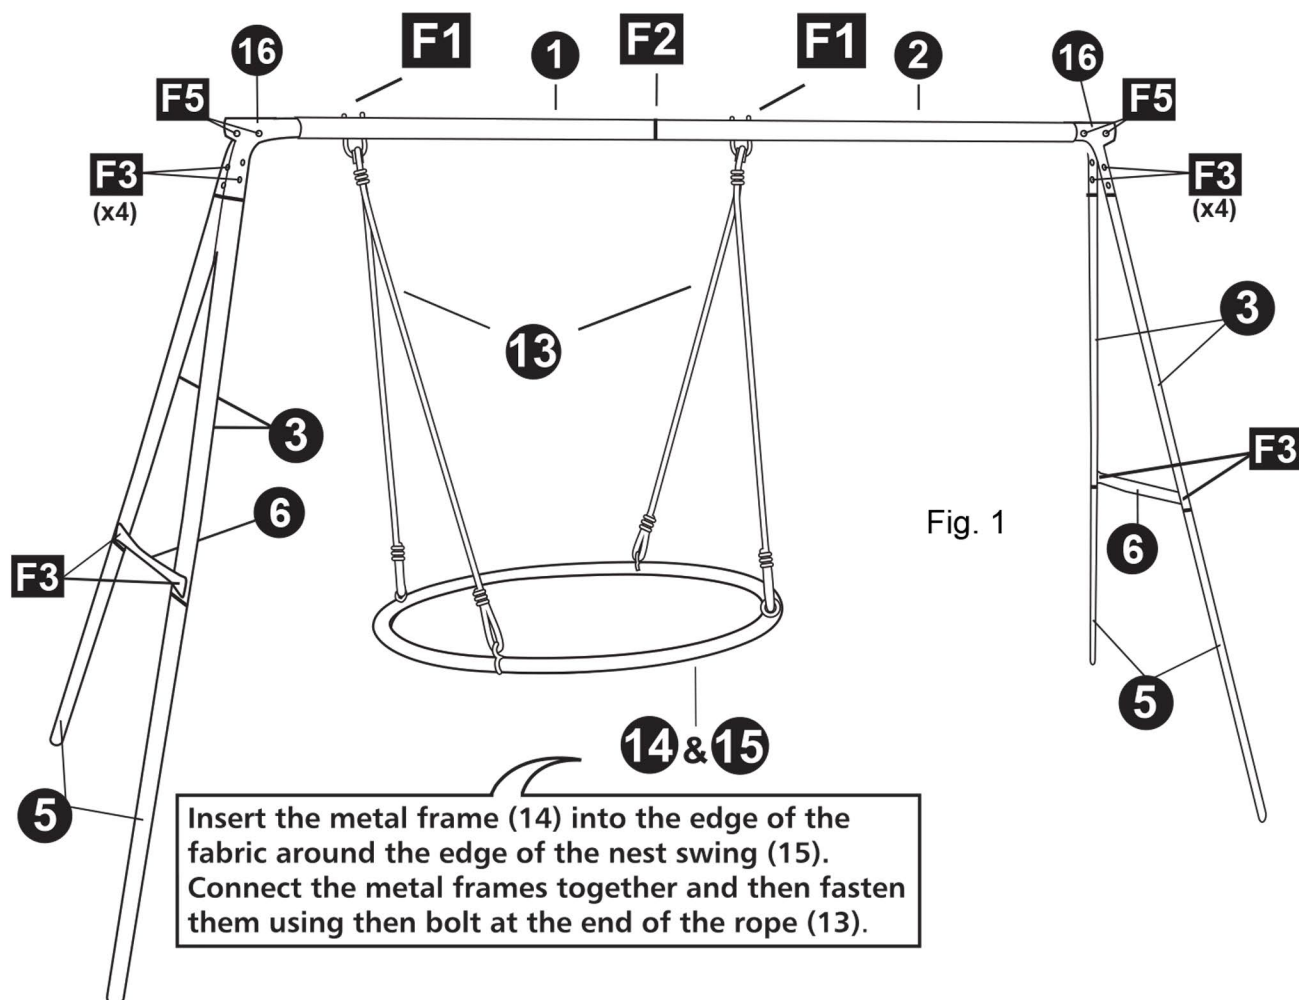

M8 BOLT 59mm (X1)

 

M8 BOLT 65mm (X4)

Step 1. Insert tapered end of Top Bar 1 into the end of Top Bar 2. Make sure there is only 1 set of holes in the end connected to Top Bar 1.


Step 2. Use 1 F2 fastener to connect Top Bar 1 to Top Bar 2

****Always Make sure to place included washers between fastener head or nut and adjoining swing components****

Step 3. Insert 1 Top Leg segment into either side of the T-shaped Connector, secure with 2 F3 fasteners per Leg. Repeat for both Connector and Top Legs assemblies.

Step 4. Insert either end of assembled Top Bar into Connector and Leg Assemblies. Use 2 F5 fasteners on each side to attach.

Attach Swing to Assembled Frame

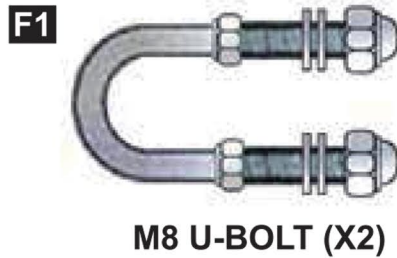

Step 1. Completely disassemble F1 U-Bolts then place u-shaped bolt through the hole in the bearing assembly found at the end of the Swing ropes.

Step 2. Tighten open-ended F1 nut down onto u-shaped bolt, place 1 F1 washer on each end of the bolt and insert into Top Bar through 2 sets of vertical holes. Ensure washer placement between nuts and Top Bar.

Step 3. Place 1 F1 washer on the exposed threaded ends of the F1 bolt, then attach F1 cap nuts and tighten down. Repeat for both sets of Swing ropes.

Attach Bottom Legs and Side Stay Bar




Step 1. Insert 1 Bottom Leg into the open end of each of the 4 Top Legs. Place a F3 fastener into each of the holes at the junction, making sure the exposed threaded end is pointed away from the Nest Swing (Fig. 1).

Step 2. Place Side Stay Bar over the exposed fastener ends so that the flat side of the Stay Bar ends is in contact with the Top/Lower Leg assembly (Fig 1).

Step 3. Tighten F3 nut down onto Side Stay Bar.

Glider Assembly

G1  **M6 BOLT 47mm (x2)**

G2  **M8 BOLT 43mm (x2)**

G8  **THIN PLASTIC SPACER (x4)**

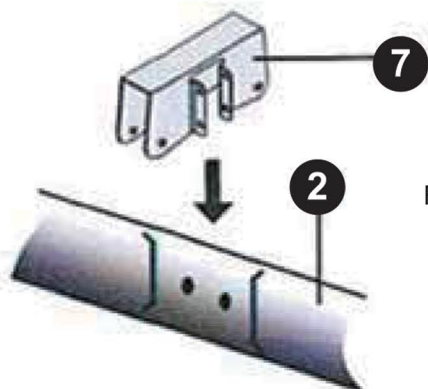


Fig. 2

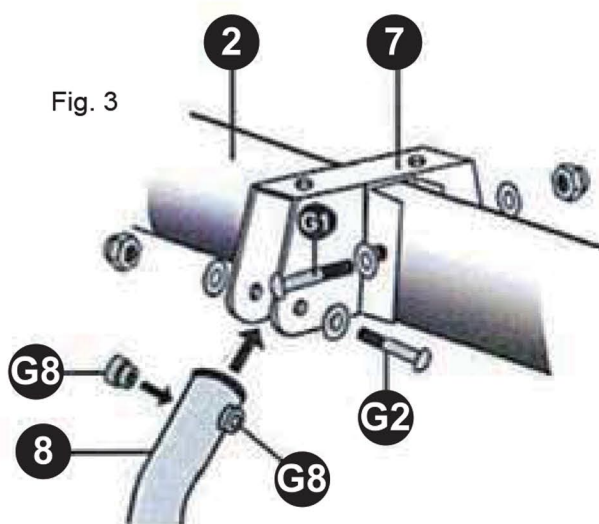


Fig. 3


Step 1. Slide Glider bracket over Top Bar on Glider side and align to the 2 horizontal holes (Fig. 2).

Step 2. Attach Glider Bracket to Top Bar using 2 G1 fasteners.


Step 3. Insert 1 G8 Plastic Spacer into the holes on either side of the Glider Handle Tubes.

Step 4. Attach curved upper bar portion of Glider Handle Tubes to holes on bottom corner of the Glider Bracket using 1 G2 fastener for each side (Fig. 3).

G6  **M6 BOLT 32mm (x4)**

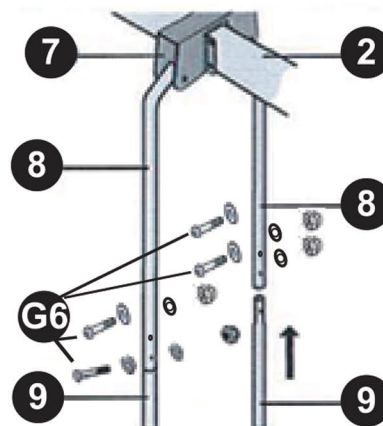

Step 5. Insert tapered segment of Glider Legs into exposed open side of Glider Handle Tubes, use 2 G6 fasteners on either side to attach.

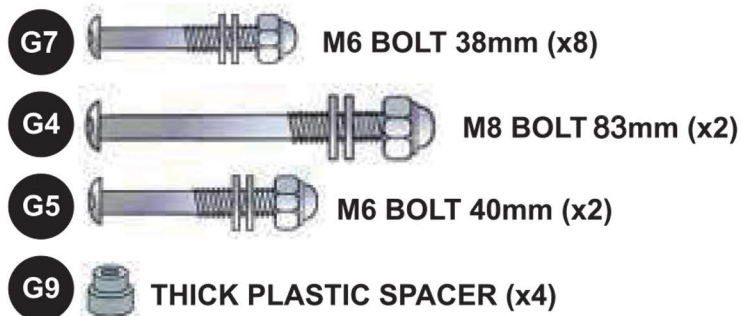

Step 6. Insert 1 G9 Plastic Spacer into either side of the holes near the center of the Glider Legs (Fig. 4).

Step 7. Attach the Glider Seat Tubes to either side of the Glider Legs by placing a G4 fastener through the same holes that the G9 Spacers have been installed in.

Step 8. Fasten Glider Seat to Glider Seat Tubes using 4 G7 Fasteners in both sets of holes on both Seat Tubes. Repeat to assemble both Seats.

Step 9. Use G5 fasteners to secure Glider Footrest to lower holes in Glider Legs

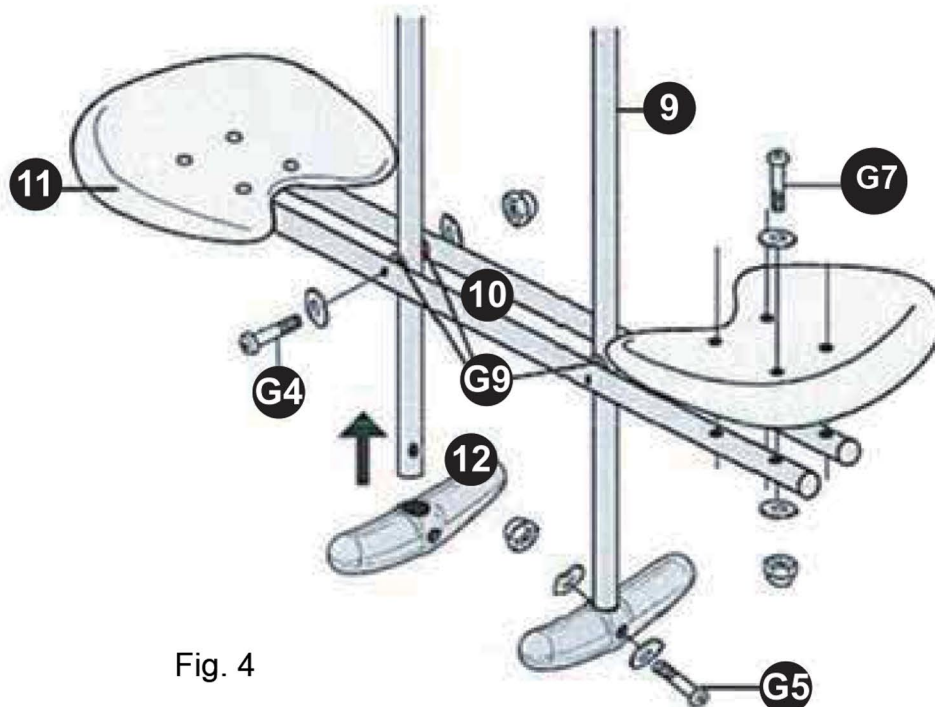


Fig. 4

• Assemble seats (11) and attach to seat tubes (10) before tightening bolts (G4)

Anchoring Swing Set to the Ground

F6



M6 BOLT 60mm (X4)

Step 1. Attach Ground Pegs to all 4 Nest Swing Bottom Legs using F6 fasteners.

Step 2. Place assembled Swing Set in desired location and dig a footing hole, measuring 12" (30cm) Long x 12" (30cm) Wide x 20" (50cm) Deep, at the base of each support leg.

Step 3. Prepare and pour concrete into the footing holes following concrete manufacturer's instructions. Fully fill footing holes to be level with ground surface.

Step 4. While Concrete is still wet, angle Ground Pegs toward opposing legs at roughly 120-degrees, then insert Ground Pegs into concrete footing, making sure Swing Set Bottom Legs do not sink below ground surface (utilize concrete set time information). Use temporary support made from wood or other material if necessary to prevent sinking (Fig. 5).

Swing Set will be ready for use once concrete is fully set and cured (consult concrete manufacturer's instructions).




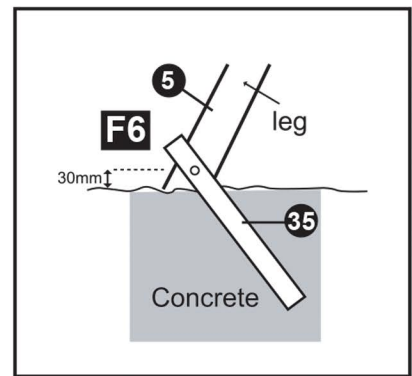


Fig. 5

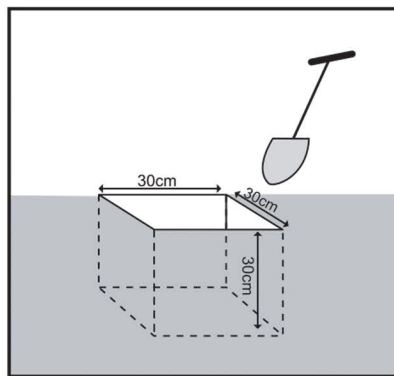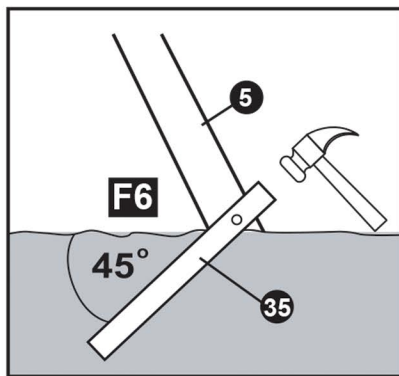

IMPORTANT: For safety reasons this product **MUST** be anchored and concreted into the ground. If you are uncertain about this procedure please phone the helpline number below.

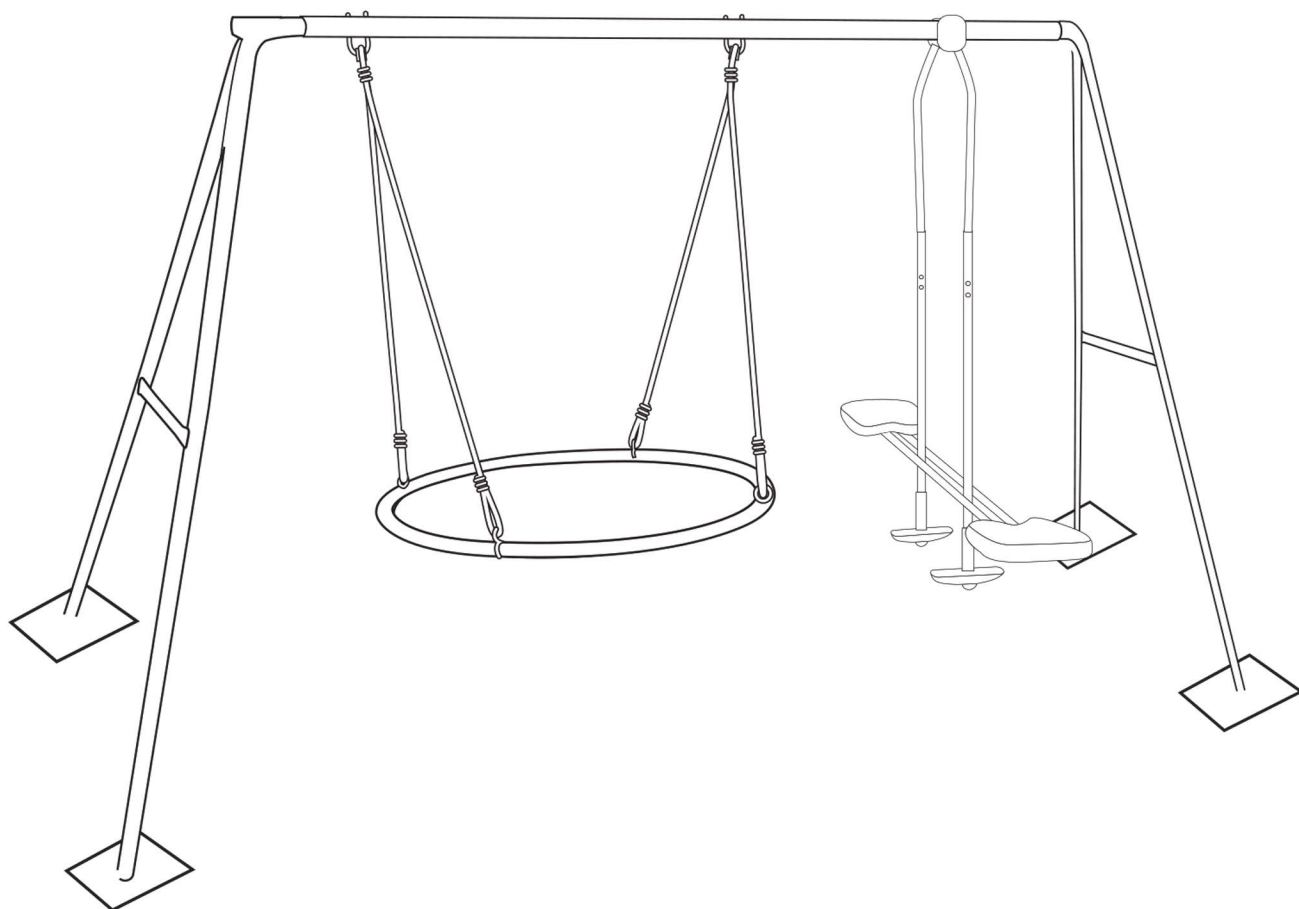

ALEKO®

8307 S 192nd St Kent, WA 98032

Phone: 833-926-2323

hello@aleko.com

www.ALEKO.com