

# ALEKO®

 
 
 
## Gazebo 420D Oxford Canopy Party Tent Instruction Manual



Model: GZF10X20

# ALEKO®

## OPEN GENTLY

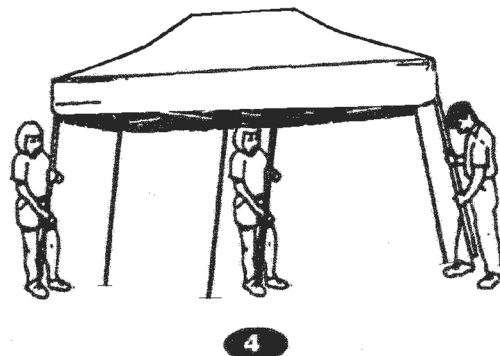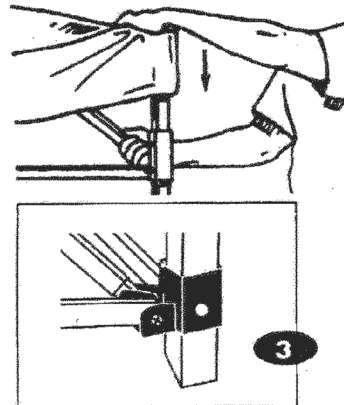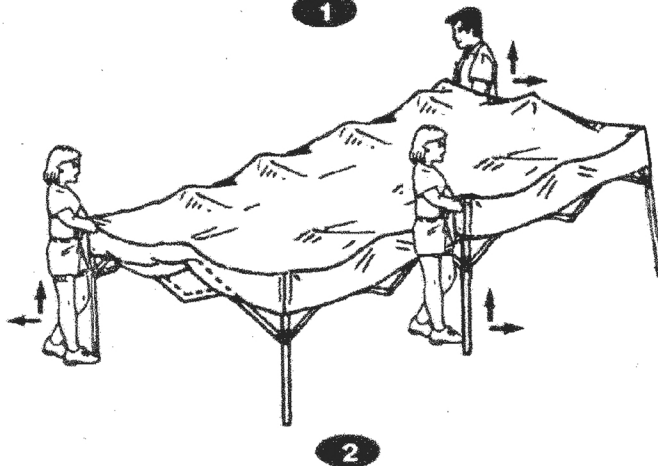

### HOW TO SET UP (GB)

Follow these instructions carefully to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes. To erect the fold up super cover requires two people.

1. Place your fold up super cover in the center of the area to be sheltered. Remove the carry bag and stand the fold up super cover on it's feet.  
With partner on the opposite side, grasp two outer legs, slightly lift the frame off the ground and take a step backwards, stopping at full (outstretched) arms length.
2. Each partner should grasp the top and bottom of the diamond (see diagram) formed by the side supports on opposite sides and push hands together while stepping backwards until the shelter is fully opened. Be careful not to pinch your fingers or to pull backwards too hard as this will result in the side supports bending.
3. Engage the slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand (see diagram). A snap button will engage in the locating hole. Repeat this operation on the remaining three legs.
4. You and your partner should each place a foot on the foot plate of the bottom of adjacent legs and lift up the leg, sliding the inner leg out until the snap button locks in the locating hole. Repeat this operation for the other two legs.
5. Square up the fold up super cover. Attach the velcro tabs, located on the underside of the top cover, around the frame struts.
6. Use the guy ropes attached to the ring at each corner of the roof cover and stakes, to secure your fold up super cover to the ground or just use the stakes through the hole in each legs foot.

# ALEKO®

**8307 S 192nd St Kent, WA 98032**

**Phone: 833-926-2323**

**[hello@aleko.com](mailto:hello@aleko.com)**

**[www.ALEKO.com](http://www.ALEKO.com)**