

 
ALEKO®

**Double Roof Aluminum and Steel
Hardtop Gazebo with Mosquito
Net - 13 x 10 Feet - Black**

Installation Manual



Model: GAZM10X13

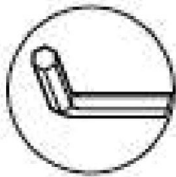

Use the hex keys in the box.



You may need to use a drill for this step.



Three or more people are required at this stage.


 
 
 
 
 










You may need a ladder.

  
 
 
 
 
 
 
 
 







 Do not tighten screws all the way for now.

 


















ASSEMBLY INSTRUCTION

 PARTS NO	DESCRIPTION	QTY
1		4
2		2
3		2
4		2
5		2
6		4
7		6
8		4
9		4
10		2
11		12
12		2
13		2
14		1

 
 
ASSEMBLY INSTRUCTION

PARTS NO	DESCRIPTION	QTY
15		2
16		2
17		2
17A		2
18		4
18A		4
19		4
19A		4
20		4
21		4
22		4
23		1
24		4
25		4

   
ASSEMBLY INSTRUCTION

PARTS NO	DESCRIPTION	QTY
26		4
27		6
28		12
29		
30	 ST5 * 10 mm	32
31	 M5 * 10 mm	12
32	 M6 * 12 mm	8
33	 M6 * 15 mm	185
34	 M6 * 30 mm	16
35		1
36		2
37		12
38		4
39		4
40		4
41		4
42		2
43		2
44		2

 
 
STEP 01

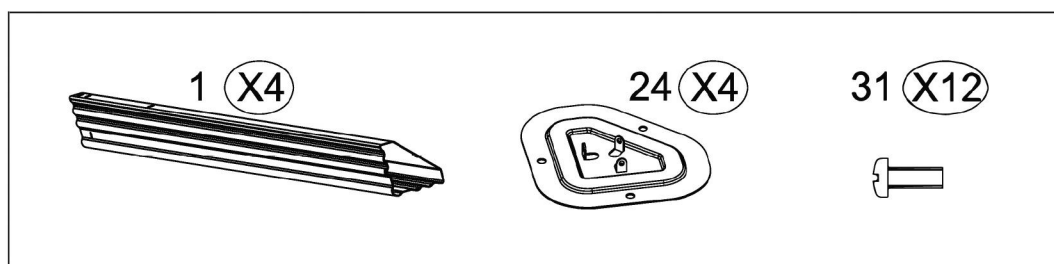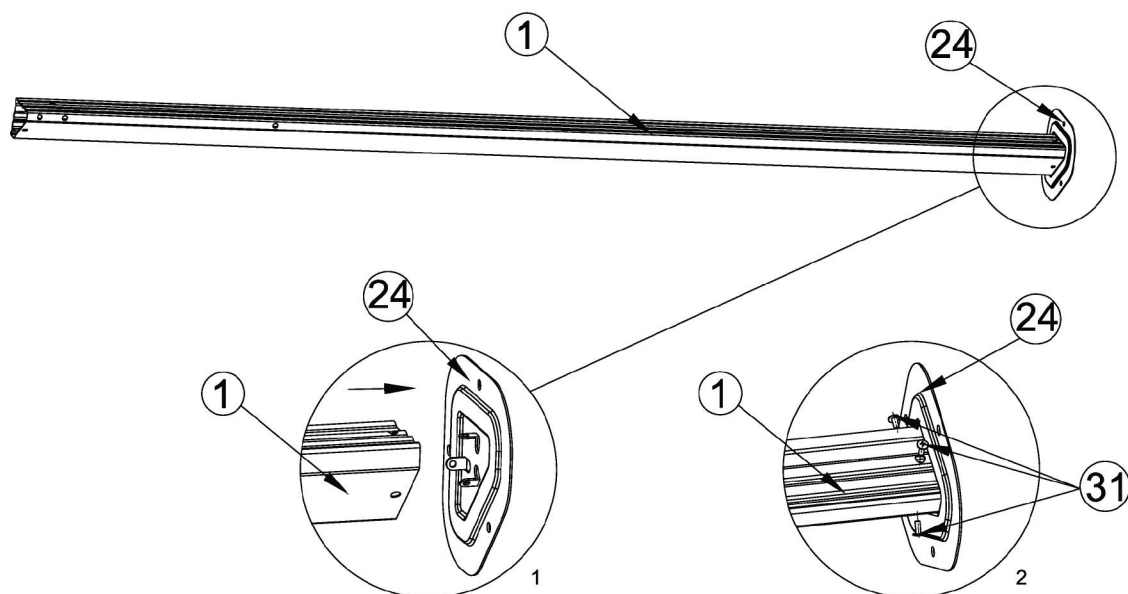


 
STEP 02

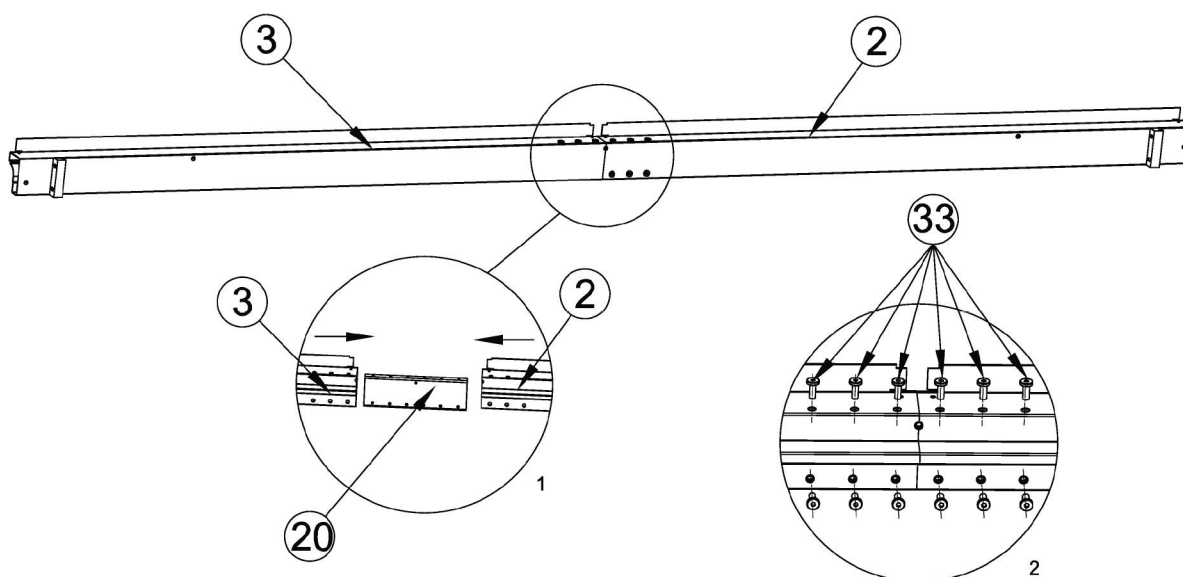

  
STEP 03

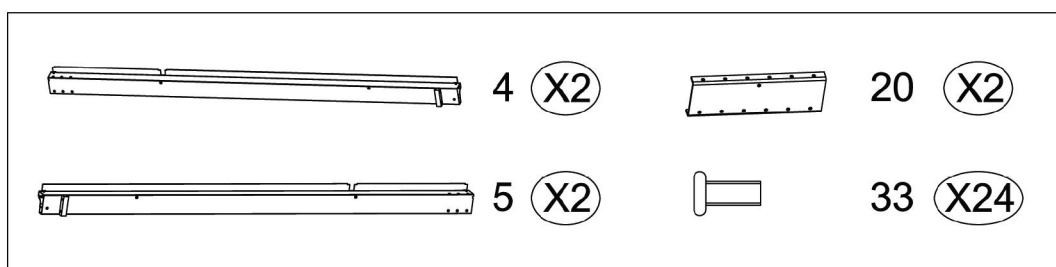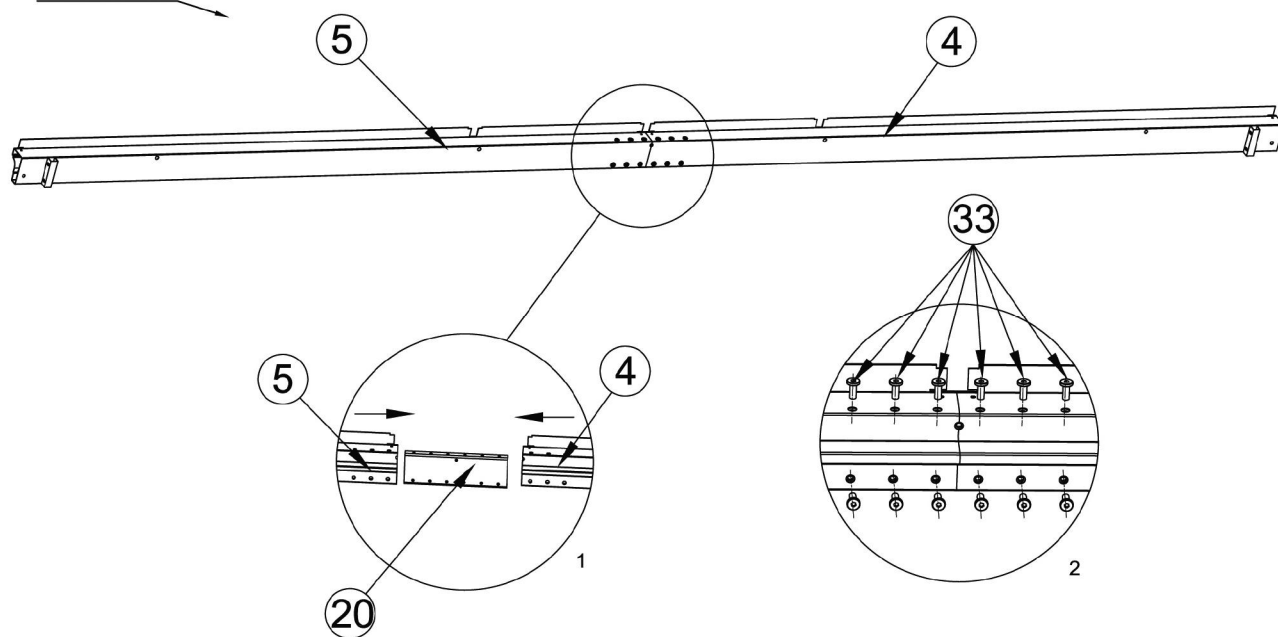

  STEP 04

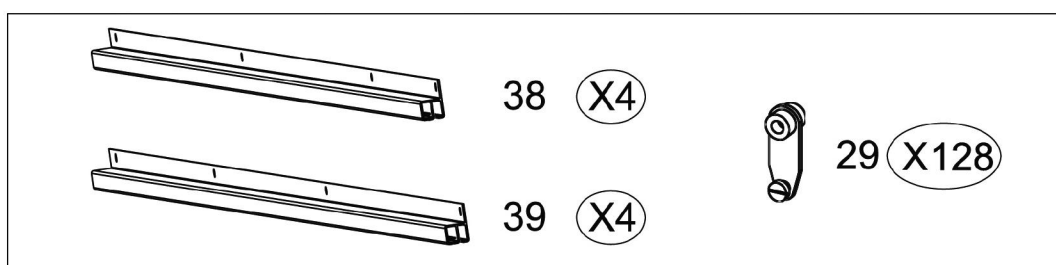
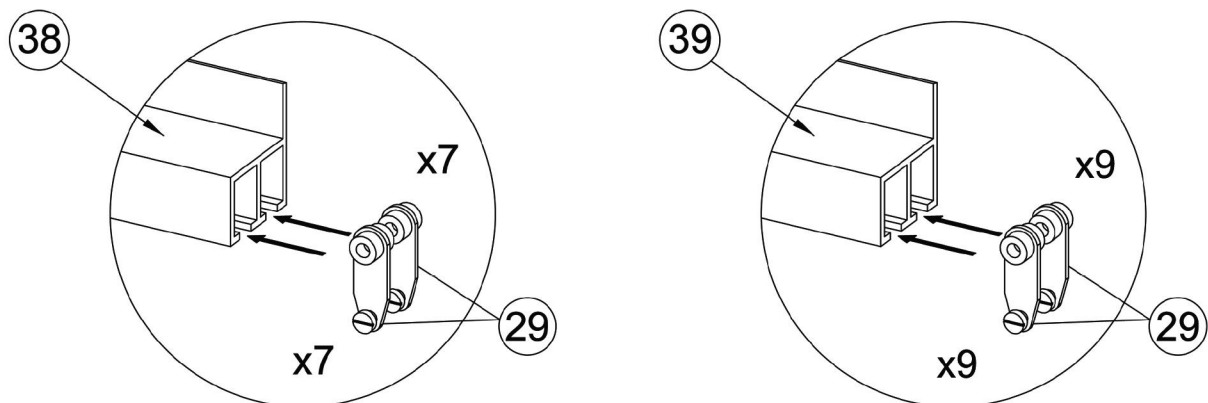


 STEP 05

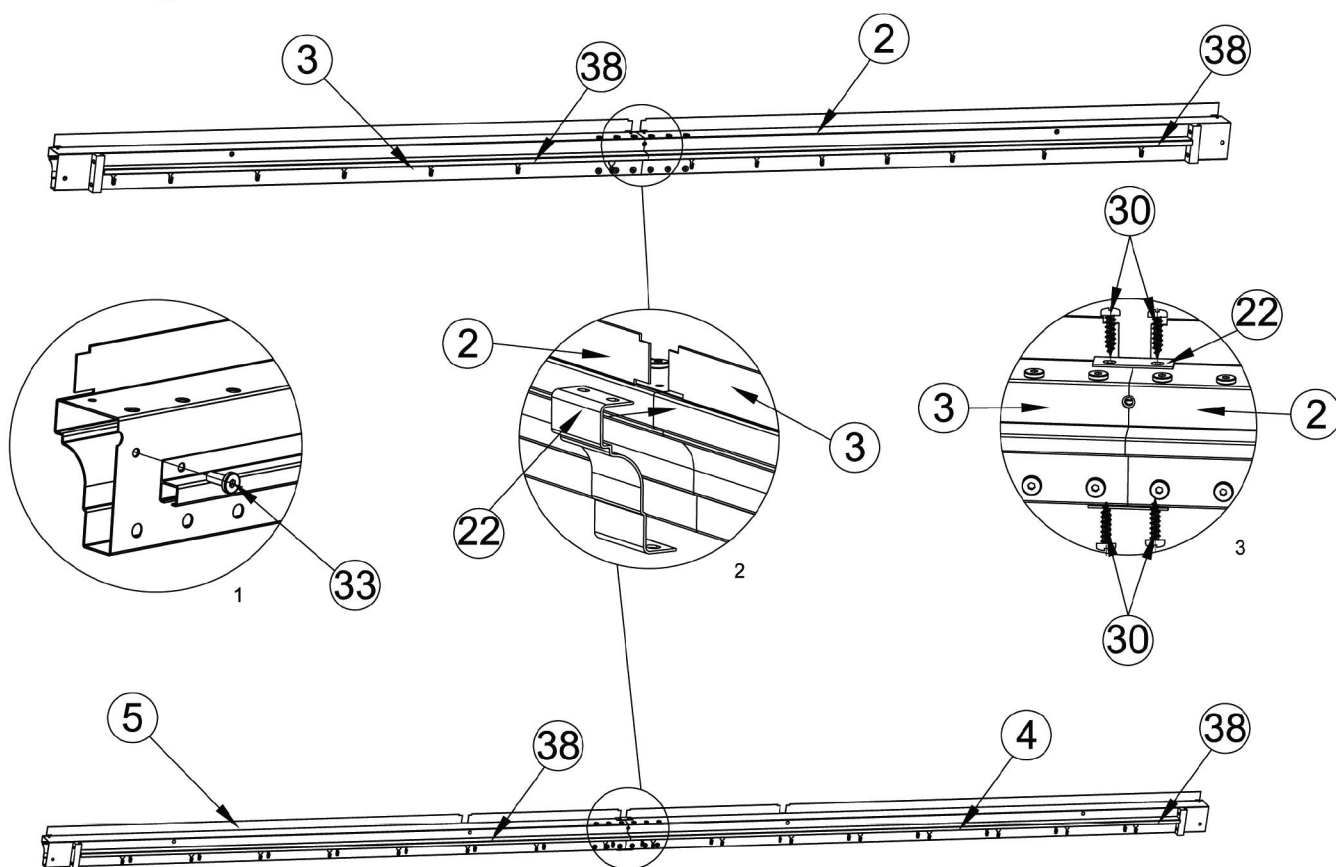

	2 (X2)		22 (X4)
	3 (X2)		33 (X32)
	4 (X2)		30 (X16)
	5 (X2)		
	38 (X4)		
	39 (X4)		

  STEP 06

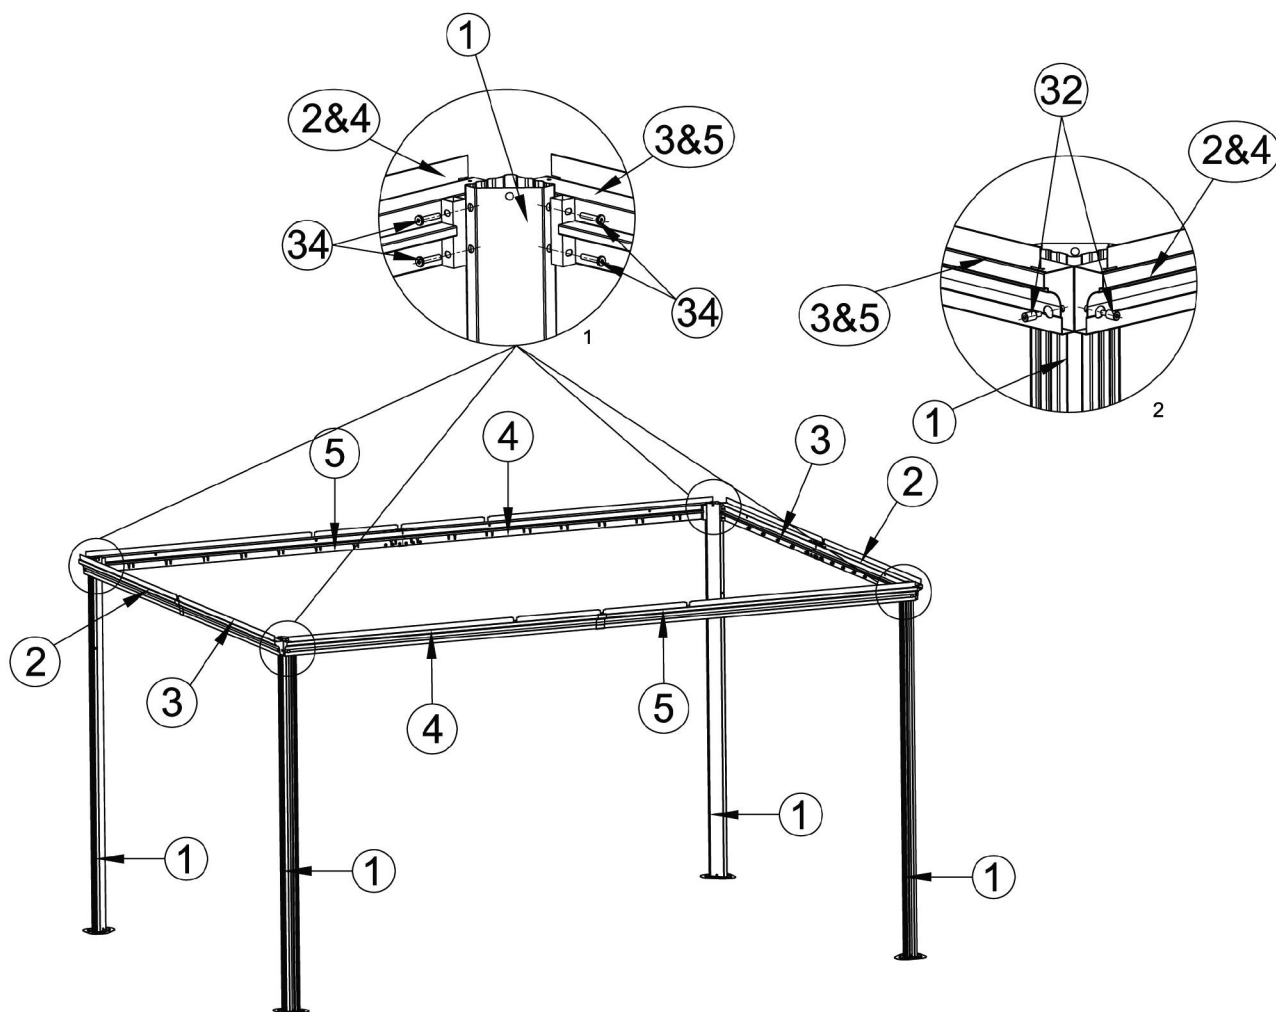


32 (X8)



34 (X16)

 STEP 07


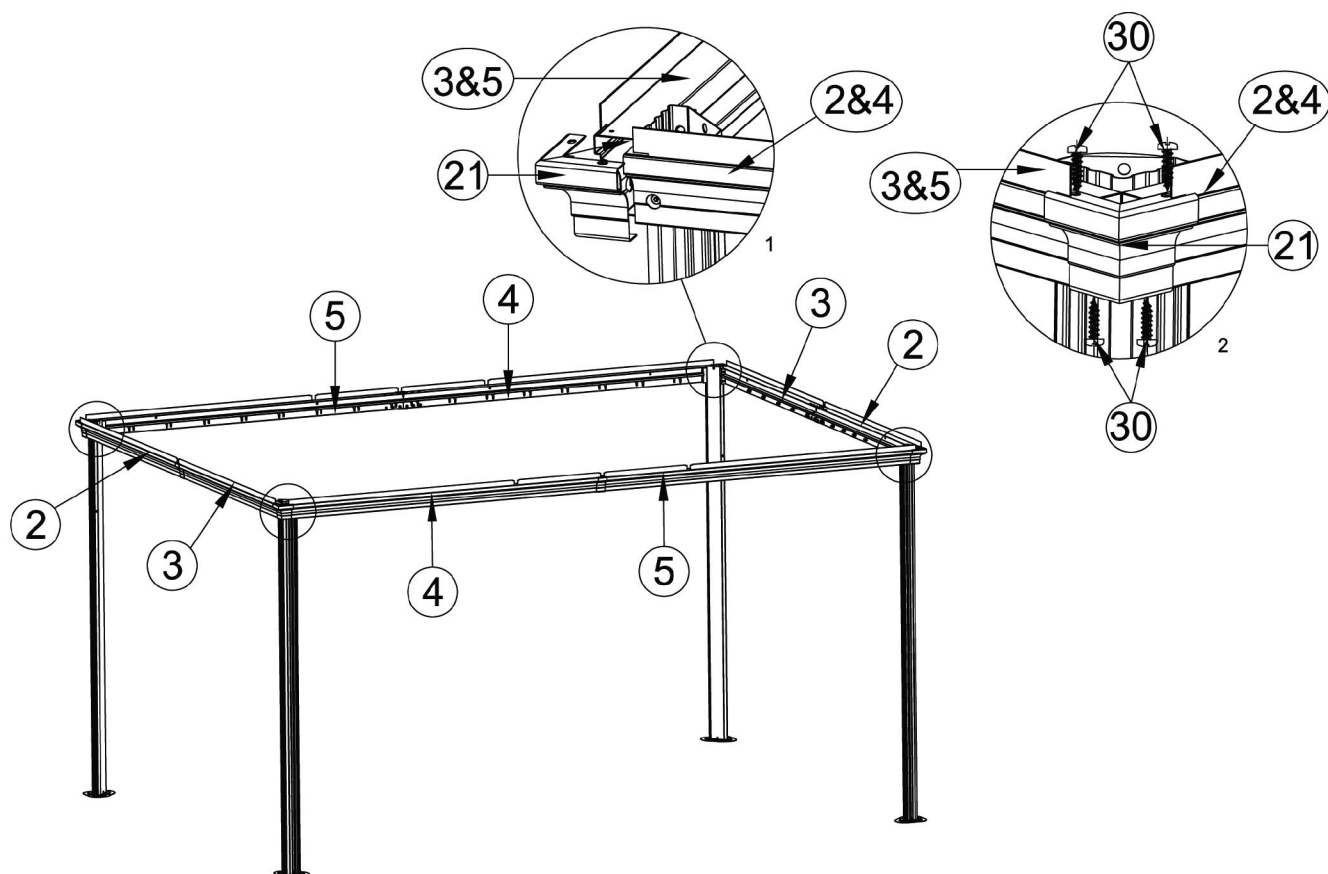


21 (X4)





30 (X16)

 
 
STEP 08

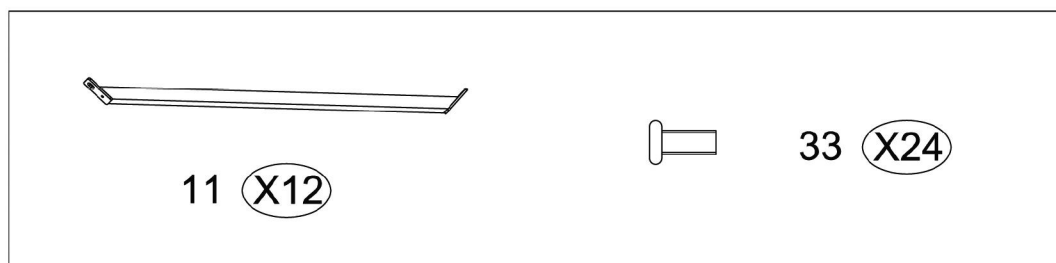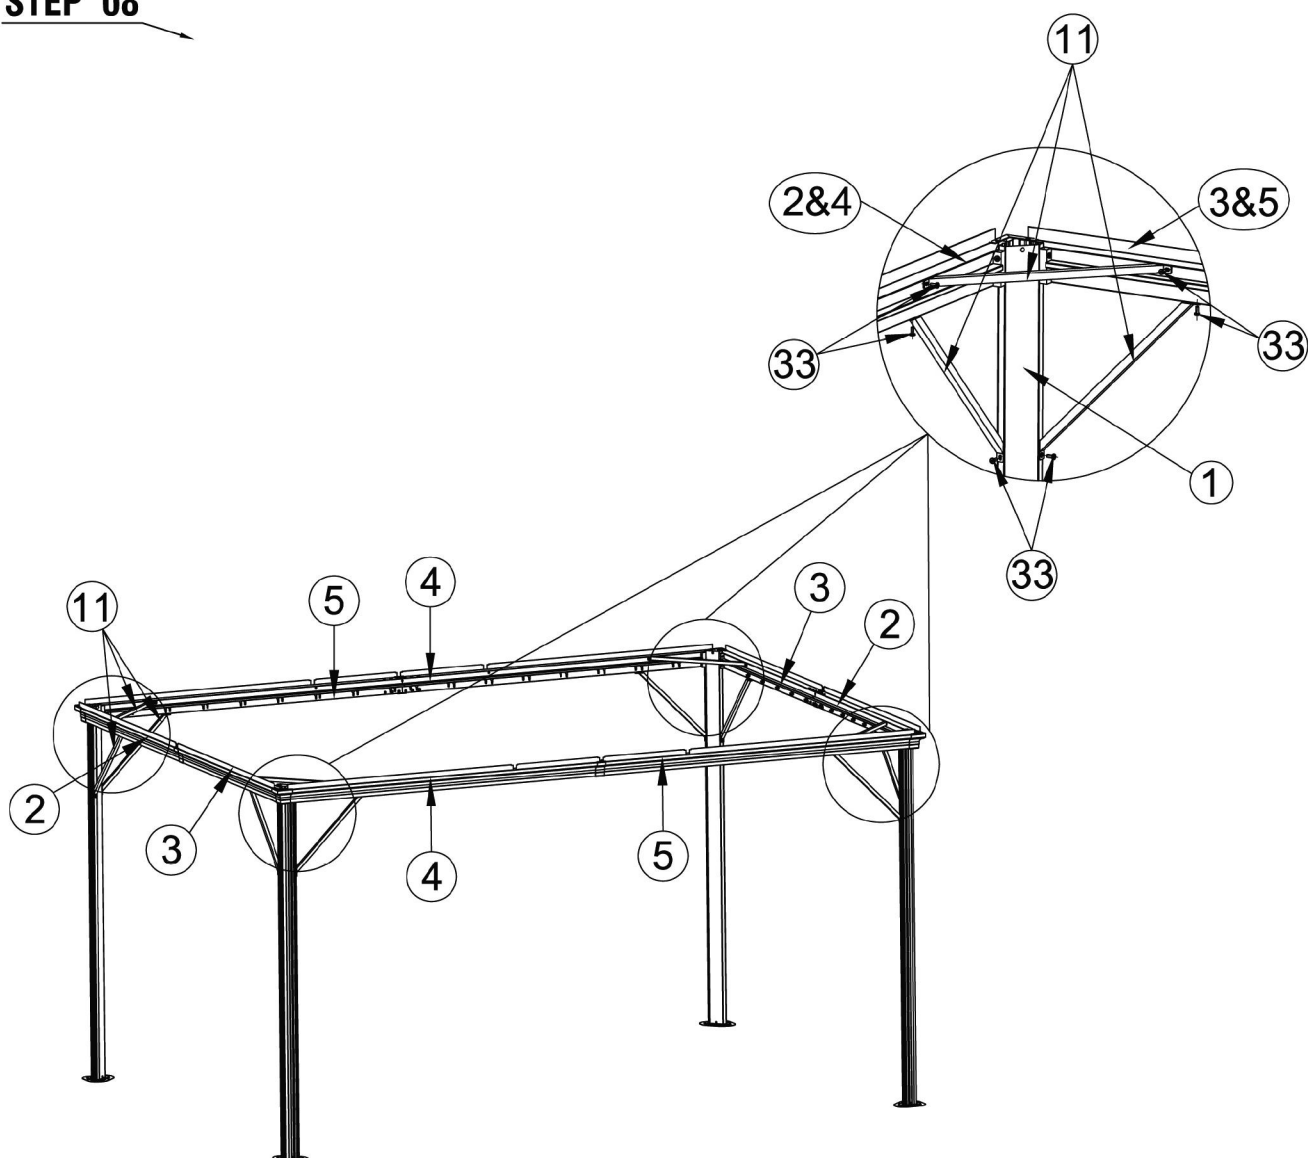

 
 
STEP 09

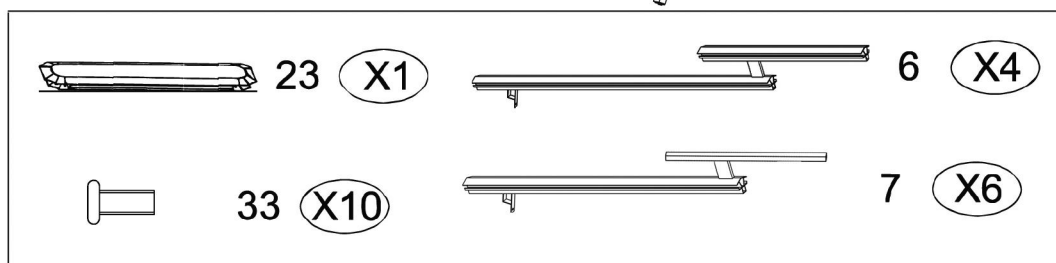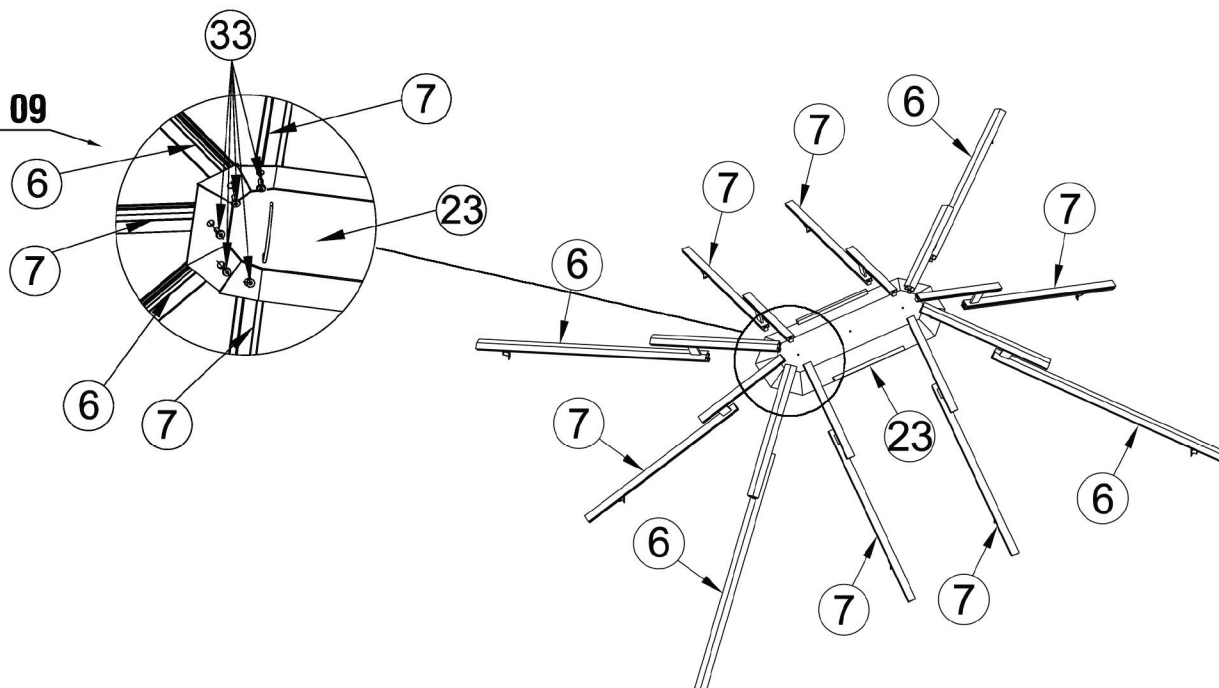

  STEP 10

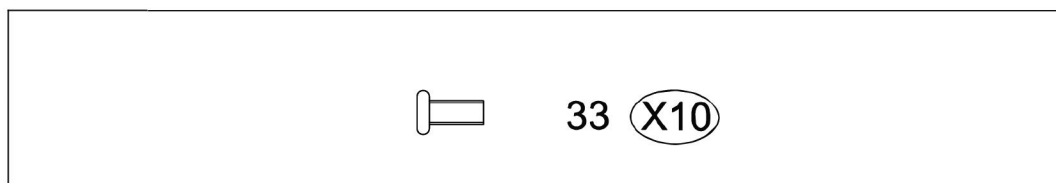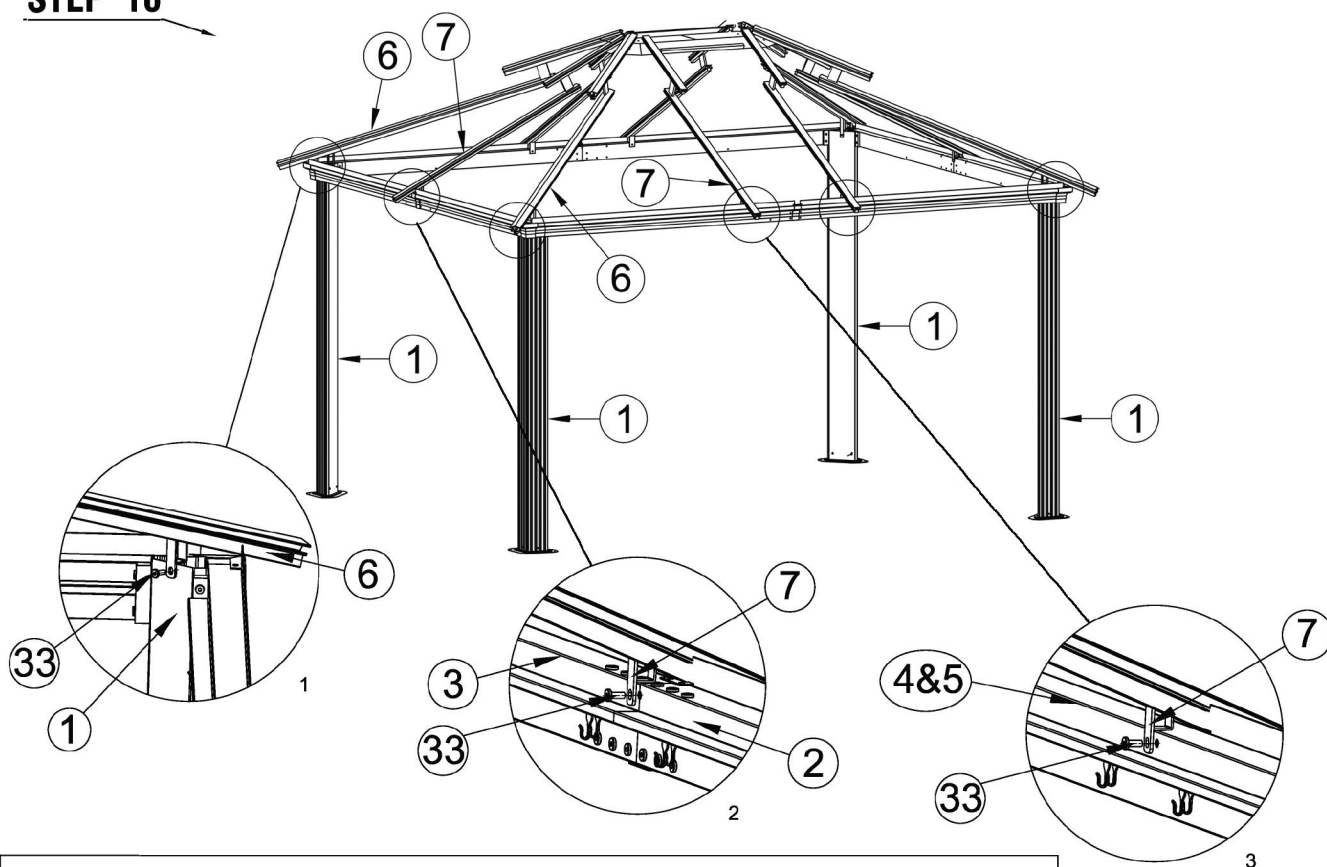

  STEP 11

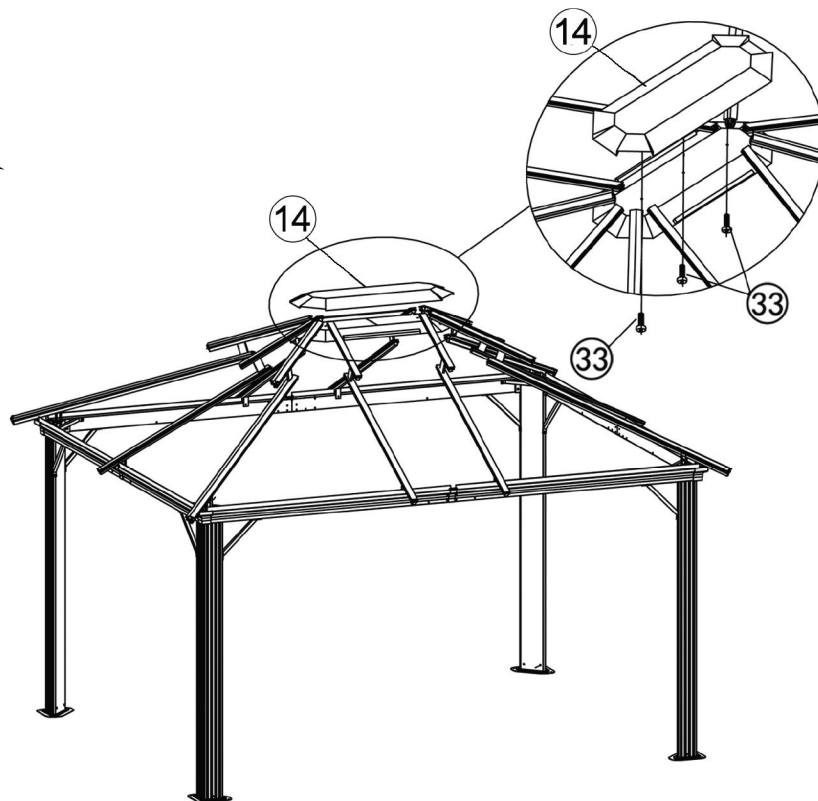


14 (X1)



33 (X3)

 STEP 12

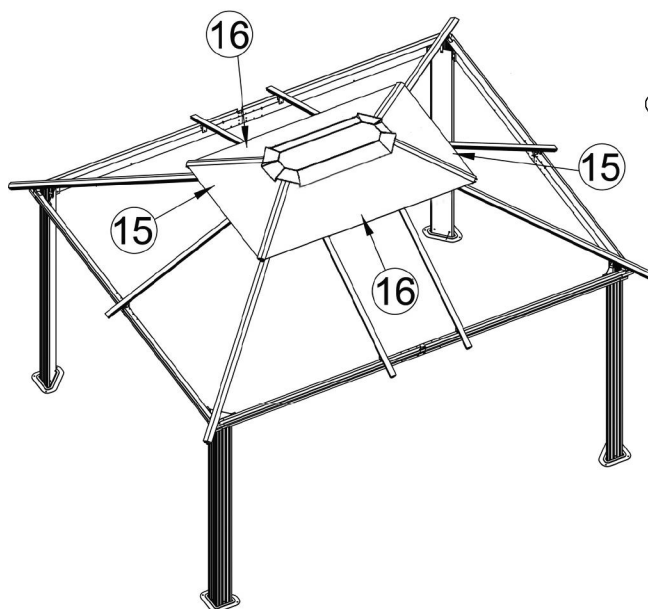

15&16

6&7

 
 


15 (X2)



16 (X2)

STEP 13

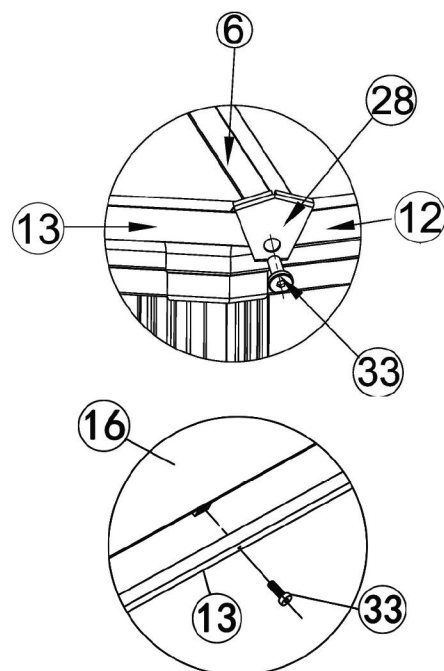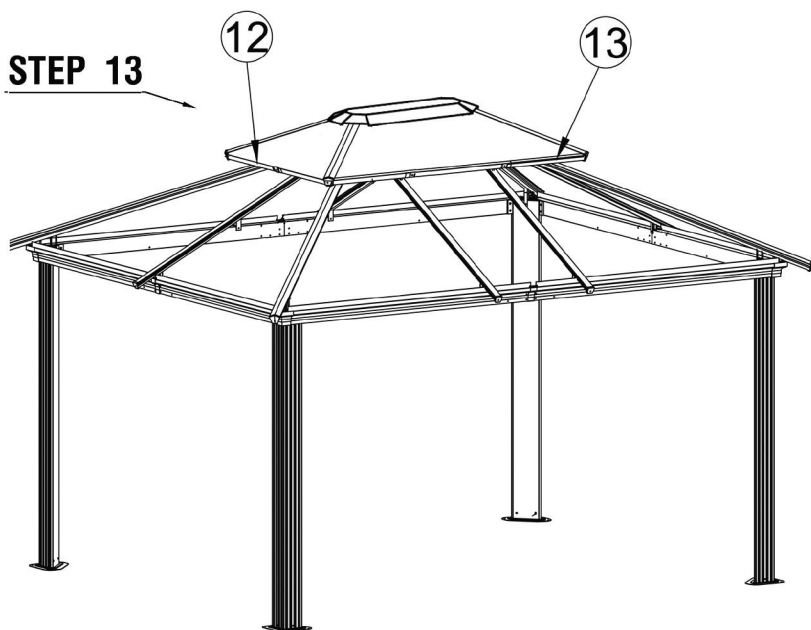

12 X2



28 X4

 


13 X2




33 X10


STEP 14

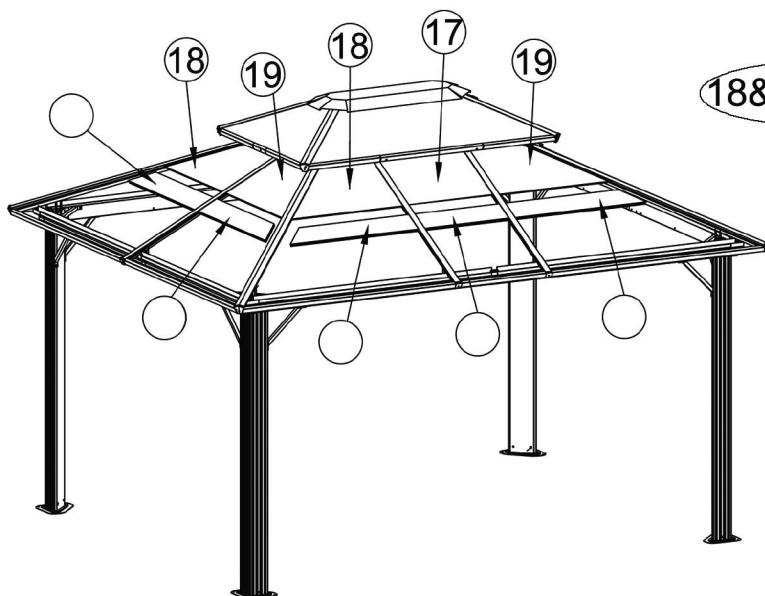

18&19&17

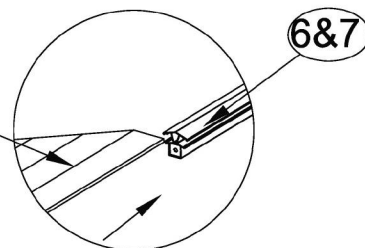 

6&7

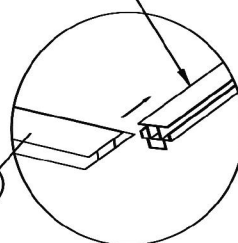 

40&41



18 X4



19 X4



17 X2



X4

 
 


X4





X2


STEP 15

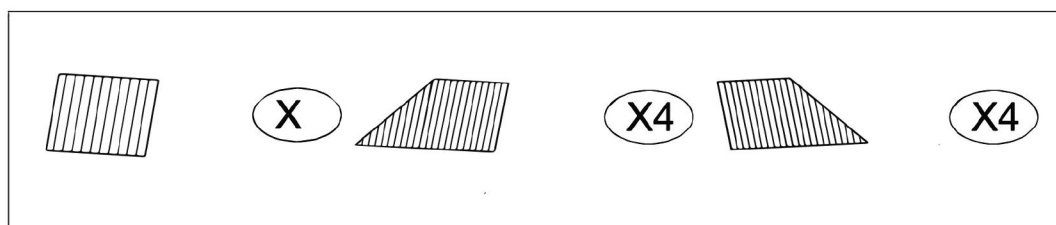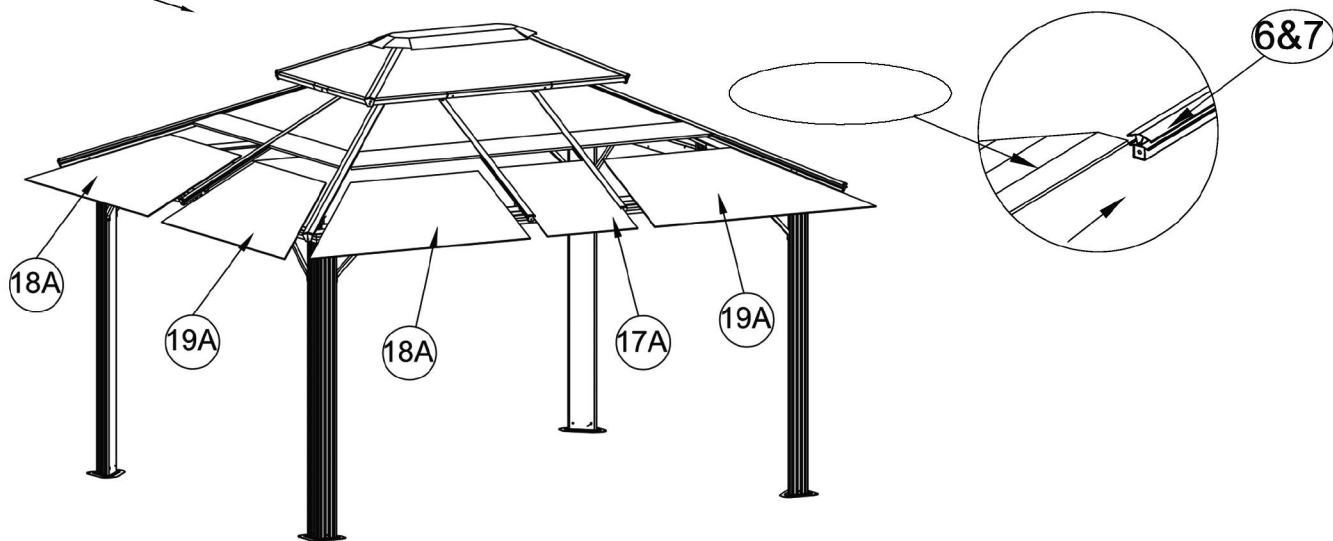

  STEP 16

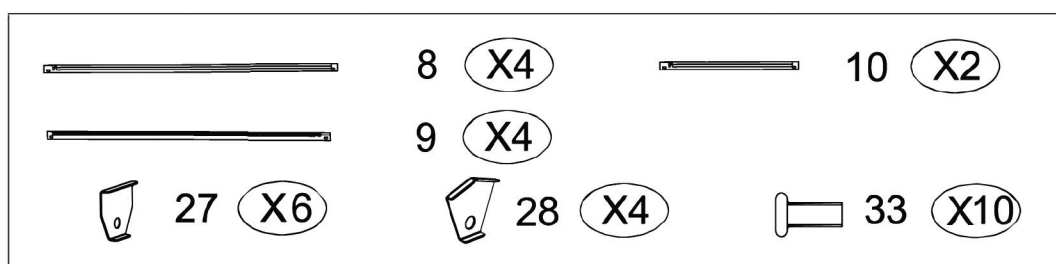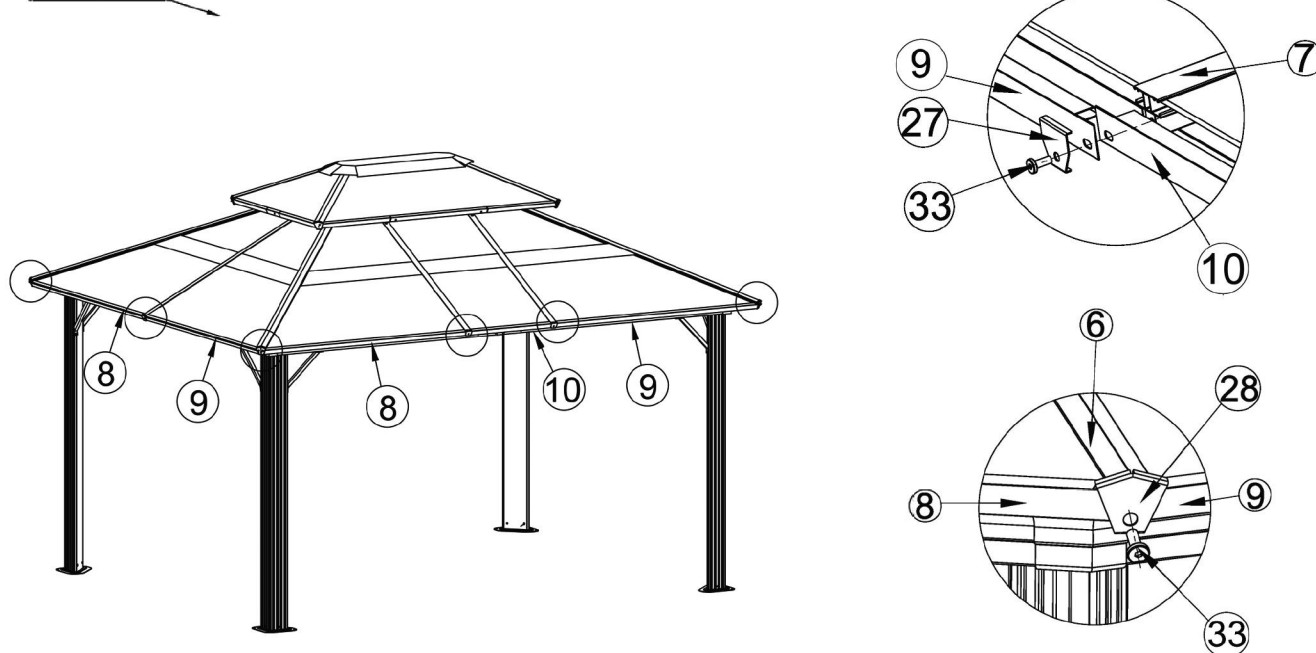

 STEP 17

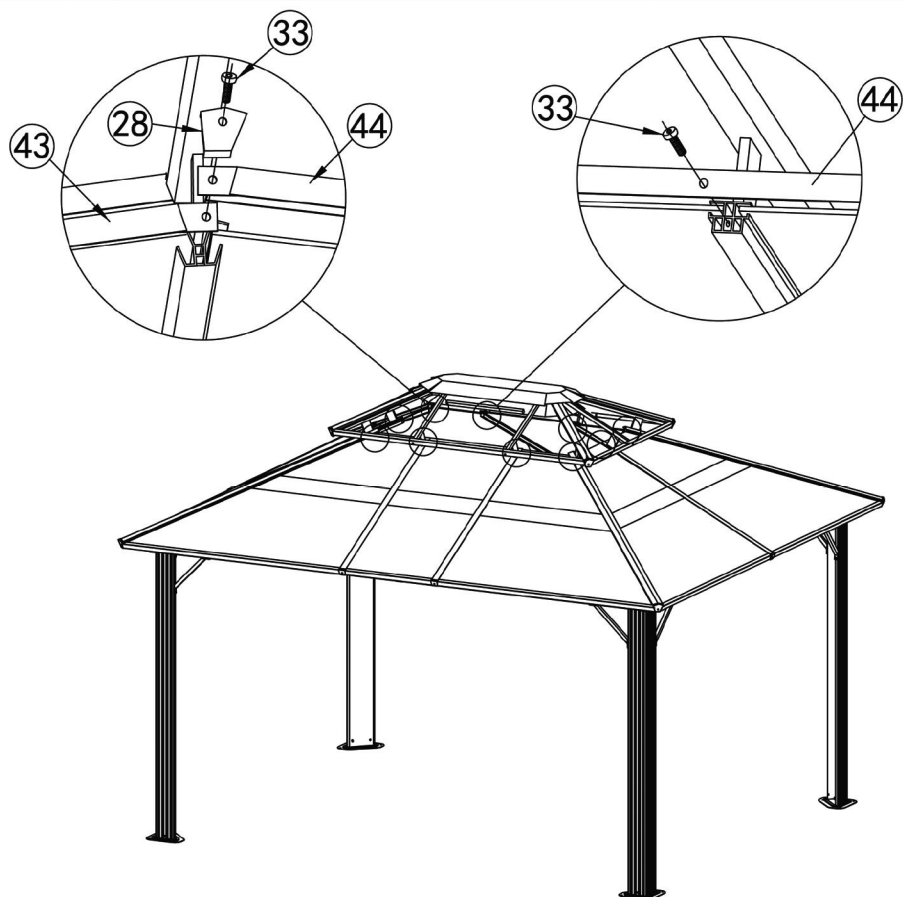

X2



 
 
X2



33

X10

STEP 18

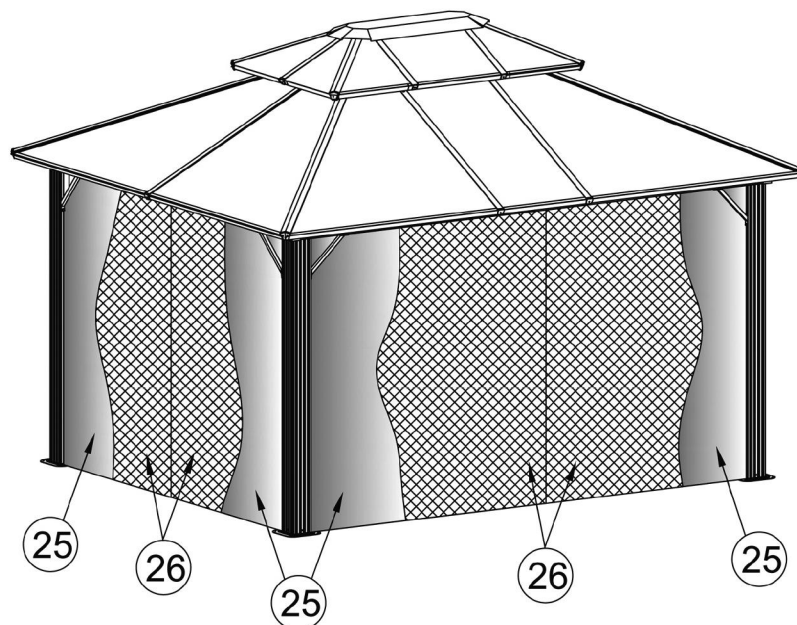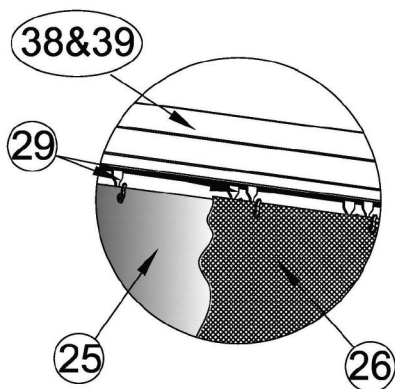

25

 
 
X4



26

X4

STEP 19

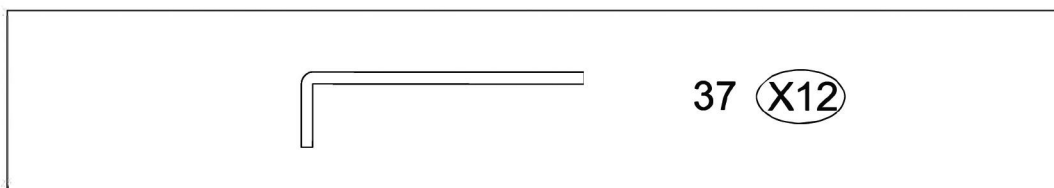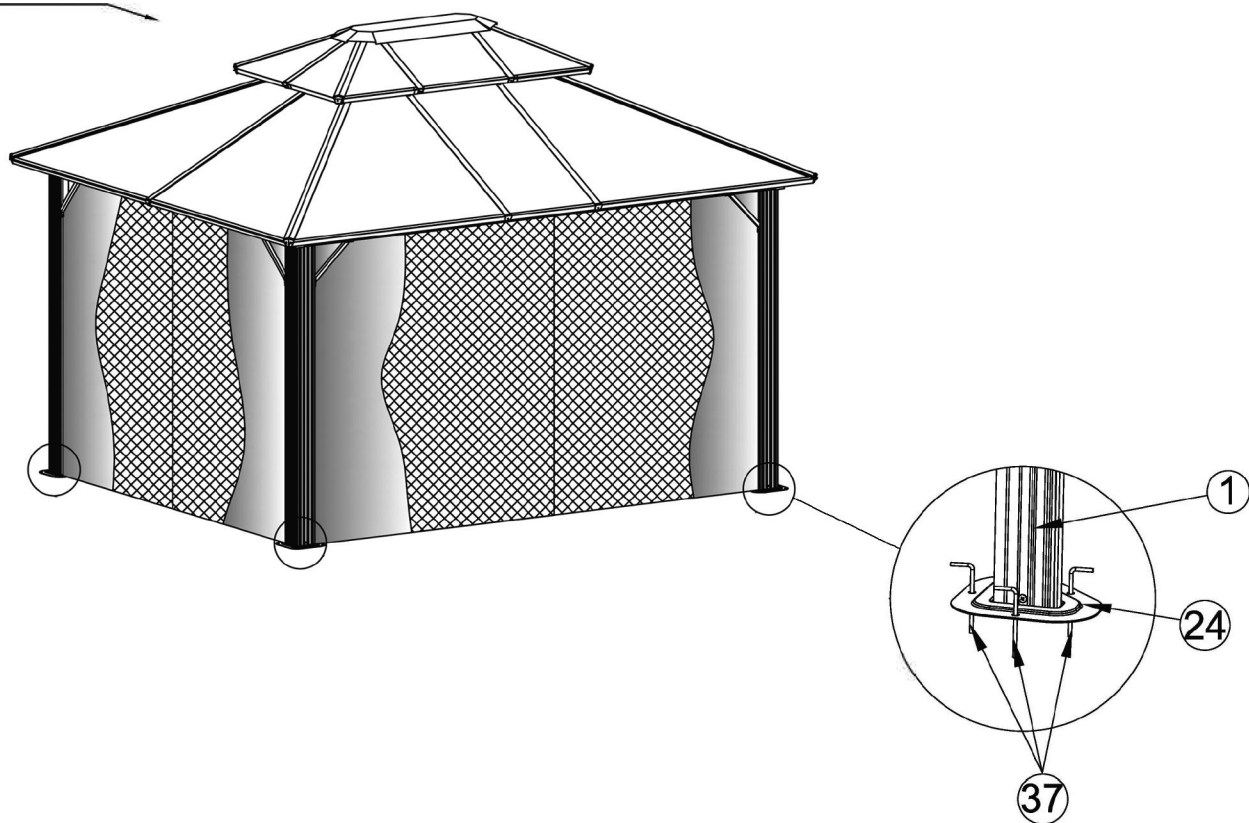

NOTICE

Your proper assembly, installation and use of this structure will ensure many years of valued service from this unit. Please follow all instructions carefully and heed warnings on the carton, included in the box and sewn into the inner tent seams for your own protection and longevity of this unit.

It is built of high quality materials but must be used as intended or it's lifespan will be drastically reduced. Never climb on top of this structure. Do not rest heavy objects against the side of the structure. Failure to observe or comply with these instructions will void the manufacturer's warranty and dramatically reduce the lifespan of the unit.

This unit is not intended as a permanent structure and should not be left up for extended periods of time. It is not designed to withstand sustained winds or rain. It is a portable, temporary shelter from the sun, light rain and, in the case of screened units, flying insects.

During rain, if water begins to pool on any roof surfaces, use a blunt ended long pole, such as broom or mop, to gently push up on the roof from below to drain water.

Please utilize a minimum of three persons and a step ladder to erect this structure safely. Do not attempt to erect the structure during heavy winds or inclement weather. When the structure is erected, please use guy ropes and stakes to secure tightly at all times. If using on a solid surface such as hard ground or concrete/asphalt, be sure to use cinder blocks as anchors on each corner to which you can tie the support/guy ropes. If winds are heavier, it's a good idea to use cinder blocks in addition to ground stakes for extra anchoring support.

WARNING

Do not use candles, matches or open flames of any kind in or near a tent.

Do not cook inside a tent

Build campfires downwind and several metres away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night

Exercise extreme caution when using fuel-powdered lanterns on heaters inside a tent and use battery-operated and use battery-operated lanterns whenever possible

Do not refuel lamps, heaters or stoves inside a tent

Extinguish or turn off all lanterns before going to sleep

Do not smoke in a tent

Do not store flammable liquids inside a tent

ALEKO®

8307 S 192nd St Kent, WA 98032

Phone: 833-926-2323

hello@aleko.com

www.ALEKO.com