 


# ALEKO®

 
 
 
 
 
 
 
 
 
## Aluminum and Steel Hardtop Gazebo with Mosquito Net and Curtain - 10 x 12 Feet - Black **Installation Manual**

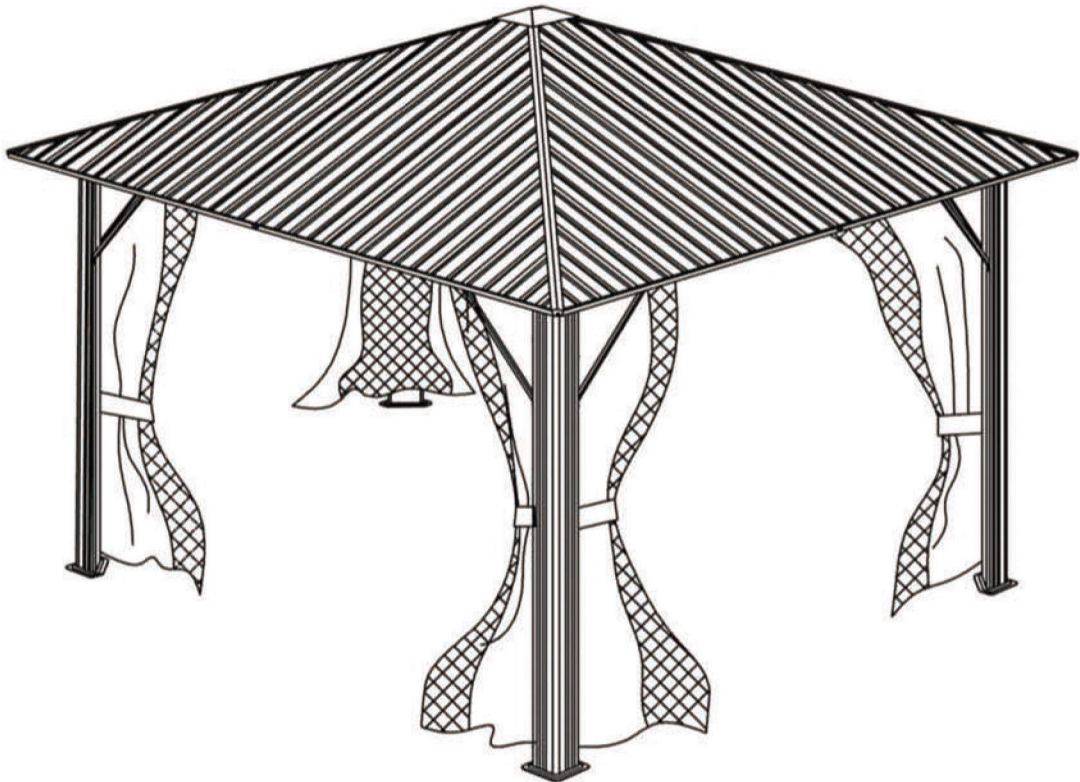


Model: GZMC10X12

# ALEKO®





## Parts List

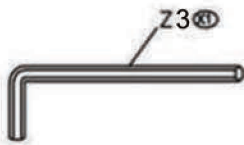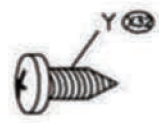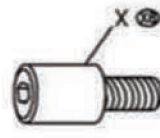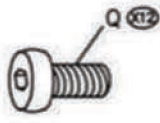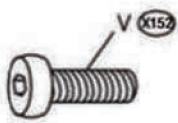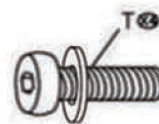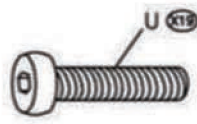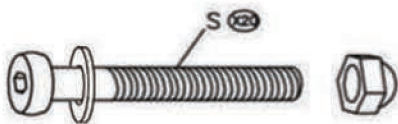

Item	Description	Qty
S	Screw and Nut M6X47	20
U	Screw M6X35	19
T	Screw M6X25	4
V	Screw M6X15	152
Q	Screw M5X10	12
X	Screw M6X15(D17X32)	8
Y	Screw ST4.8X12	32
Z3	Allen Key	1
Z4	Wrench	1
Z2	Screwdriver	1









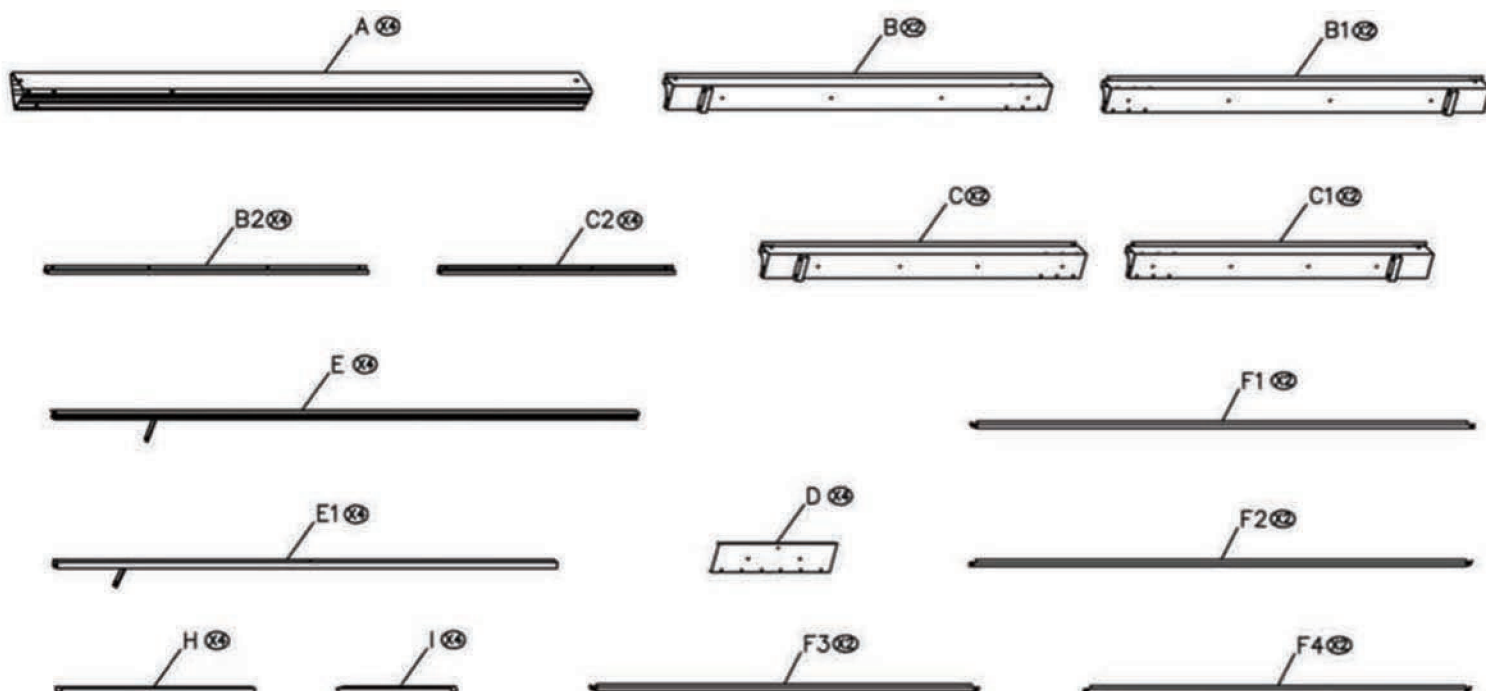 


Item	Description	Qty
A	Column	4
B	Long Ogee	2
B1	Long Ogee	2
B2	Long Track	4
C	Short Ogee	2
C1	Short Ogee	2
C2	Short Track	4
D	Union Bar	4
E	Corner Roof Bar	4
E1	Roof Bar	4
F1	Gap Cover Bar	2
F2	Gap Cover Bar	2
F3	Gap Cover Bar	2
F4	Gap Cover Bar	2
H	Long Solidifying Bar	4
I	Short Solidifying Bar	4

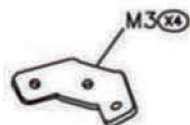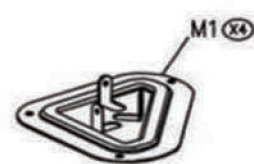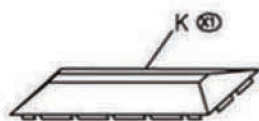    



Item	Description	Qty
K	Outside Roof Connector	1
K1	Inside Roof Connector	1
L	Corner Solidifying Bar	8
M1	Base	4
M2	Iron Angle	4
M3	Iron Angle	4
M4	Spacer	24
Q1	Hook - extra in option	120
W	Corner Cover	4
W1	Joint Cover Plate	4
W2	Joint Cover Plate	4
W3	Corner Cover	4
Z	Net	4
Z1	Curtains	4



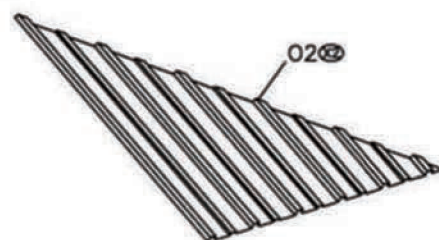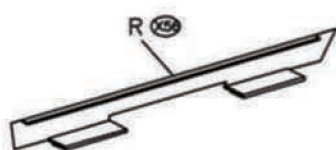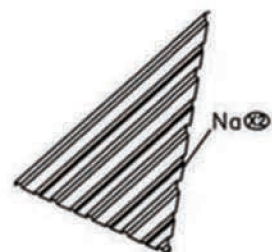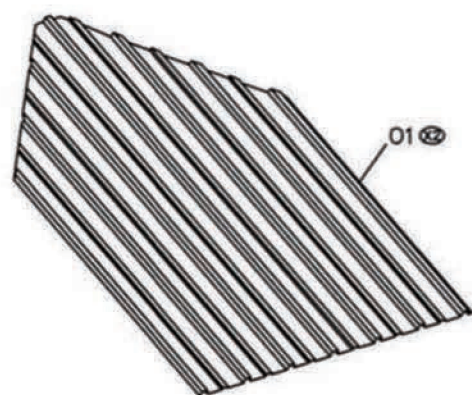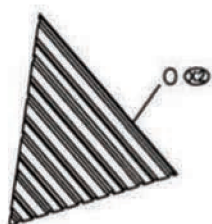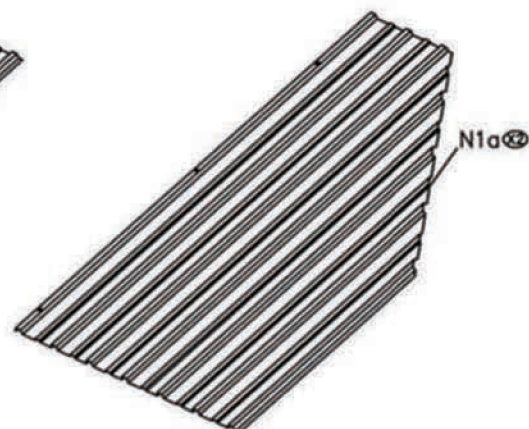       
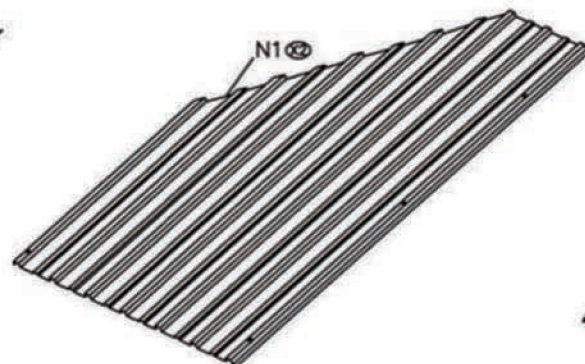 
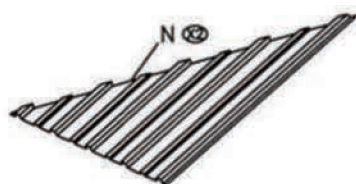 


Item	Description	Qty
N	Roof Panel	2
Na	Roof Panel	2
N1	Roof Panel	2
N1a	Roof Panel	2
O	Roof Panel	2
O1	Roof Panel	2
O2	Roof Panel	2
R	Metal Bracket	56
R1	Metal Bracket	8




# Step 1

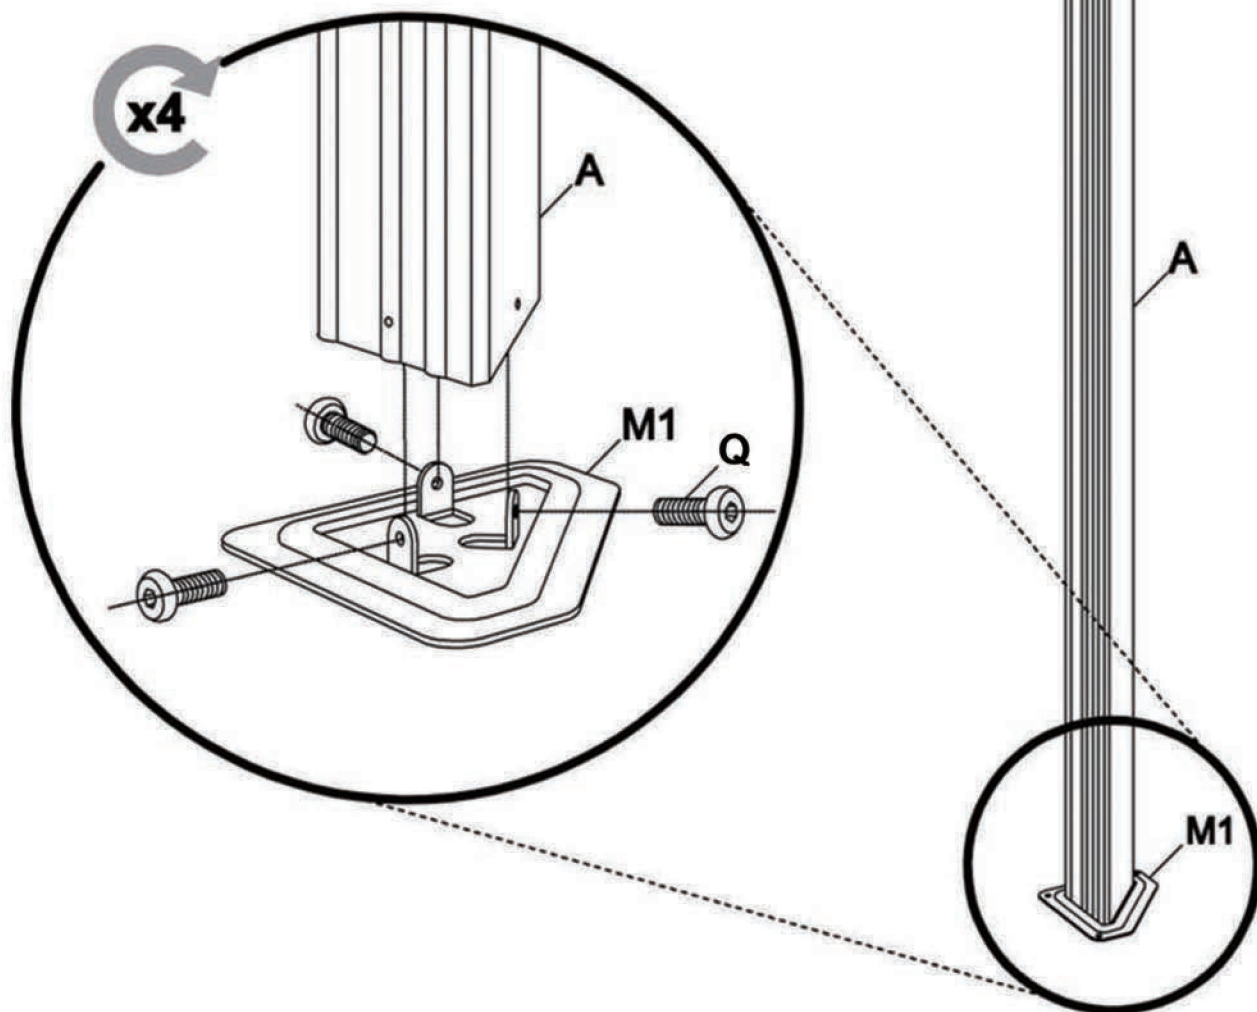  

## Step 2

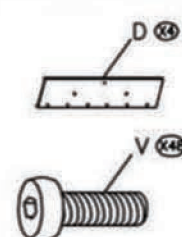 
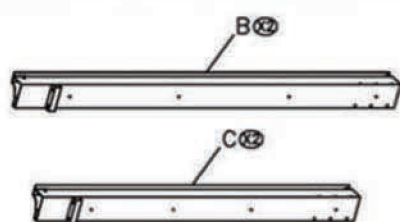 
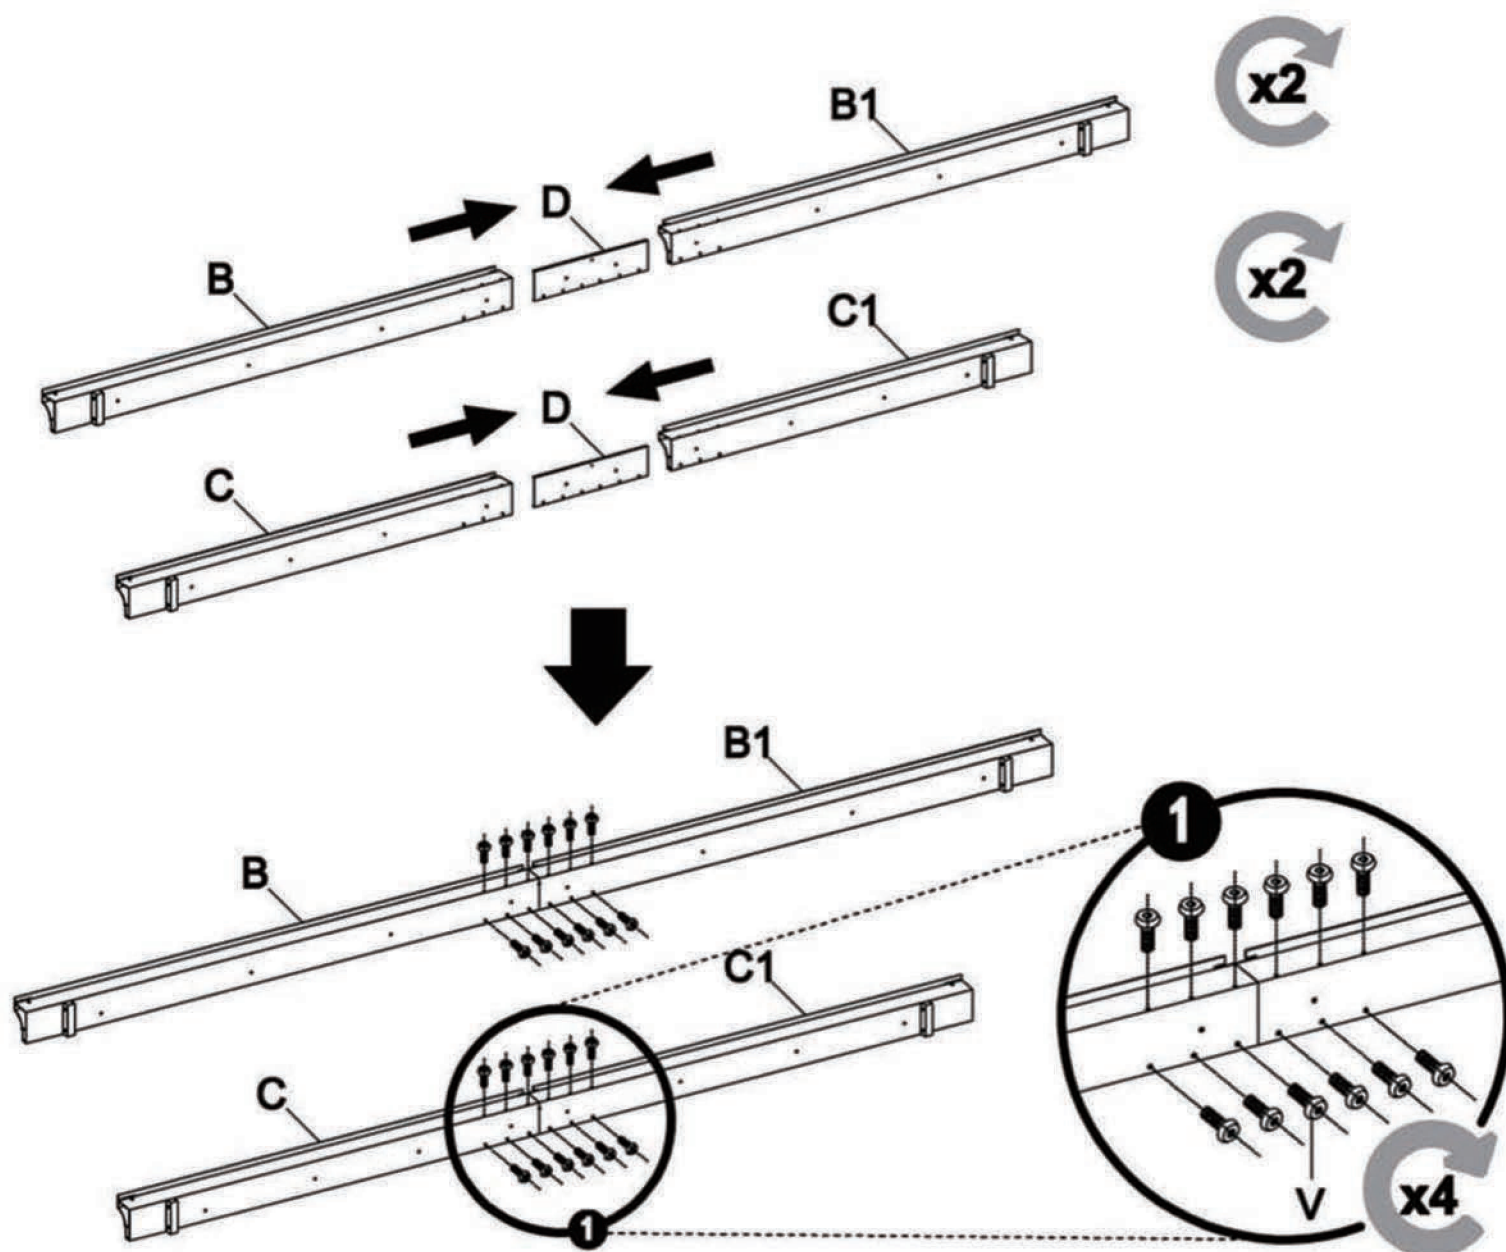 


   Step 3

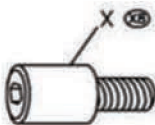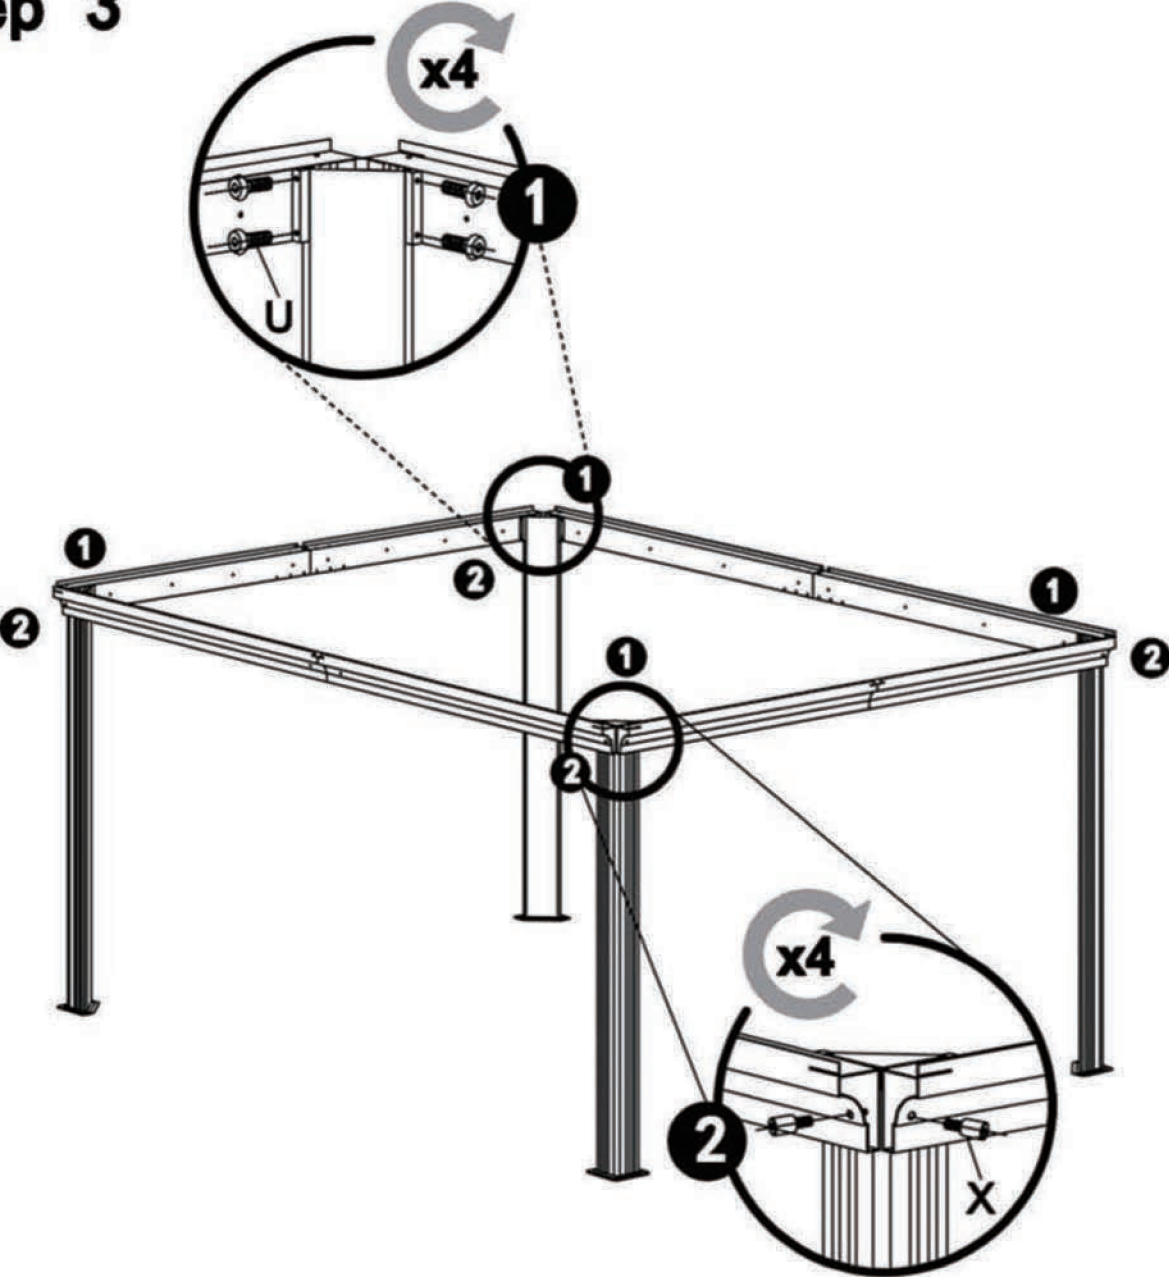





## Step 4

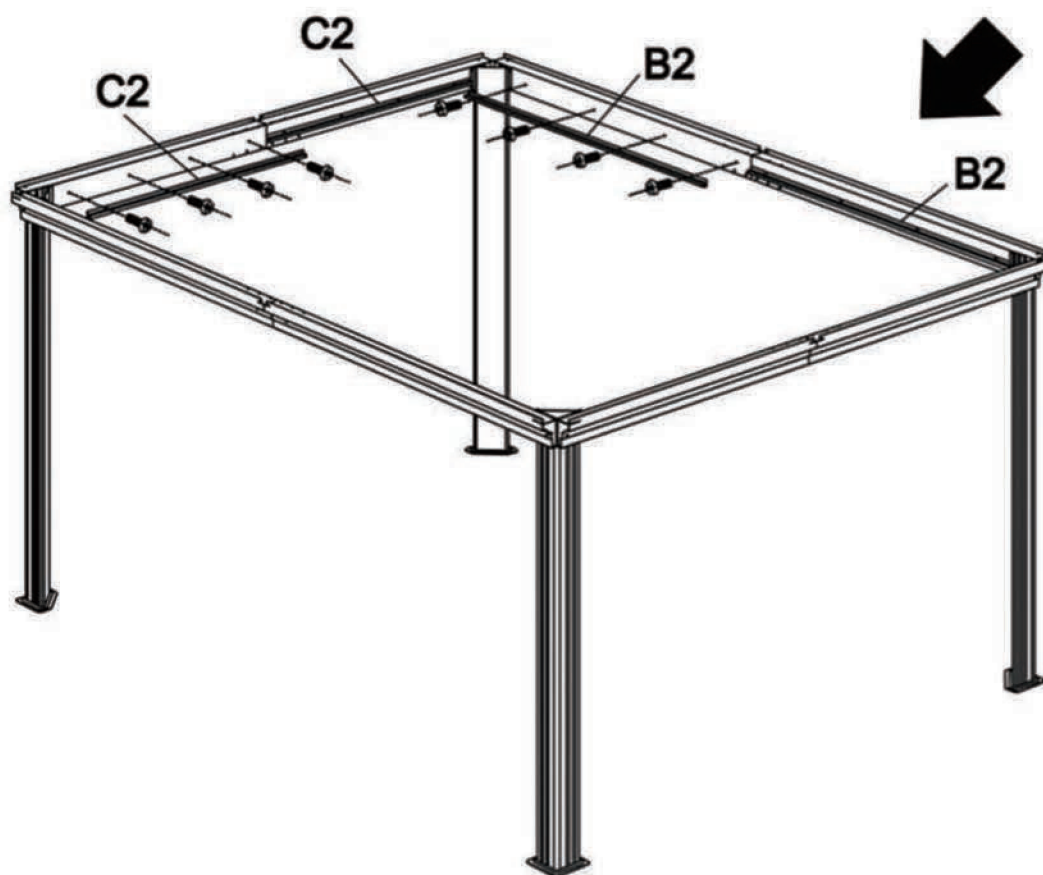  
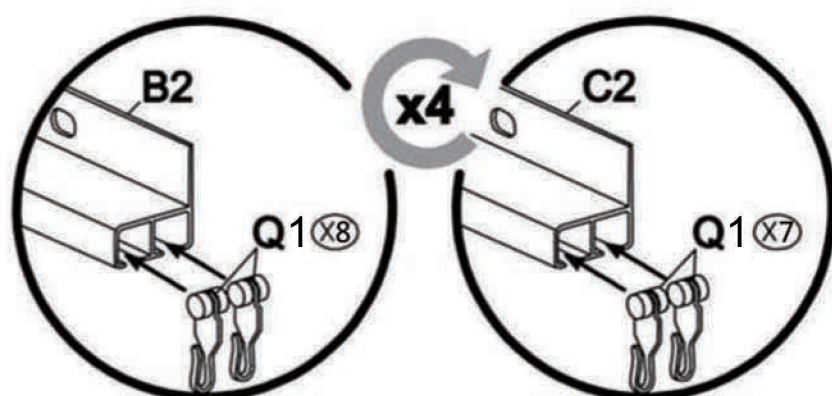 







## Step 5

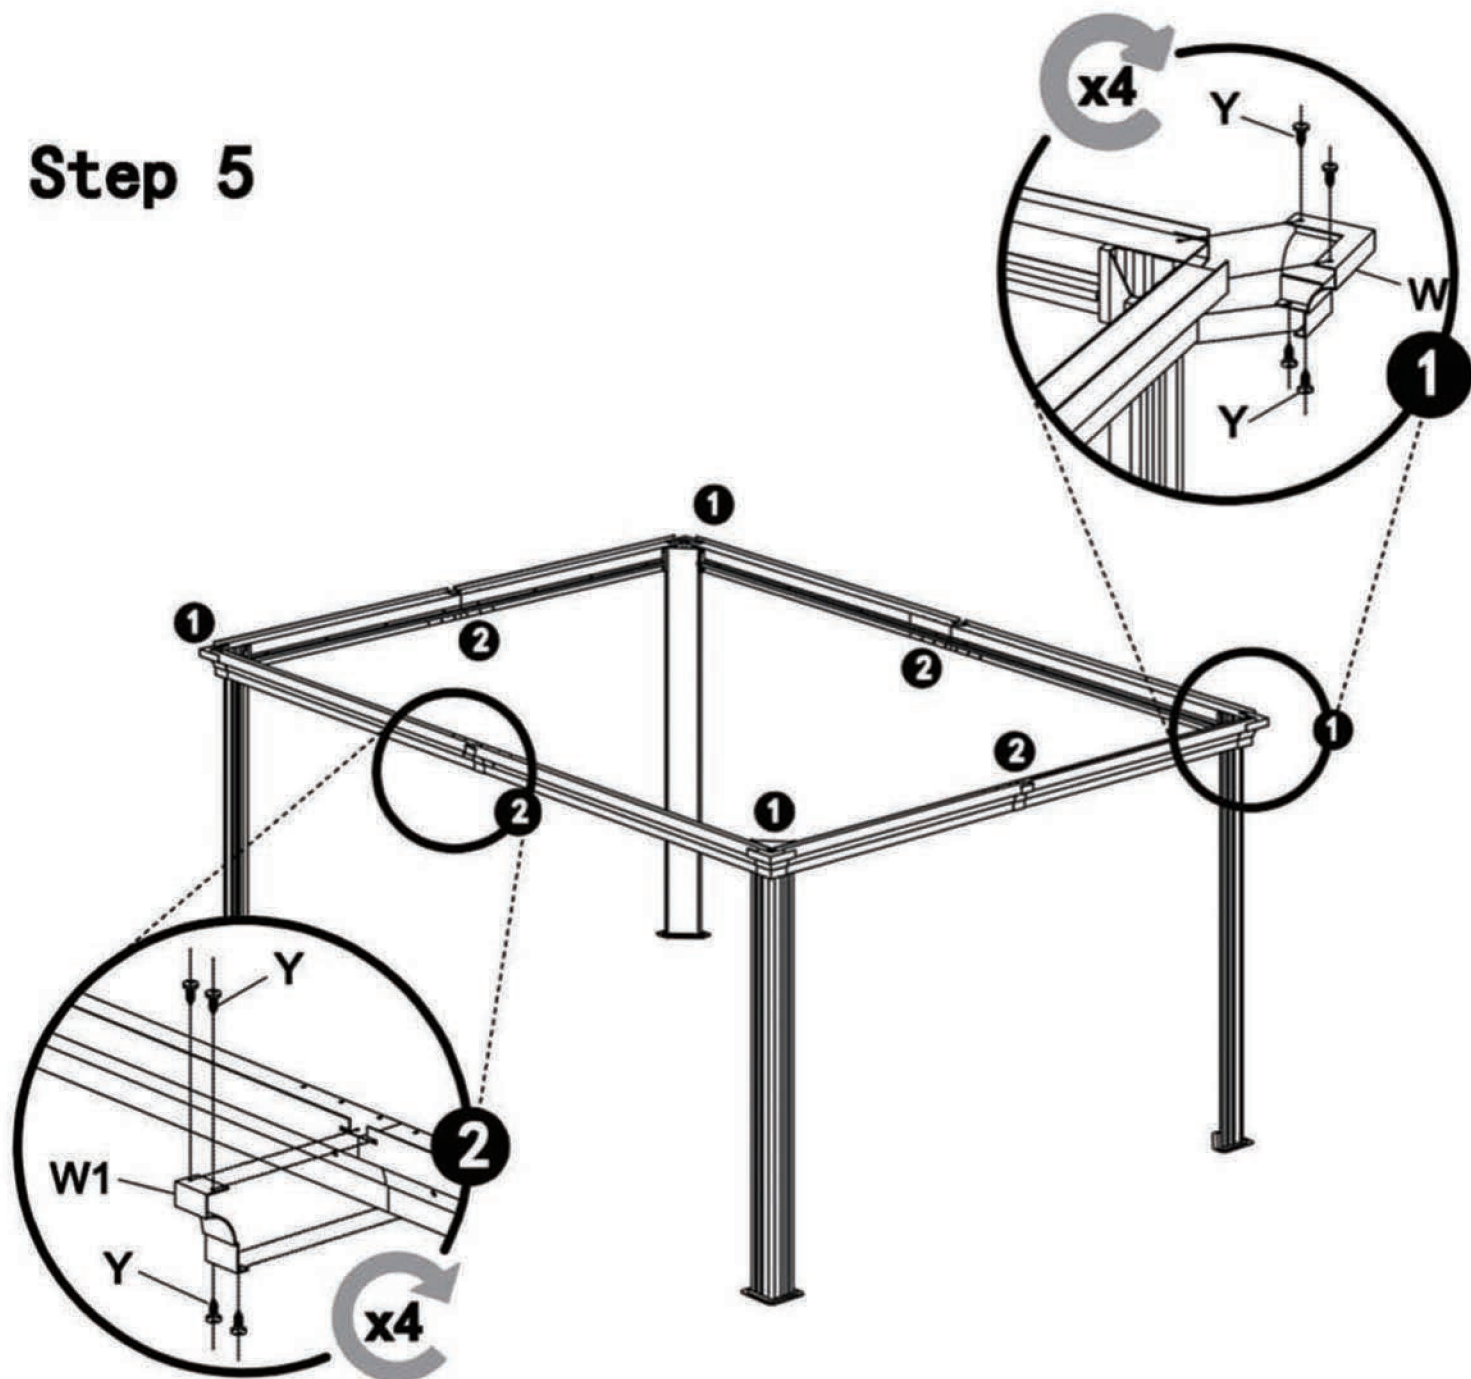  

 
 
Step 6

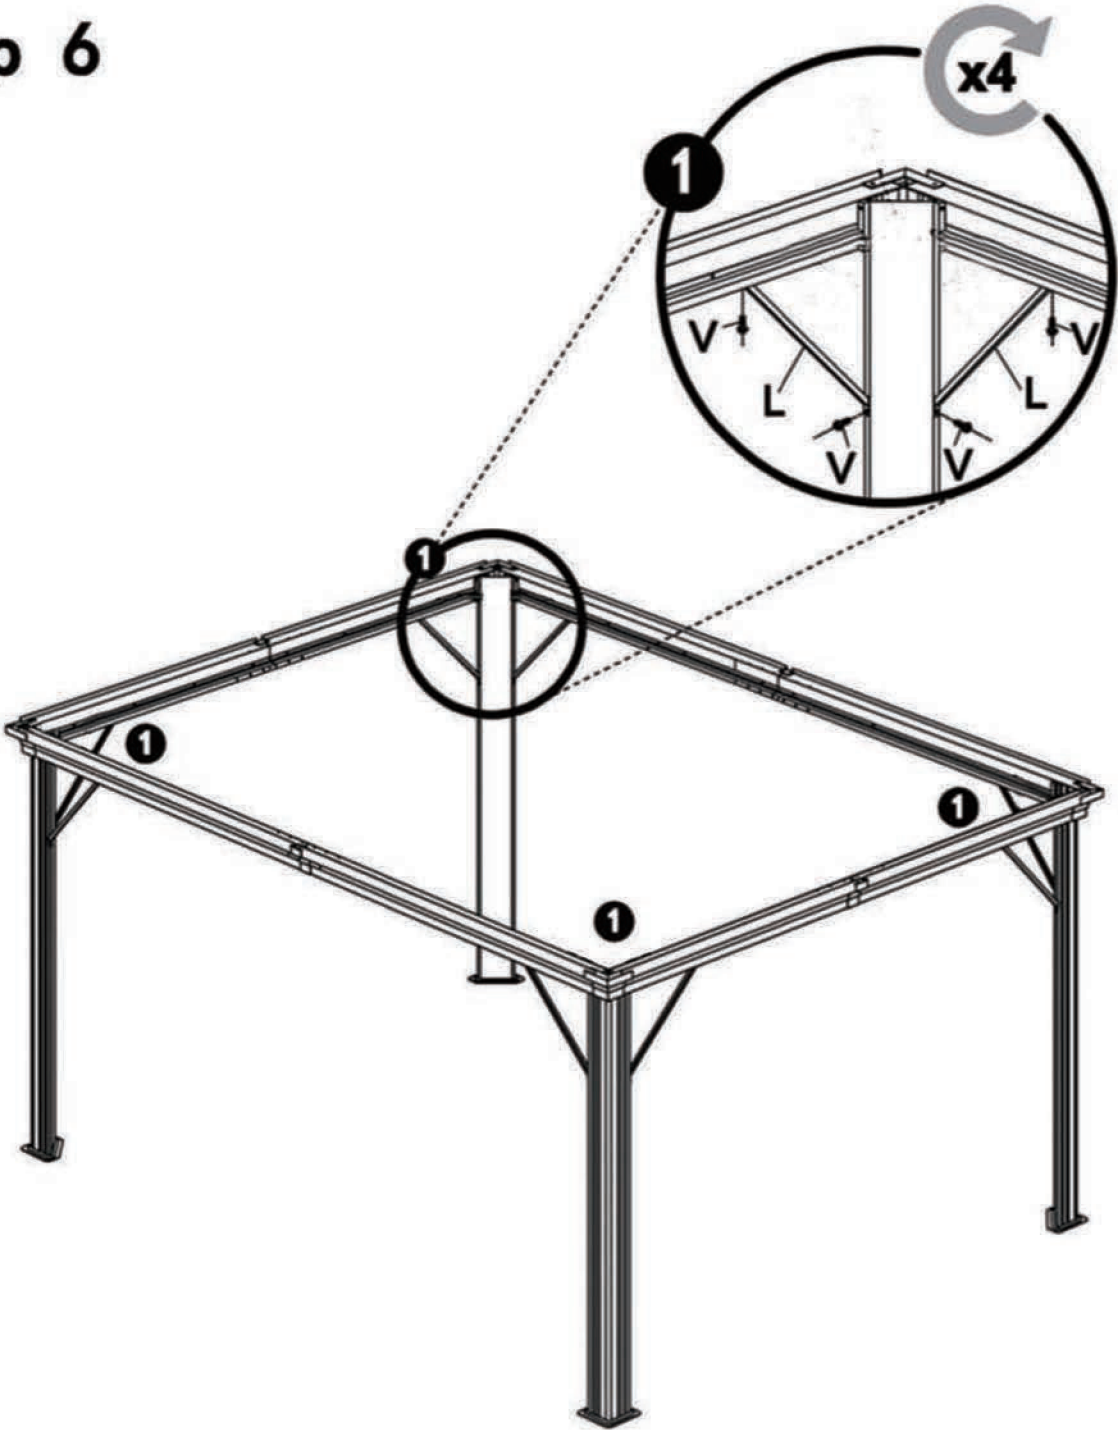

## Step 7

 
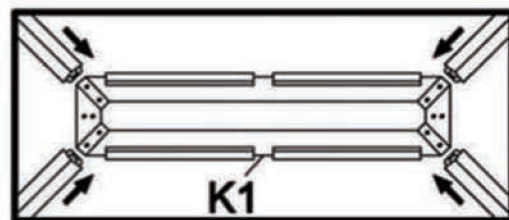 
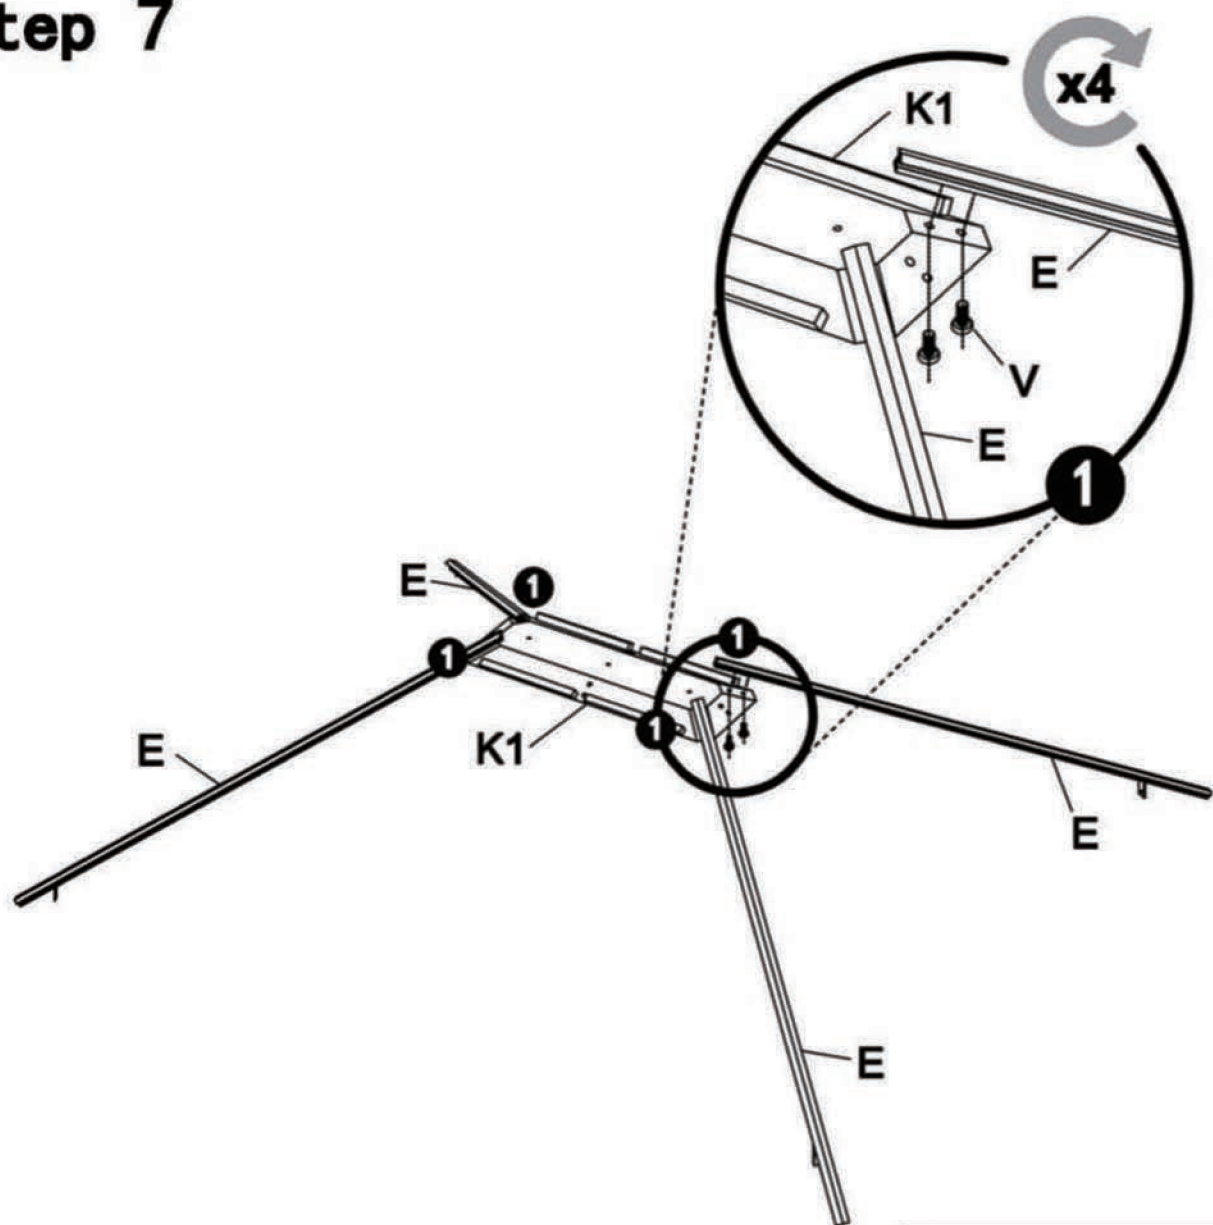 


## Step 8

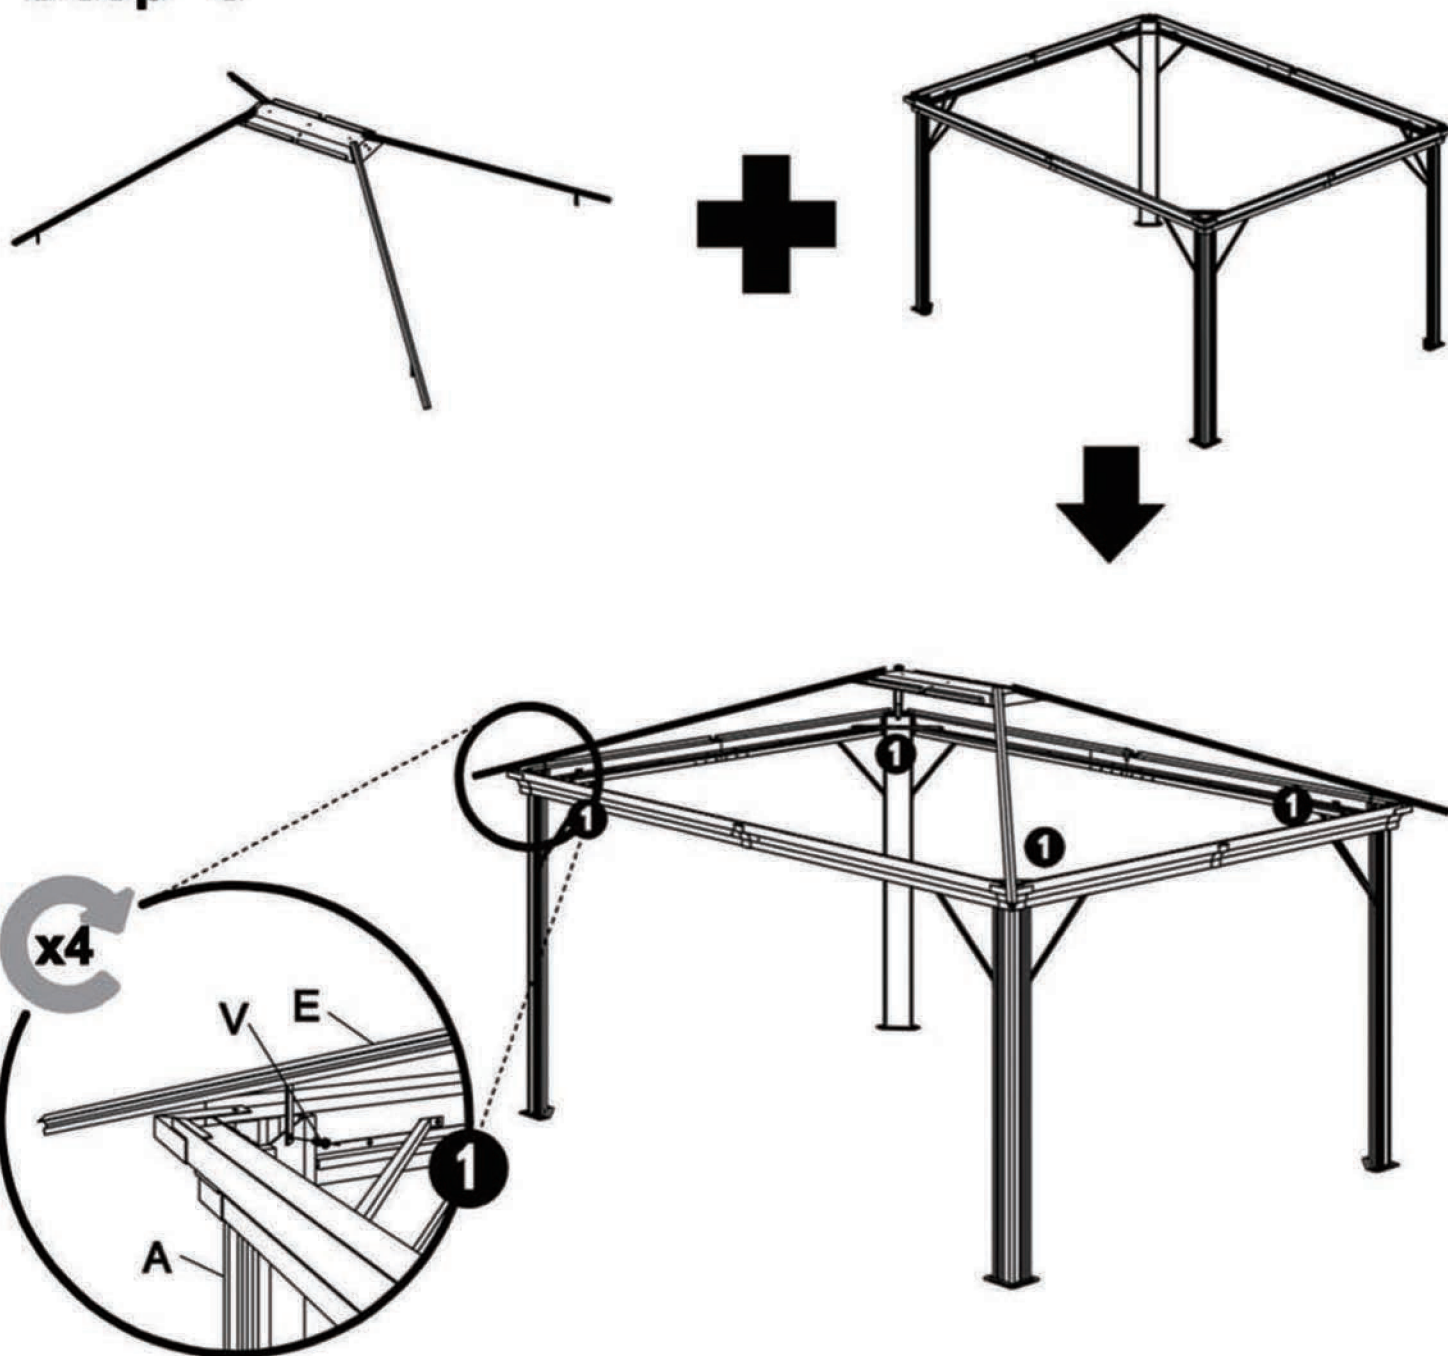  





## Step 9



 
 
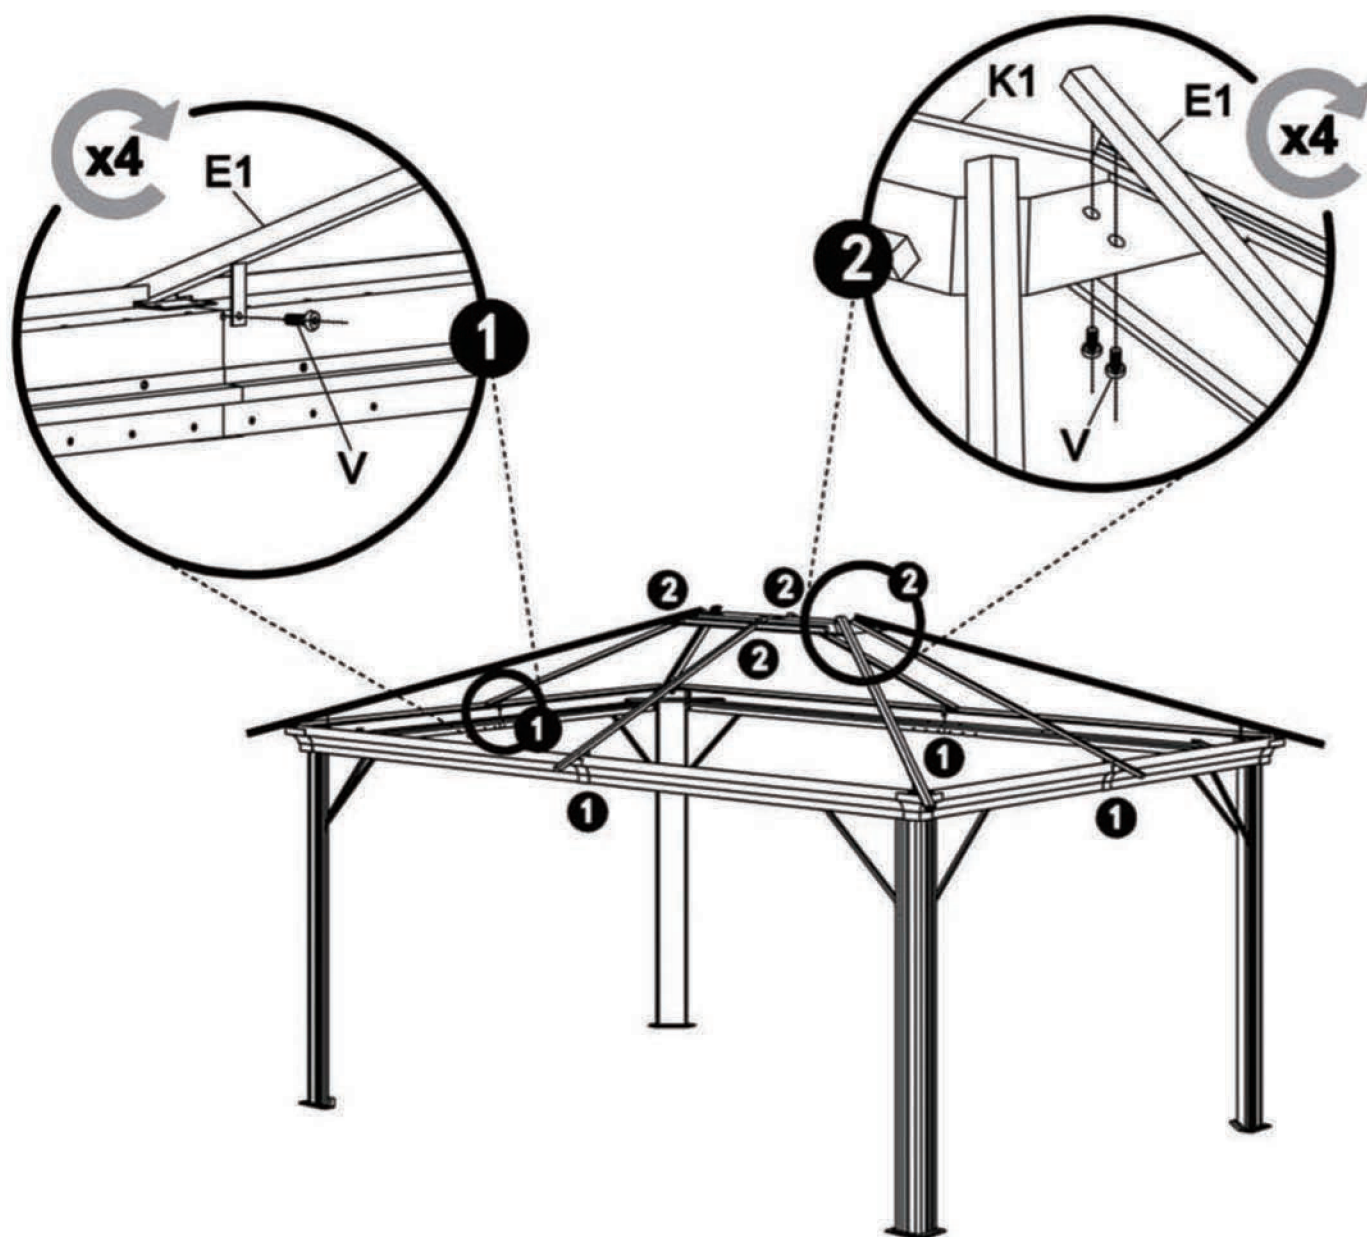 




# Step 10

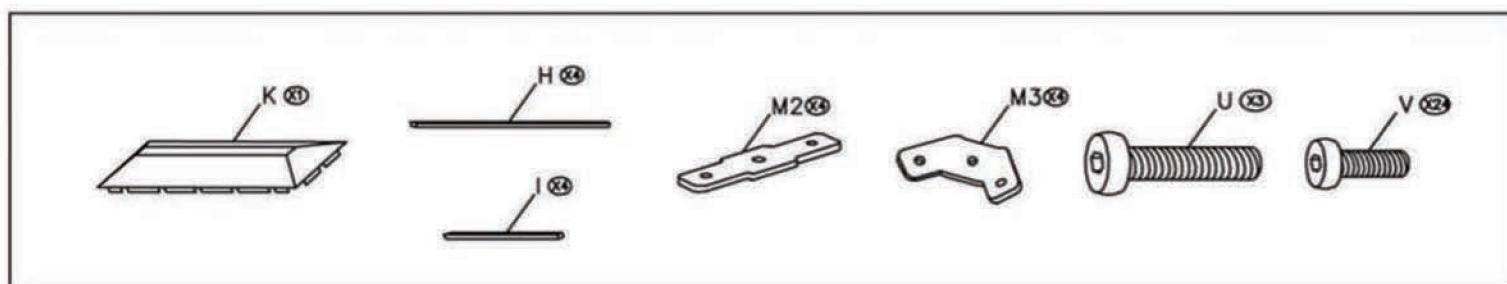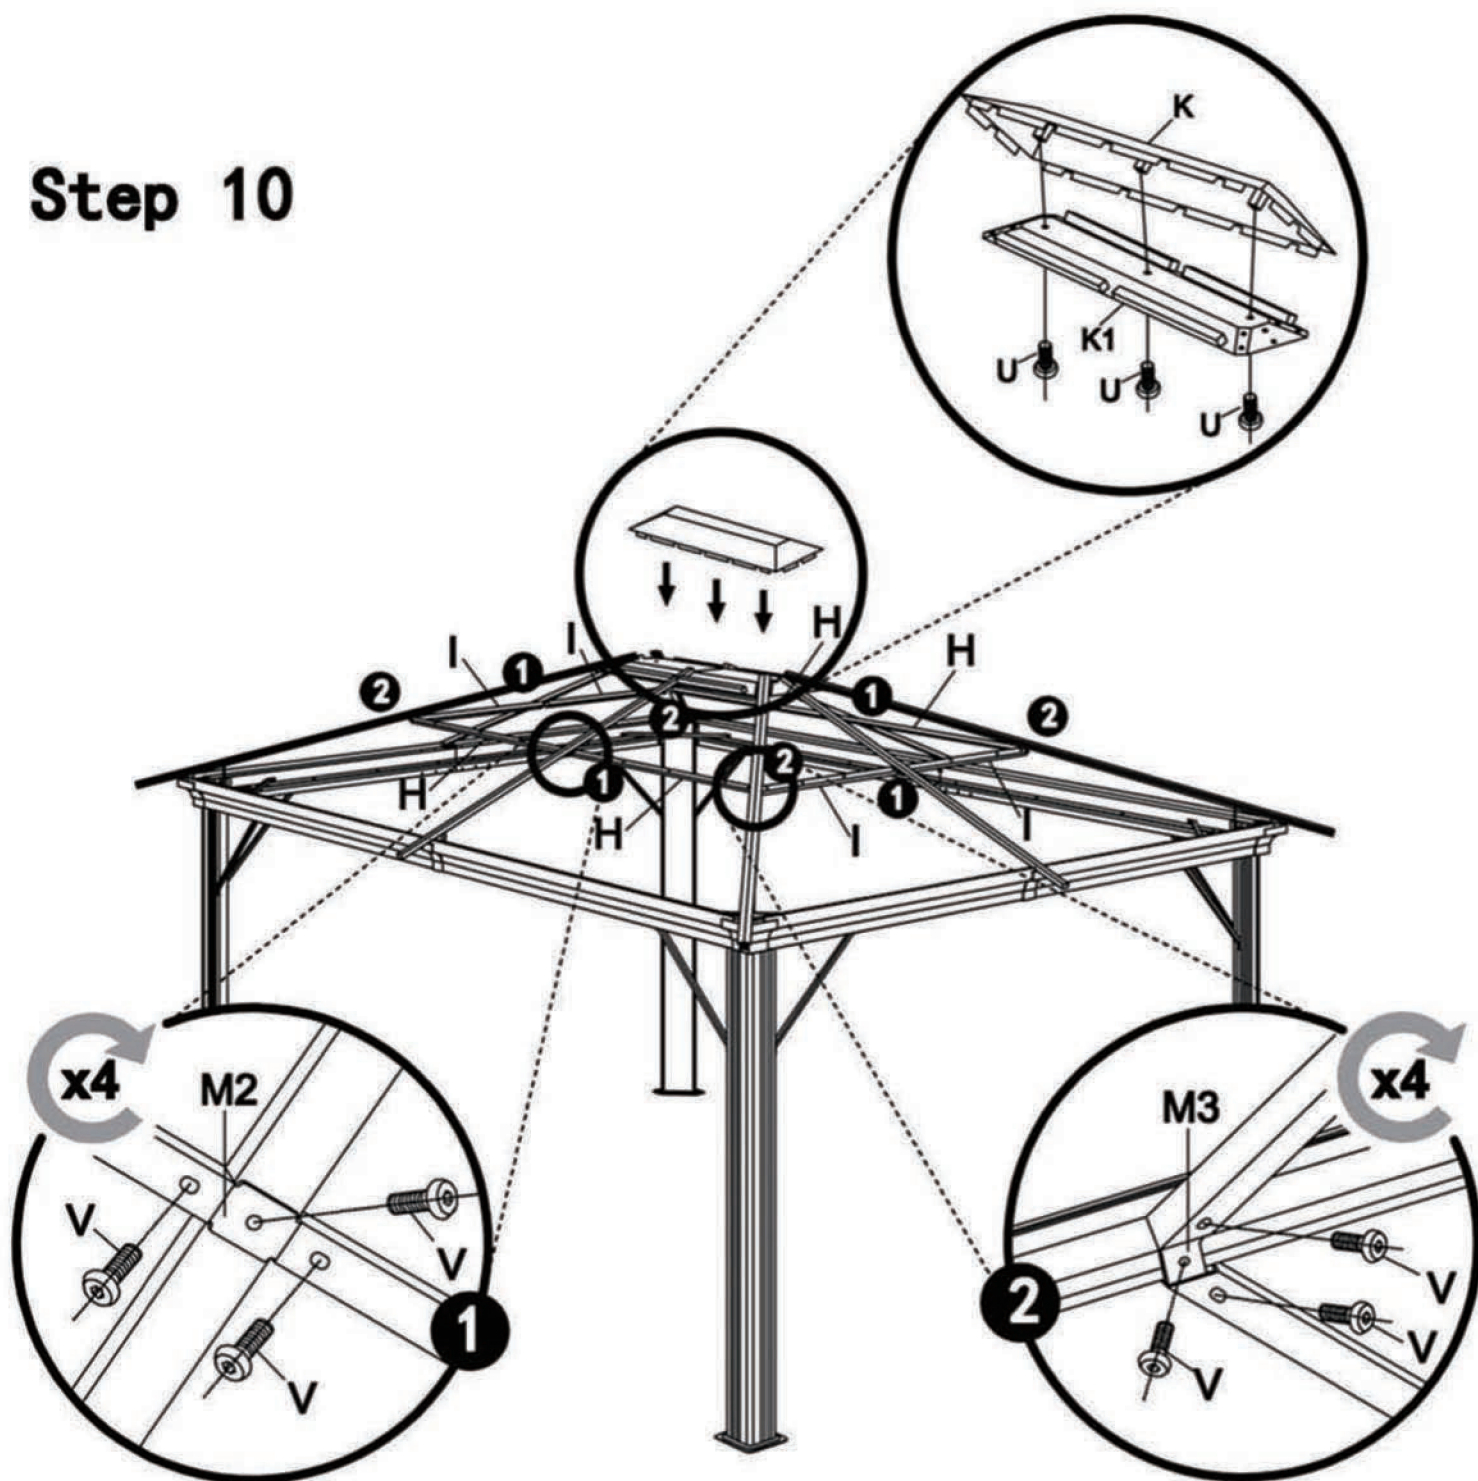  


# Step 11

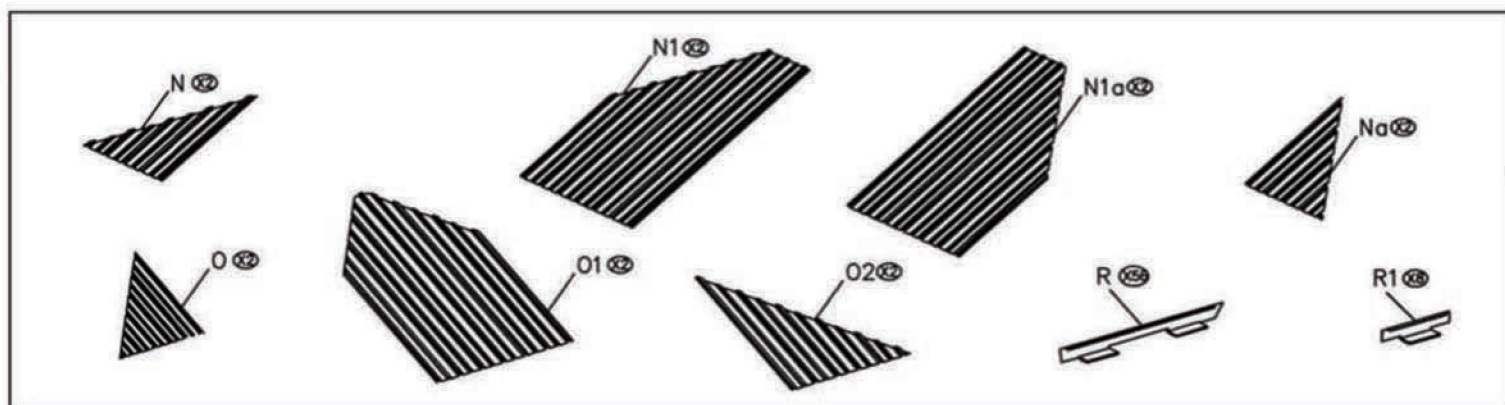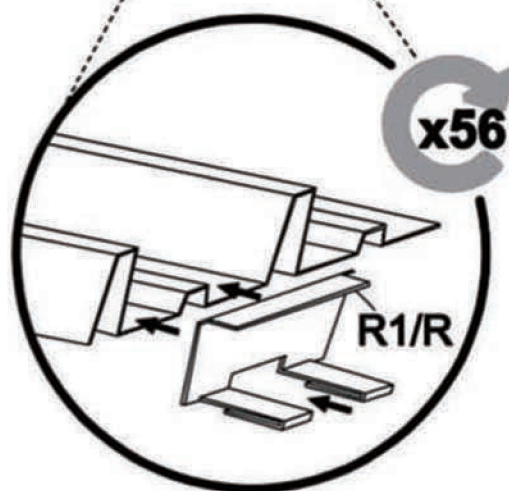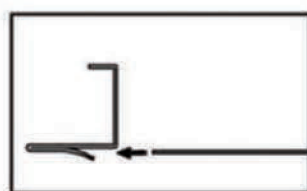   
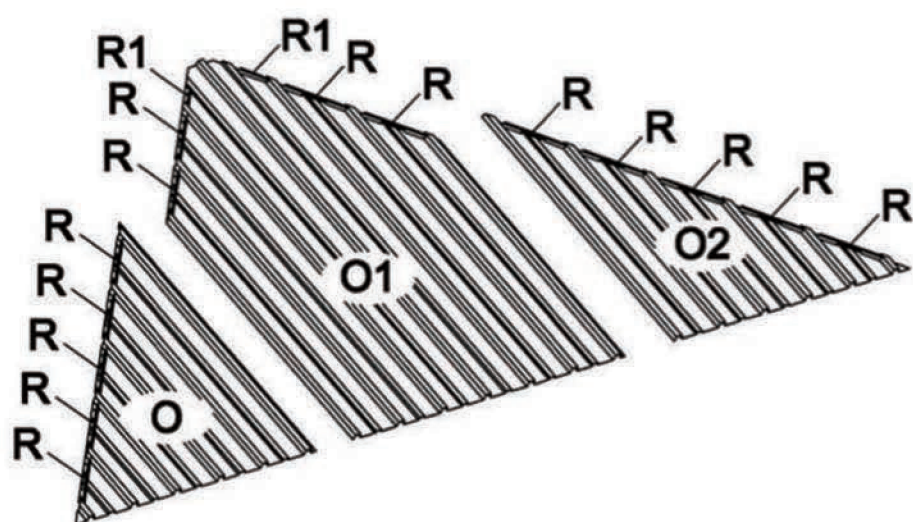 
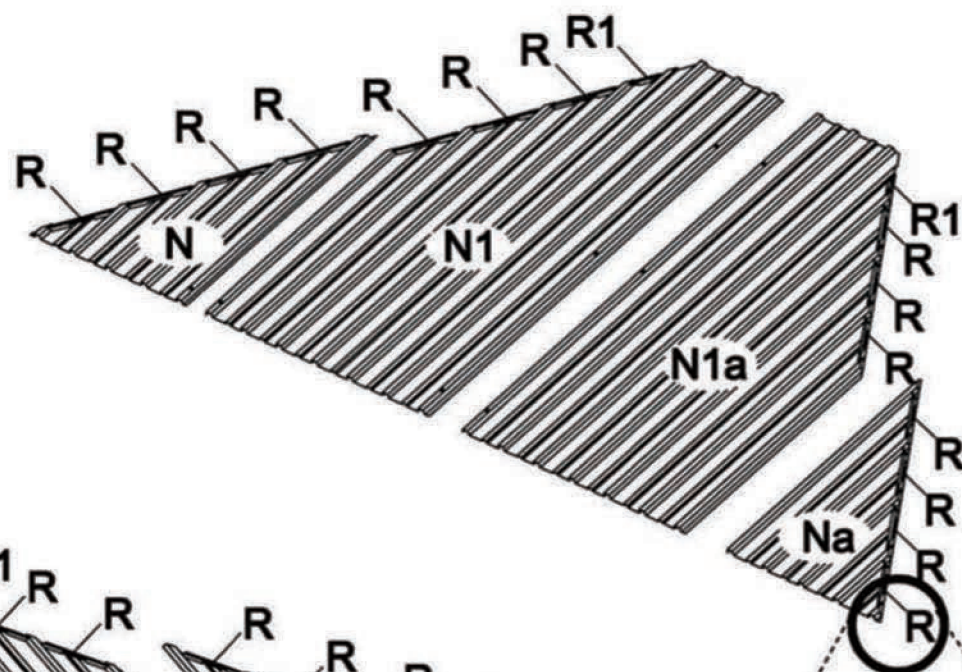 




## Step 12






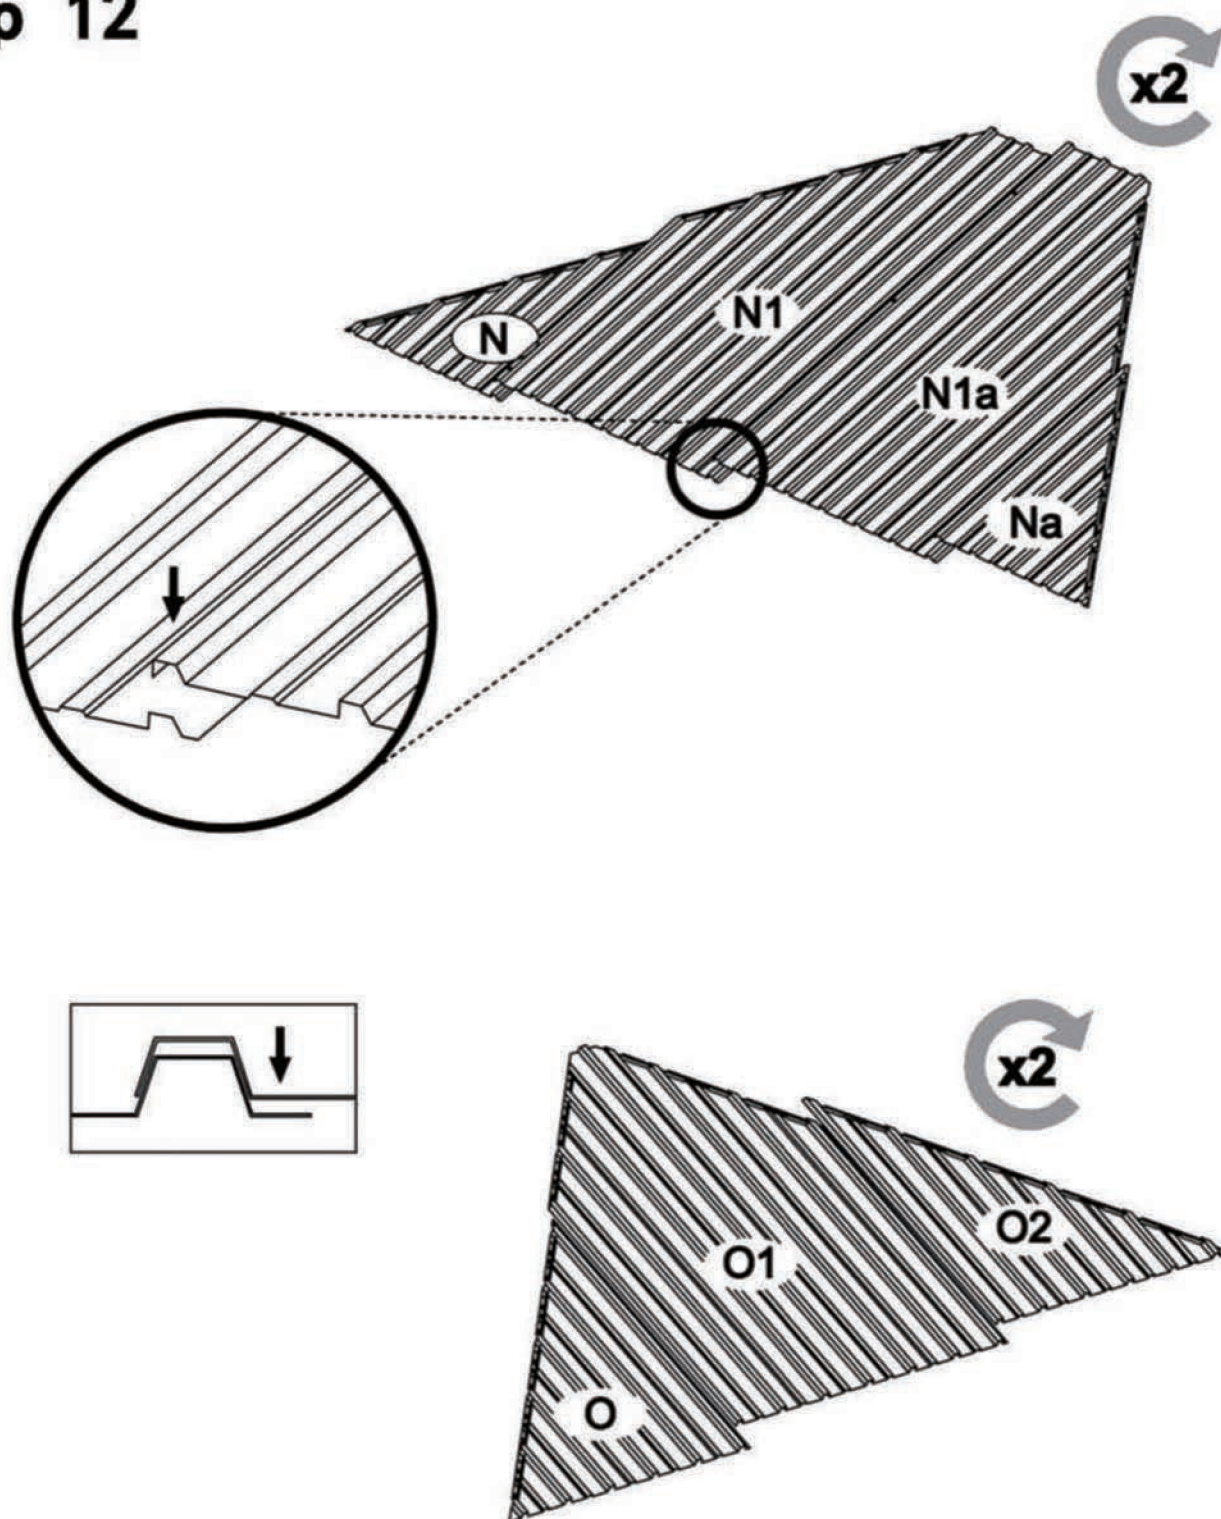 


# Step 13

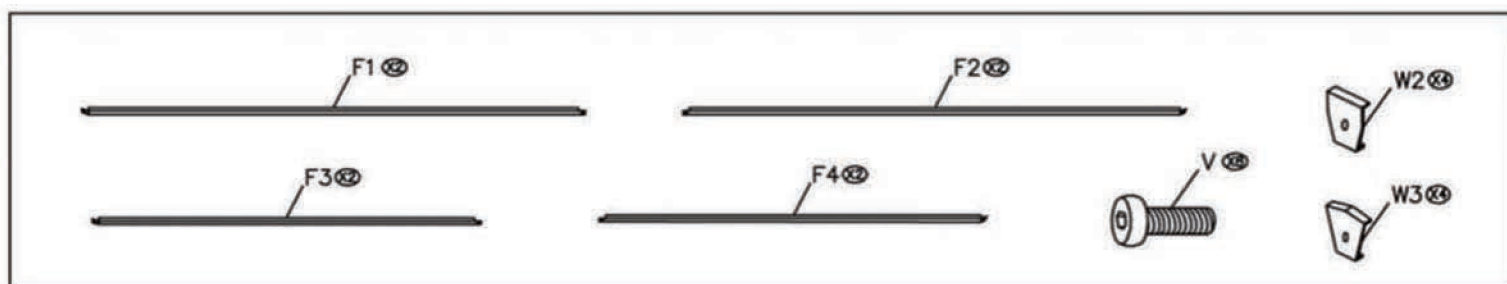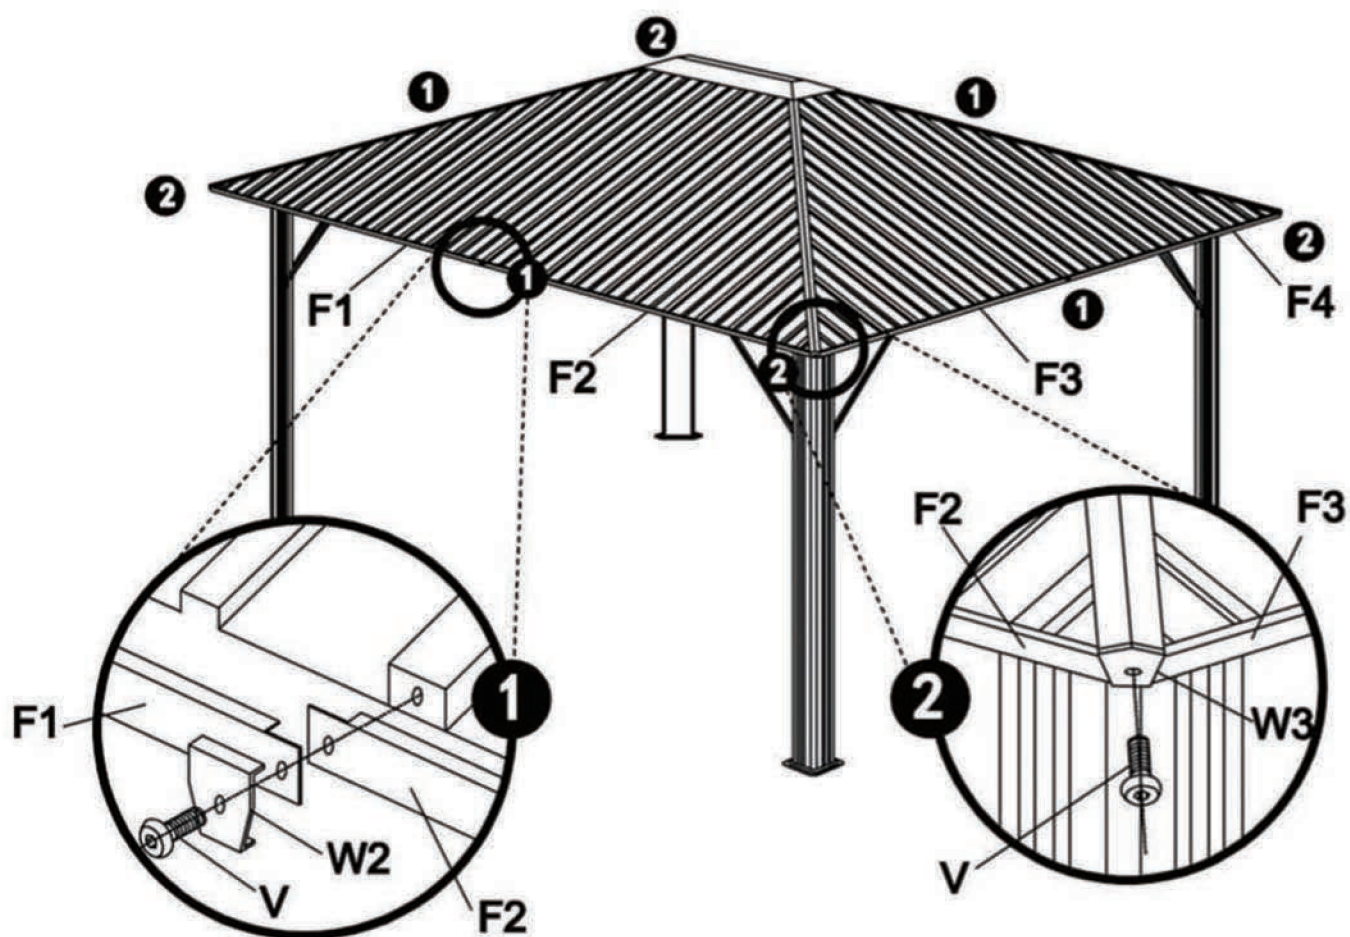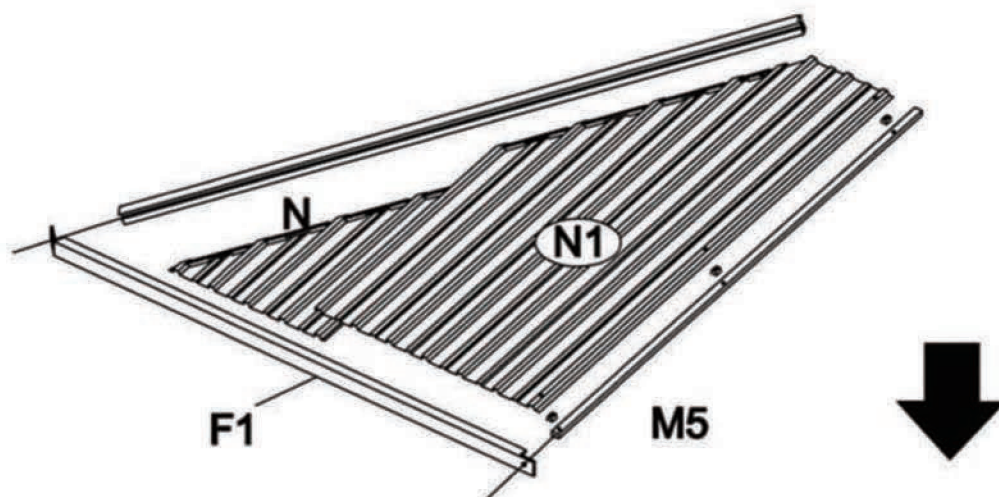   




# Step 14

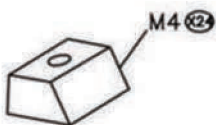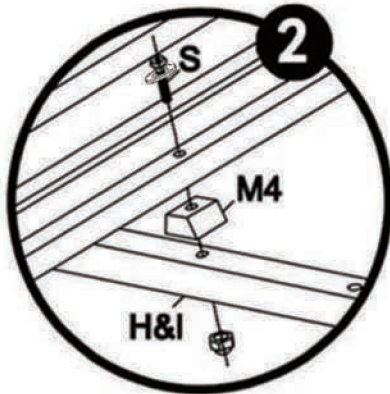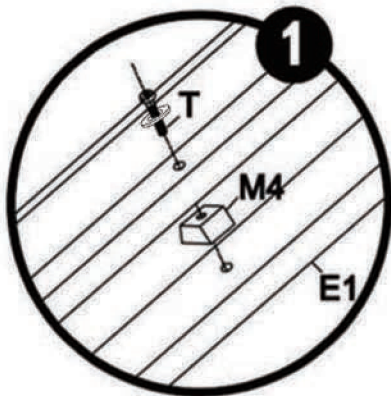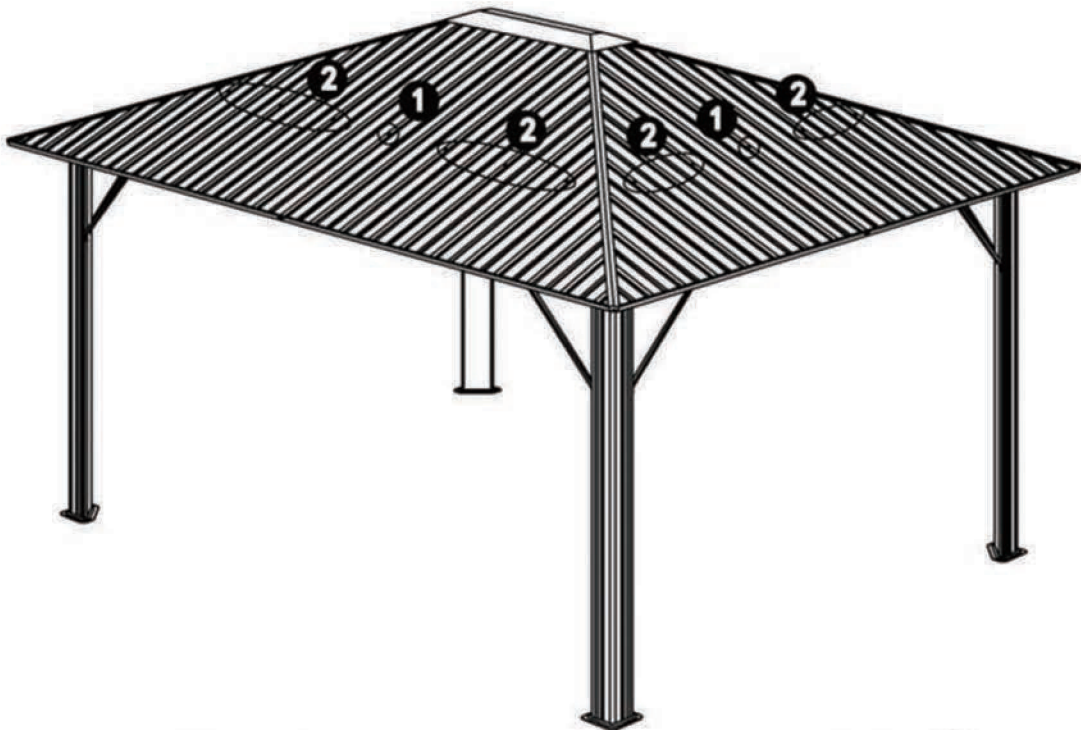      




## Step 15

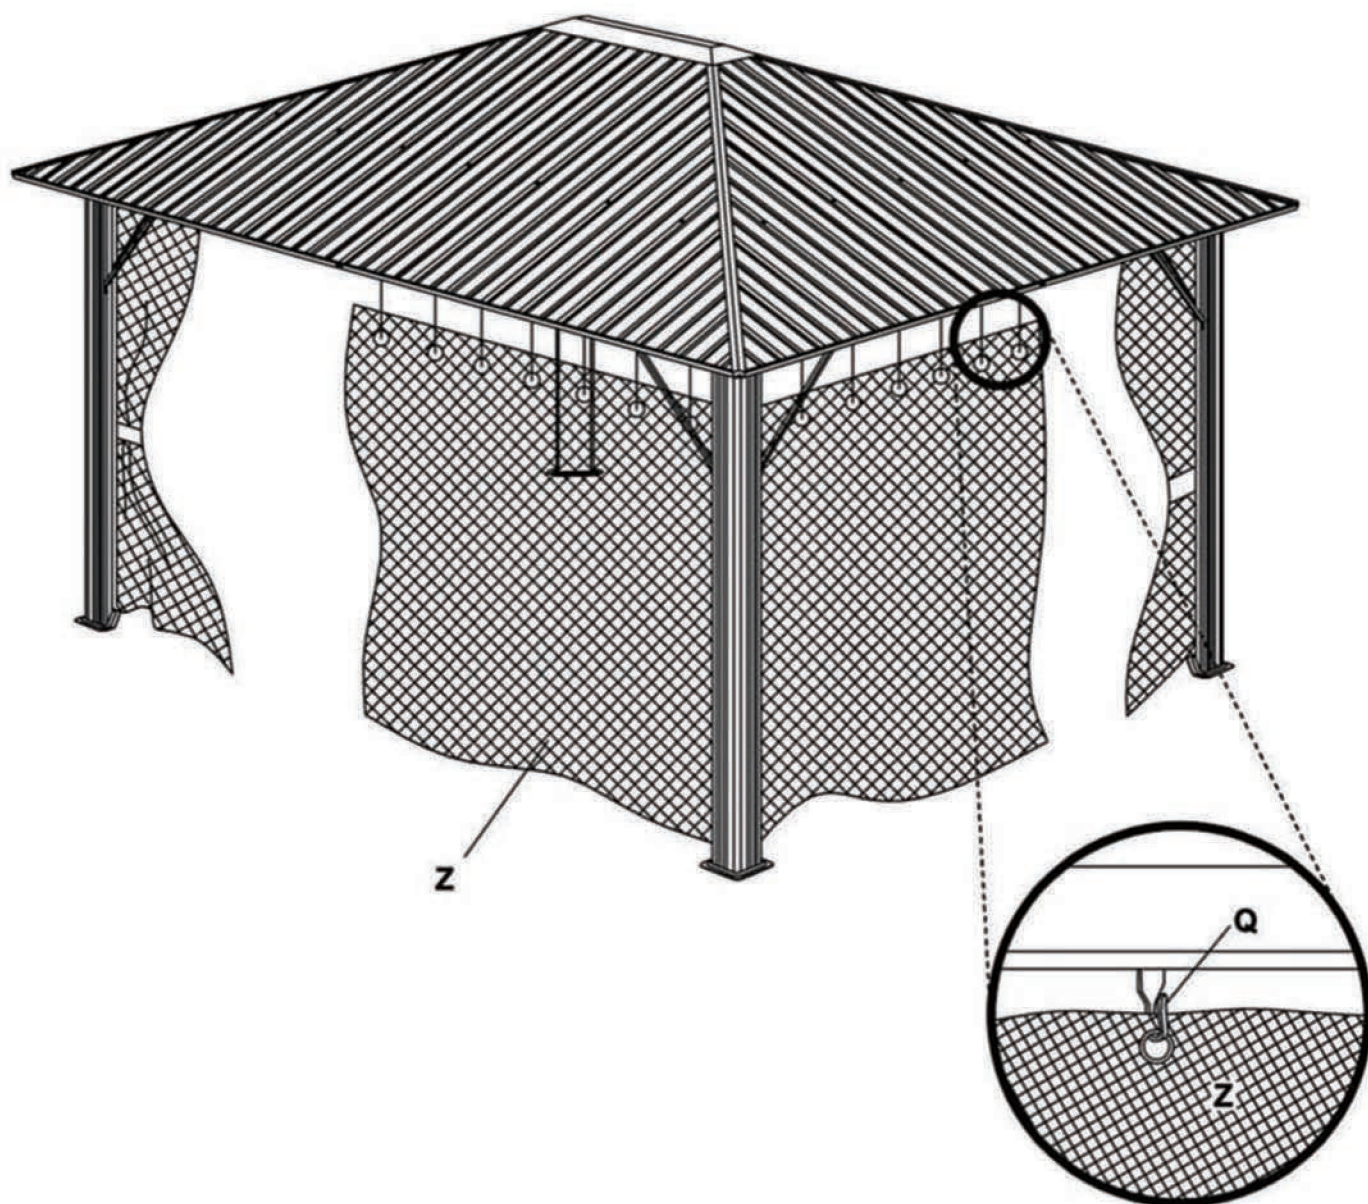 

## Step 16

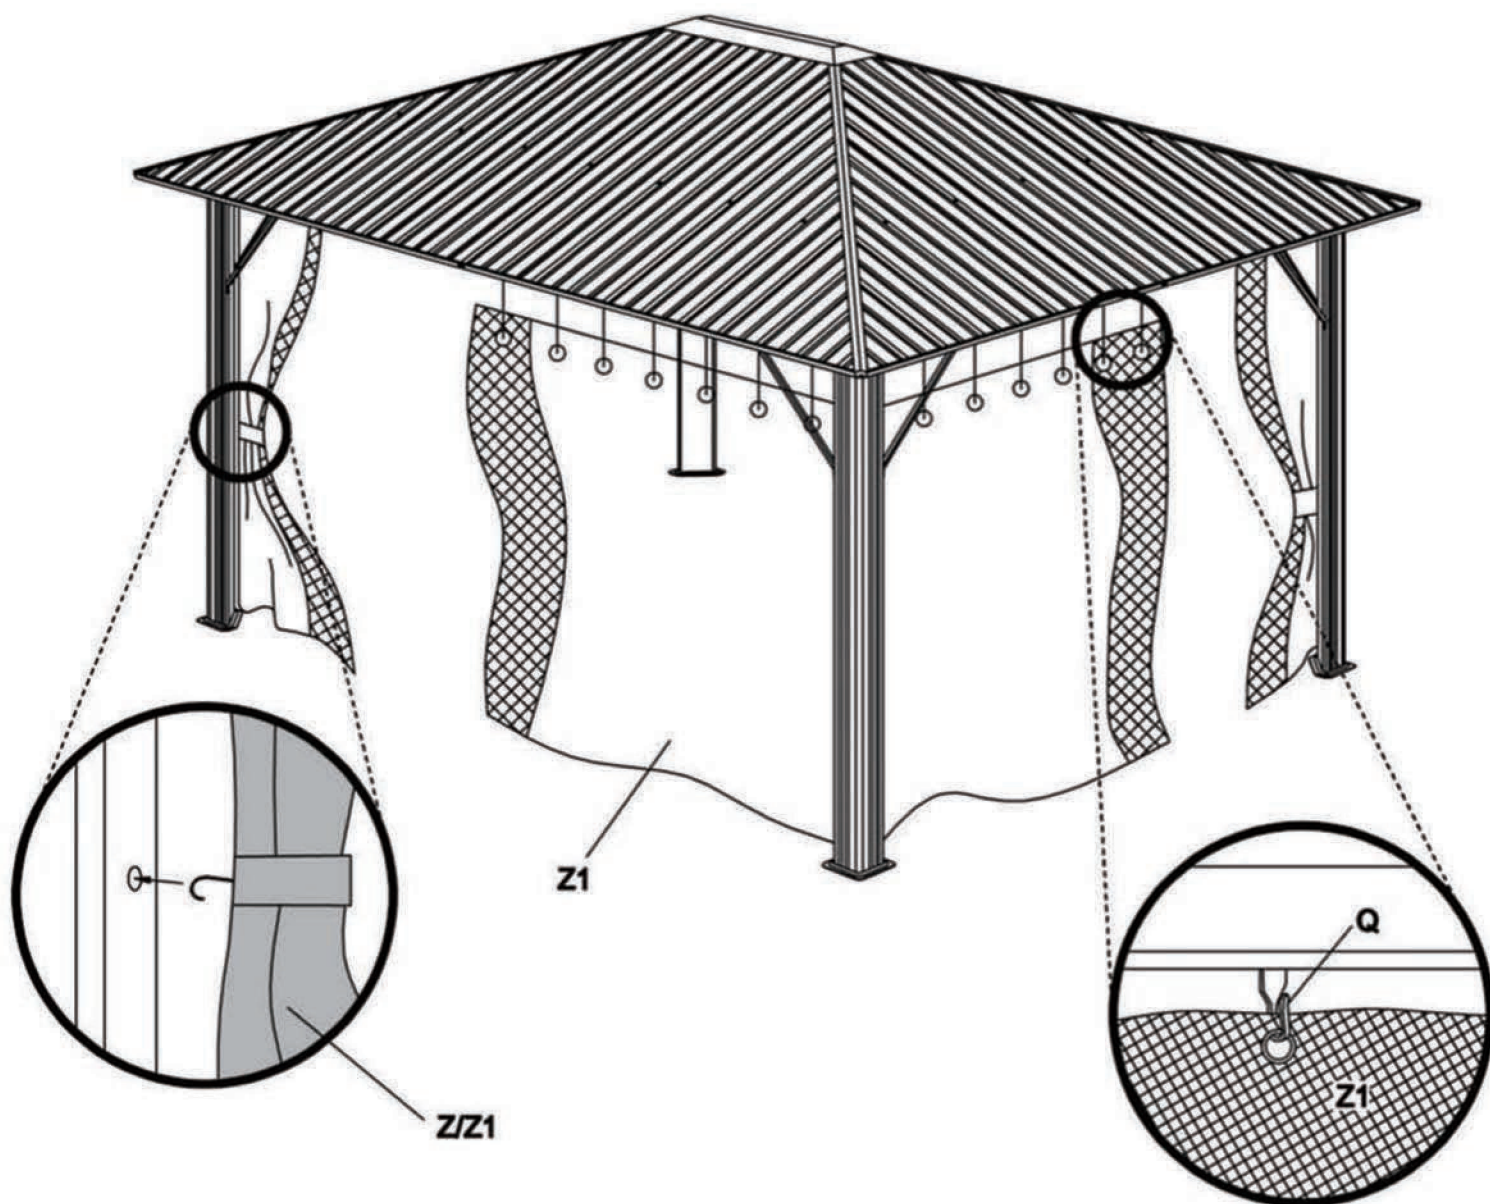 



## NOTICE

Your proper assembly, installation and use of this structure will ensure many years of valued service from this unit. Please follow all instructions carefully and heed warnings on the carton, included in the box and sewn into the inner tent seams for your own protection and longevity of this unit.

It is built of high quality materials but must be used as intended or it's lifespan will be drastically reduced. Never climb on top of this structure. Do not rest heavy objects against the side of the structure. Failure to observe or comply with these instructions will void the manufacturer's warranty and dramatically reduce the lifespan of the unit.

This unit is not intended as a permanent structure and should not be left up for extended periods of time. It is not designed to withstand sustained winds or rain. It is a portable, temporary shelter from the sun, light rain and, in the case of screened units, flying insects.

During rain, if water begins to pool on any roof surfaces, use a blunt ended long pole, such as broom or mop, to gently push up on the roof from below to drain water.

Please utilize a minimum of three persons and a step ladder to erect this structure safely. Do not attempt to erect the structure during heavy winds or inclement weather. When the structure is erected, please use guy ropes and stakes to secure tightly at all times. If using on a solid surface such as hard ground or concrete/asphalt, be sure to use cinder blocks as anchors on each corner to which you can tie the support/guy ropes. If winds are heavier, it's a good idea to use cinder blocks in addition to ground stakes for extra anchoring support.

## WARNING

Do not use candles, matches or open flames of any kind in or near a tent.

Do not cook inside a tent

Build campfires downwind and several metres away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night

Exercise extreme caution when using fuel-powdered lanterns on heaters inside a tent and use battery-operated and use battery-operated lanterns whenever possible

Do not refuel lamps, heaters or stoves inside a tent

Extinguish or turn off all lanterns before going to sleep

Do not smoke in a tent

Do not store flammable liquids inside a tent

# ALEKO®

**8307 S 192nd St Kent, WA 98032**

**Phone: 833-926-2323**

**hello@aleko.com**

**www.ALEKO.com**