

ALEKO®

Hanging Swing Installation Manual



Model : AT2009

Safety and Assembly Instructions

IMPORTANT

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS, KEEP FOR FUTURE REFERENCE



WARNING! CHOKING HAZARD-SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS. WARNING! MAXIMUM WEIGHT SHOULD NOT EXCEED 150KGS.

WARNING! DO NOT USE WITHOUT ADULT SUPERVISION!

WARNING! ADULT ASSEMBLING REQUIRED!

ESSENTIAL INFORMATION

- Recommended for children 3+ years
- Do not leave child unattended while in use
- CAUTION: Use only under adult supervision
- Good safety practices should be followed at all times
- Read all instruction before using this product.

Intended solely for family and domestic use, not for a commercial playground or daycare. Two adults needed for assembly. Maximum weight capacity: 150KGS.

Hanging hardware not included. Ideally, the swing body should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 40cm; the maximum fall height should not be more than 46cm, Two S hooks are attached to the rope to allow for adjustment of the rope length.

Please be sure to examine the ropes regularly to check for wear. Rope will, in time, degrade. If the color of the rope has become pale, frays easily, or gives off a powdery material when rubbed between the fingers, we recommend you replace the rope.


Equipment should be hung in such a way that a distance of at least 2m is clear on either side. Can be hung on an A-frame or swing set or on a tree limb of a diameter of at least 25cm.

WARNING! Small parts for assembly by an adult.


Tools Required (included in the packaging)



Assembling steps

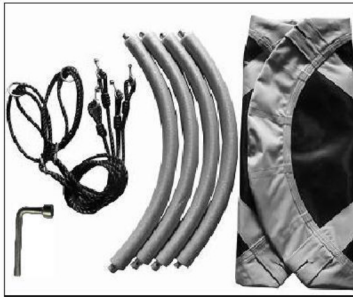

1. Swings arrives in 4 poles, and 2 hanging ropes, a swing mat for assembly.

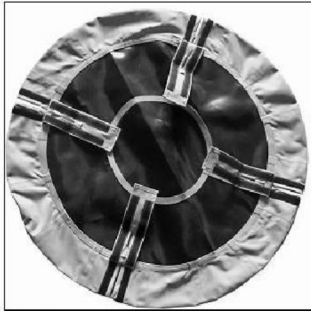

2. Place the swing mat on the floor, and open the 4 velcro covers as shown.



3. Insert the curved frame pole with foam into the sleeve opening as shown.



4. Put the pole like this.



5. Put 2nd pole to the sleeve, small socket to the big socket of the 1st tube, and connect it.



6. Repeat on each side so it folds in half like diagram shown



7. Connect remaining frame poles to form a full circle.



8. Insert the rope with rings through the slit in velcro



9. Unscrew the nut and washer from the eyelet of bolt.



10. Insert the eyelet bolt go through the frame pole hole.



11. Attach the washer and nut to the eyelet bolt.



12. Using the wrench to tighten the nut onto the eyelet bolt.

 13. Close the velcro cover and continue this step on the next hole.	 14. Top looking and appearance	 15. Assemble finished, and ready for swing.
--	---	---

Ensuring Safety of the Swing

Clearance distance should be 4m around the swing.

A fall onto a hard surface can result in serious injury to the equipment user.

Do not use the equipment until properly installed.

This swing is not to be used in any other manner other than its intended use.

Adult supervision is required.

Adults should verify that the hanging ropes are secured and cannot be looped back on the swing.

It is important for adults to instruct children to:

- Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous)
- Sit in the center of the swing with full weight on the seat if swinging alone
- Avoid swinging empty seats

It is important for adults to instruct children **NOT to**

- Walk close to, in front of, behind, or between moving items
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope
- Get off the sing while it is in motion
- Climb on the swing when it is wet.
- Attach additional items to the swing that might cause a strangulation hazard.
- Wear a bicycle or sport helmet while on the swing.

Maintaining the Swing

At the beginning of the each play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners, Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration, Replace as needed. The hardware used for this swing(binding post, screw, S hook, lock washer, flat washer, and metal ring) can be found at local hardware store.

ALEKO®

8307 S 192nd St Kent, WA 98032

Phone: 833-926-2323

hello@aleko.com

www.ALEKO.com