

Arm-bar Link Replacement Steps



STEP1: arm-bar link



STEP2: take out the screw on the arm-bar link



STEP3: connect the arm-bar link to front tube



STEP4: put the arm-bar link into the front tube



STEP5: use wrench to tight the screws



STEP6: then connect it with armrest



STEP7: use wrench to tight the screws



STEP8: after tight the screws



STEP9: have been installed