

ALEKO LUXURY AND PATIO AWNING REMOTE PROGRAMMING STEPS

Left-Side Motor Programming


Step .1



Pair Your Remote:

Turn your awning remote to the back side where the battery is located and remove cover.


Step. 2

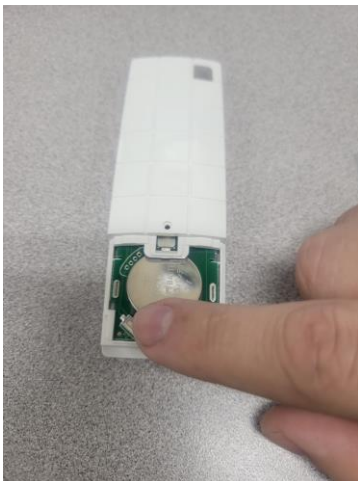

- Push the P2 button located near the battery pack twice. The awning motor should beep twice.

Note: LED Luxury awnings can only be mounted on the left Side of the Awning.


Step. 3

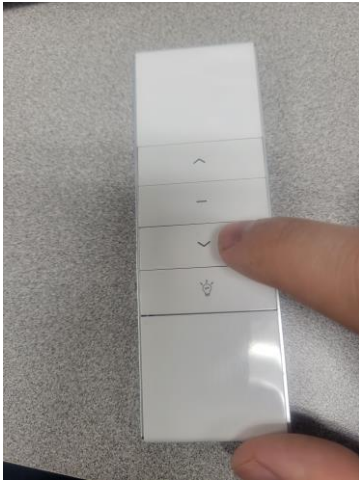

After turning your awning remote to the front side, push the Down button. The awning should Jog and Beep several times.

[This process is the same for LED and Non LED Awnings]

Step. 4

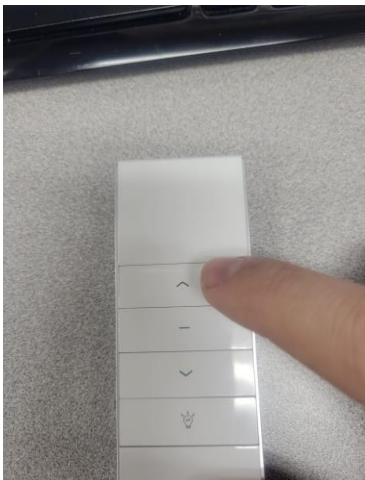


Lastly, push the UP Button on the Remote. The awning should retract and programming will be complete.

Make sure that all these steps are being performed withing 10 seconds.

Note: If awning is not programming after

[Event Date][Event Time]

Right-Side Facing Motor

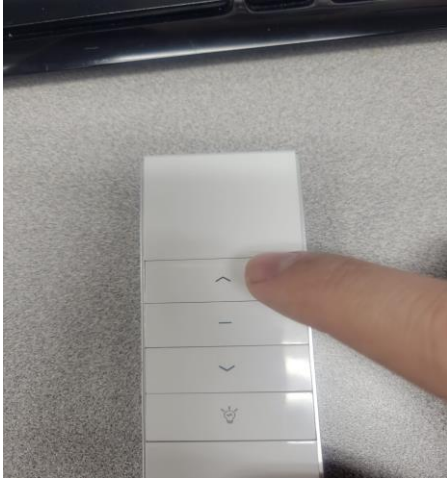


Programming steps:

Steps. 1 & 2 are the same for Right Facing Motor.

Push The Up Button Twice on the Front side of the Remote.

- Your Remote should be programmed and beep several times.
- Makes sure that you are performing the above steps withing 10 seconds.

Awning Remote Reset

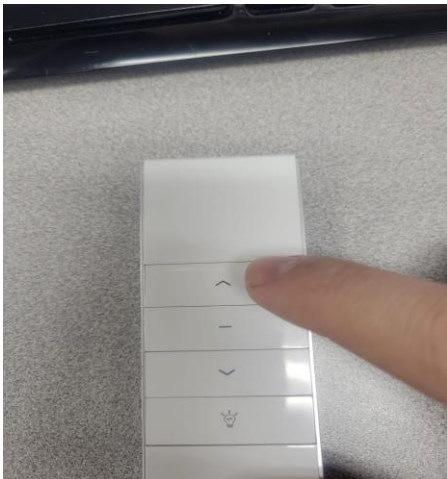

Reset The Remote:

If awning Remote is not Programming or if you need to troubleshoot your remote try the Following steps:

Press the P2 on the remote then Immediately press the STOP button.

- Lastly Press the P2 button one final time then unplug the motor and plug it back in.
- You can now reprogram your Remote according to its orientation.

ALEKO PRODUCTS

8307 S 192nd St Kent WA 98032

PHONE: [\(833\) 926-2323](tel:8339262323) EMAIL: hello@alekoproducts.com |