

SKU: HTISQ4BKWH

# Inflatable Jetted Hot Tub

SKU NO:	HTISQ4BKWH
Color:	Black & White
Number of people can fit in:	4
Water Capacity:	158 gallons
External diameter:	59' inches
Internal diameter:	43' inches
Height:	25.6' inches
Heater Motor:	1200W   1.63 HP
Jet/Bubble:	600W   .81 HP
Cable length:	10 ft
Top Cover:	Laminated PVC w/ heat reflective coating

## What's in the box:

- ☐ Inflatable Hot Tub
- ☐ Hot Tub Top Clip-On Cover
- ☐ Protective Ground Black Tarp for outdoor installation
- ☐ Three (3) filters with covers – only two (2) filters needed
- ☐ Two (2) repair patches. **Glue is not included**
- ☐ Inflation Hose
- ☐ Assembly Guide

---

## Inflating/Deflating

### Inflating:

1. Unfold and spread the spa & the cover.
2. Open the air valve located on the bottom right side of the heater.
3. Open the air outlet located in the middle of the heater. (Nearby "Aleko" logo)
4. Connect one end of the hose to air outlet & other end to the air valve
5. Press "BUBBLE" button on the digital controller to inflate the spa\*

**\*Note: Do NOT overinflate the spa.**

**Jet & Bubble are the same icon on the controller**

---

### Deflating:

1. Open the air valve located on the bottom right side of the heater.
2. Gently press each side of the spa to deflate faster\*

\* You will have to use similar method used to deflate an air mattress.

---

### Filling the Spa

1. Fill the spa using a garden hose to fill to the water level printed on the heater wall
  2. Press “**Filter**” button, the filter pump will start working and red light will turn on the digital controller
- 

### Maintenance

- Hot Tub water should be changed every few days
  - Use correct spa chemicals (Do **not** use calcium containing chemicals).
  - Use water chemical test kit prior to using the hot tub
    - Water pH: 7.2 - 7.8
    - Alkalinity: 80 – 120 ppm
    - Chlorine: 3 – 5 ppm
- 

### Error Codes

Code	Cause	Solution
<b>FC</b>	Filtration systems overworked (168 hours +) Heating system will stop working. Red light will turn on the digital controller	Replace the filter cartridge. Press the “FILTER” button to erase the error code.
<b>HL</b>	Heater Overheated	Spa needs to be reset. Unplug the hot tub and leave it for 30 mins to rest
<b>SL</b>	Temp Issue	Call Aleko Tech
<b>SH</b>	Water Temp Issue	Call Aleko Tech

### Troubleshooting Steps:

Issues	Cause	Solutions
Bubble/Jet does not work	<ol style="list-style-type: none"><li>1. Air pump overheated</li><li>2. Powerbox issue</li></ol>	<ol style="list-style-type: none"><li>1. Unplug the air pump to cool it down.</li><li>2. Call Aleko Tech Support</li></ol>
Spa Heater does not work	<ol style="list-style-type: none"><li>1. Temp set too low</li><li>2. Dirty Filter Cartridge</li><li>3. Check Water Level</li><li>4. Heating Element Failed</li></ol>	<ol style="list-style-type: none"><li>1. Set higher temp</li><li>2. Replace Filter Cartridge</li><li>3. Add water</li><li>4. Call Aleko Tech Support</li></ol>
Filter does not work	<ol style="list-style-type: none"><li>1. Dirty filter cartridge</li><li>2. Filter screwed too tight</li><li>3. Low power input</li></ol>	<ol style="list-style-type: none"><li>1. Clean/replace the filter</li><li>2. Loosen the filter</li><li>3. Electrician needs to check power box</li></ol>
Spa Leak	<ol style="list-style-type: none"><li>1. Spa is punctured</li></ol>	<ol style="list-style-type: none"><li>1. Use repair kit</li></ol>
Water not clean	<ol style="list-style-type: none"><li>1. Clean the water cartridge</li><li>2. Improper water maintenance</li></ol>	<ol style="list-style-type: none"><li>1. Increase filtration time</li><li>2. Replace water cartridge</li></ol>