Plug and Play no need for any additional step, the door will Open in daylight and close at night.

Make sure there are no foreign matter in the door to prevent the door from opening and closing automatically.

PARTS INCLUDED WITH YOUR AUTOMATIC CHICKEN COOP DOOR:

8pcs wood screw for installation

Installation manual

TOOLS REQUIRED FOR INSTALLATION:

Screwdriver (specifically for tightening the screws)

Pencil (that writes on all surfaces)

Power drill or screw gun

Jigsaw/keyhole hand saw

Leveler

RECOMMENDED SAFETY ITEMS:

Safety goggles

Protective gloves

CONTACT US:

hello@aleko.com

833-926-2323



CE APPROVED



Thank you for the purchase of this easy to assemble Automatic Coop Door.

This manual is designed to help simplify the assembly process with step-by-step instructions and drawings. Please read through the entire manual before starting.

INSTRUCTION MANUAL

The supply terminals are not to be short-circuited.

Warnings

Non-rechargeable batteries are not to be recharged! Never use rechargeable batteries in the appliance. Rechargeable batteries do not provide the correct supply voltage. Rechargeable batteries are to be removed from the device before being charged.

Never use different types of batteries. New and used batteries are not to be mixed. Always make sure batteries are inserted with the correct polarity (plus "+" and minus "-") before inserting the batteries. Dead batteries are to be removed from the appliance and safely disposed of. If the appliance has to be stored unused for an extended period, the batteries should be removed.

Battery Usage


Use three AA or LR06 size alkaline batteries to power the appliance.


Before buying batteries, make sure that the battery packaging is AA or LR06. Use only batteries with a rated supply voltage of 1.5 V.

Always use new batteries that have not expired to prevent batteries from spilling.


If you use high-quality batteries of recommended brands, they will last you all year round, even in cold or hot climates (from 15°F to 140°F).

Device Description

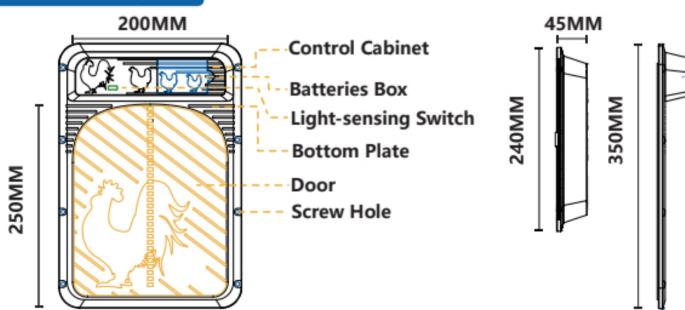

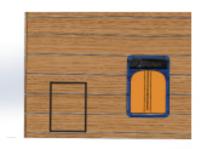



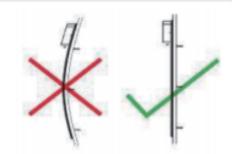

Mark the hole locations for the door.




Saw off the plank of the door opening.




CAUTION!Do Not Bend The Door!




Remove the drive unit and MANDATORY PROCEcheck/place batteries inside. **DURE!Unscrew the 4 screws** on the black drive unit.

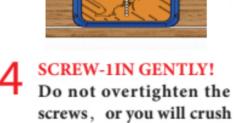

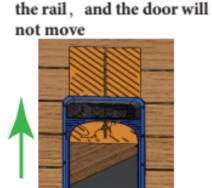




TEST THE DOOR! CAN THE DOOR MOVE UP AND DOWN? This test can greatly extend the lifetime of the battery.

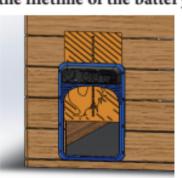

Press the button to see if the device is up and running.

WARNINGS!

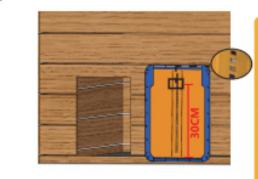

NOTE: Please make sure that nothing is preventing the gear behind the chicken door from functioning properly, thereby affecting the normal opening and closing of the door.

INSTALLATION

Page 2 Page 1