


First

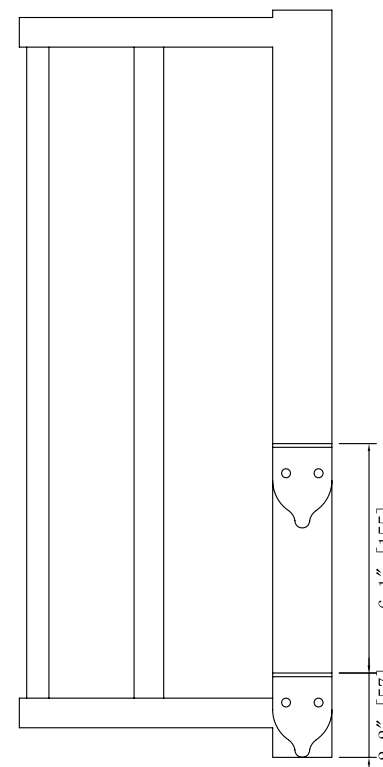

Second

- 1.First assemble the product and fix the position of the clip according to the size shown in Figure 2.
- 2.When it is not needed,lift the rod and rotate the position,the buckle will stick and the rod not fall down.