

ICE BATH MANUAL

CT006&CT007



Catalogue

1.	Introduction	1
1.1	Accessories	1
2.	Specification	2
2.1	General specification	2
3.	Install	3
3.1	Installation process	3
4.	Drain water	4
4.1	Drainage course	4
5.	Maintenance	5
5.1	General maintenance	5
5.2	The use of wood wax oil	6
5.3	Use of rust removal spray	7
5.4	304 stainless steel liner	8
5.5	Filter disassembly process	9
6.	Problem	10
6.1	Common problem solving	10

1. Introduction

Thank you for choosing cold plunge, there are some high quality cold plunge, we hope you buy this product and enjoy the cold bath benefits this product brings to you.

This manual includes general installation and maintenance information. For the maximum performance and life of cold water bathtubs, this manual should be read carefully. For general questions, refer to this manual and keep it for long-term use

Accessories



◎ A wrench ◎



◎Filter element◎



◎ Specification ◎



◎ Stool ◎

2. Specification






2.1 General specification



	CT006	CT007
Length	1625mm	2032mm
breadth	840mm	840mm
height	865mm	940mm

3. Install

3.1 Installation process

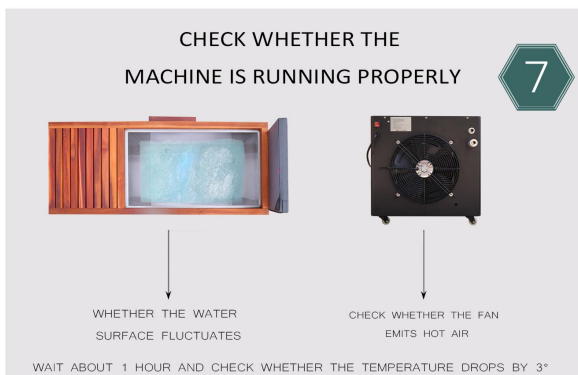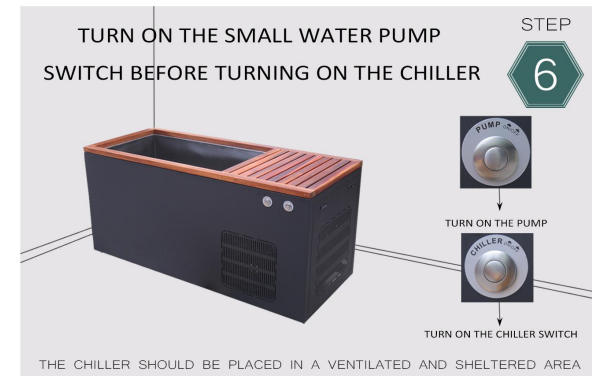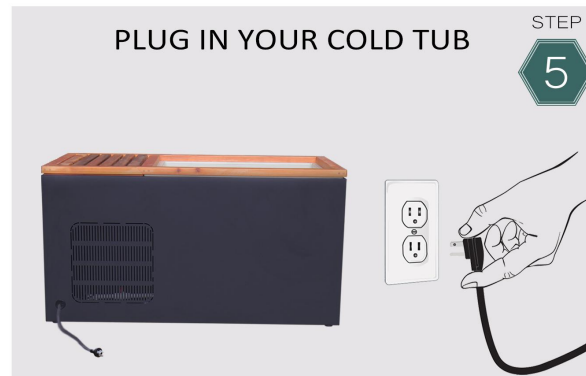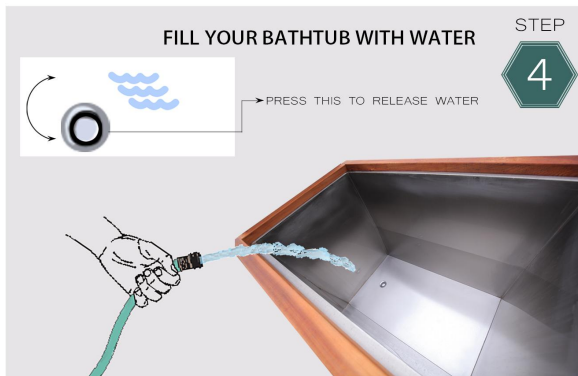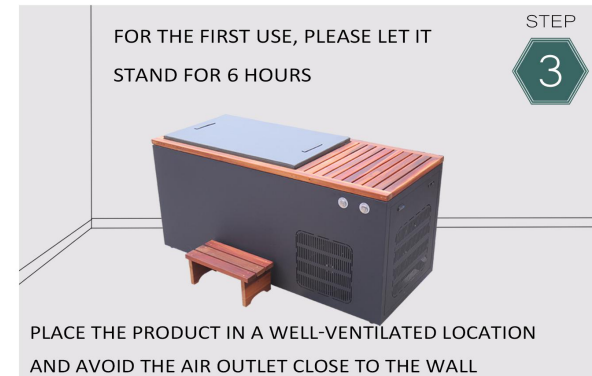


4.Drain water


4.1 Drainage course



 Pull out the water outlet



Unscrew the cap

 

After unscrewing



Push to the center to drain



Pipe insertion



 
Press on adapter

5. Maintenance

5.1 General maintenance


Service and maintenance

Rain proof:




Rain cover can effectively prevent rain from entering the bathtub

 Rain proof:



Wood wax oil for wood conservation, waterproof and antifouling

 Lorem Ipsum:



Rust spray can effectively prevent rust and remove rust

5. Maintenance

5.2 Maintain product usage

The use of wood wax oil



Shake properly before opening the can, dip a small amount of wood wax oil in the wood dealer, apply thinly, and wait for dry


Waterproof



Scratch proof



Antifouling

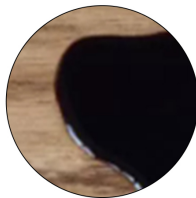

5. Maintenance

5.3 Maintain product usage

The use of rust remover




Open the lid to use, spray after cleaning with a rag

Feature: 1. Rust removal 2. Rust prevention 3. Lubrication 4. Cleaning

5. Maintenance

5.4 Maintain product usage

304 stainless steel liner precautions

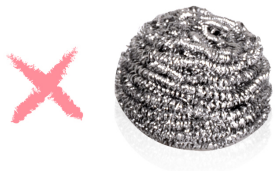

Do not clean with hard objects



It should be wiped with a soft wool chicken



Do not use any cleaning agent or it may cause oxidation of stainless steel



Decontamination, brightness, rust prevention

5. Maintenance

5.5 Filter disassembly process


Filter disassembly process



Remove the filter using
a special wrench



Loading filter paper

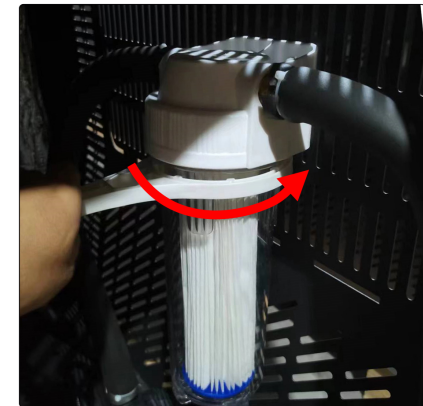

Install the filter using
a special wrench

Replace according to water quality requirements, replace once a week for frequent use, and replace once every two months for infrequent use

5. Maintenance

5.6 Avoid open air

Use environment Do not use in the open air Do not use in rainy days Use in a place with shelter

Rain cover is recommended when not in use




6. Problem


6.1 Common problem solving

Q&A

If the pump does not start, check whether the filter element is filled with water

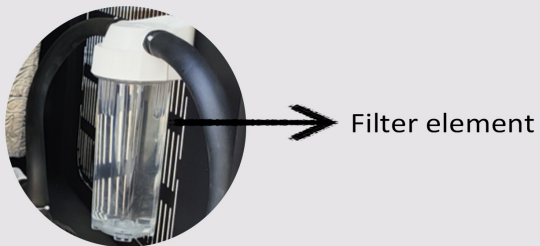


Wait for 6-7 hours if the hot air is not cooled

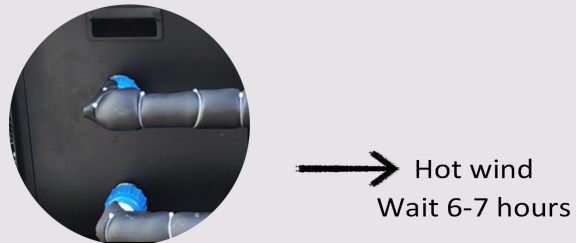


Chiller display is dropping fast. There's a problem with the water pump



The water pump has sound and impurities. The water pump needs to be replaced

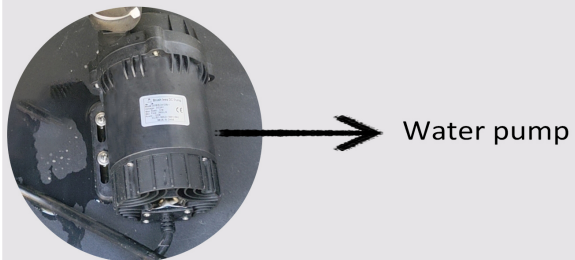

The fan's not blowing. There's a circuit problem

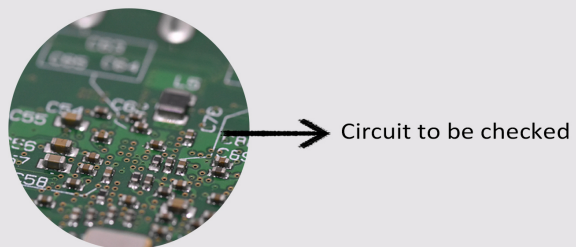

Cold air from the fan causes refrigerant leakage



6. Problem

6.2 CLEAN THE DIRTY SCREEN IN TIME WASH ONCE EVERY 3 MONTHS OR SO

