

Awning Armrest Replacement Steps



STEP1: get out the armrest



STEP2: one part connect with the bracket, one part connect with the front tube



STEP3: take out the screws and spacers



STEP4: connect it with the bracket which is on the square tube



STEP5: connected



STEP6: use wrench to tight the screws and then is ok




STEP7: get out the arm-bar link and take out the screw




STEP8: connect the arm-bar link to front tube



STEP9: put the arm-bar link into the front tube

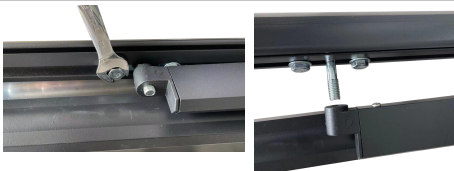

STEP10: use wrench to tight the screws and then connect it with armrest armrest

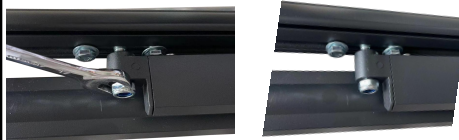

STEP11: use wrench to tight the screws



STEP12: two part have been installed